





# Dimensioning instruction for wireless electric roller blind

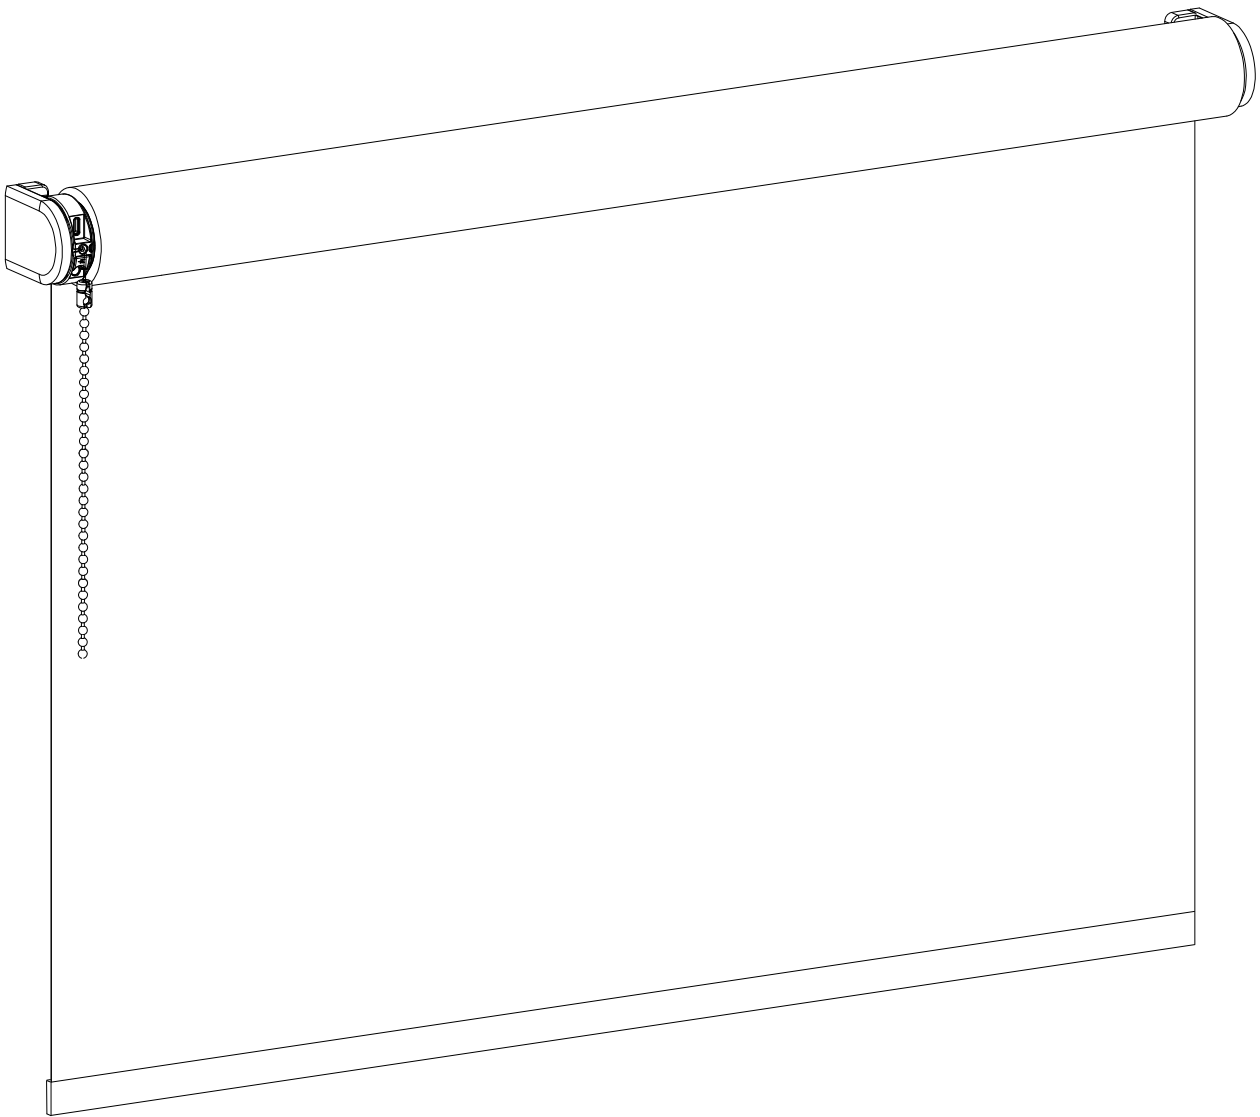

Choose a window

Measure

Install

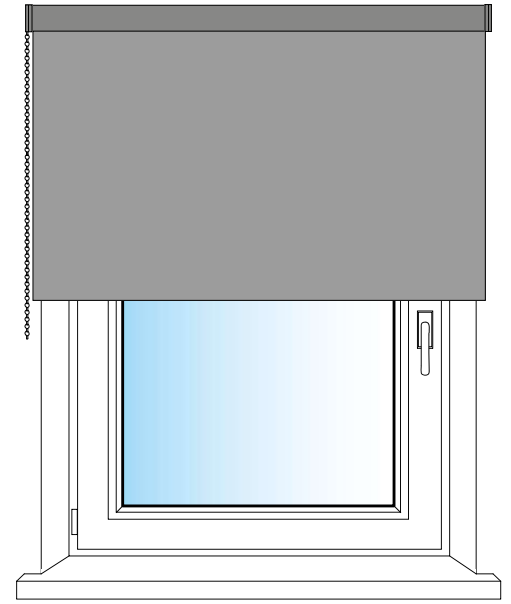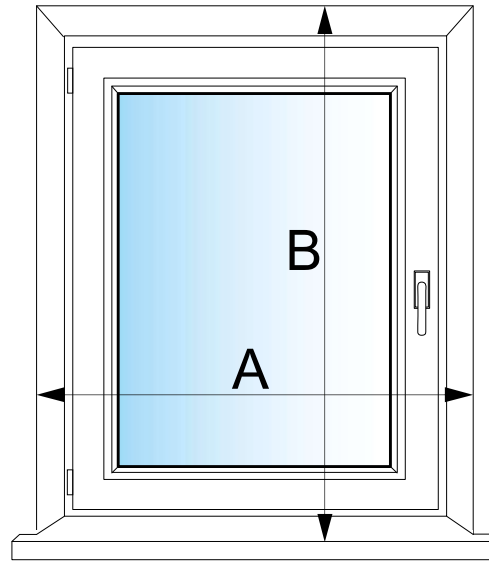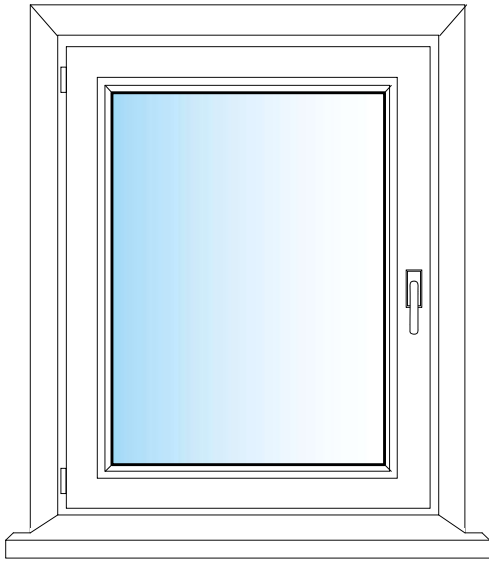


Dimensions are given in millimeters. You specify the width of the fabric and the height of the blind.



The supplied roller blind will be 46mm wider, as this is the width of the control mechanism and the hooks.

## Mounting on the wall

Figure 1.

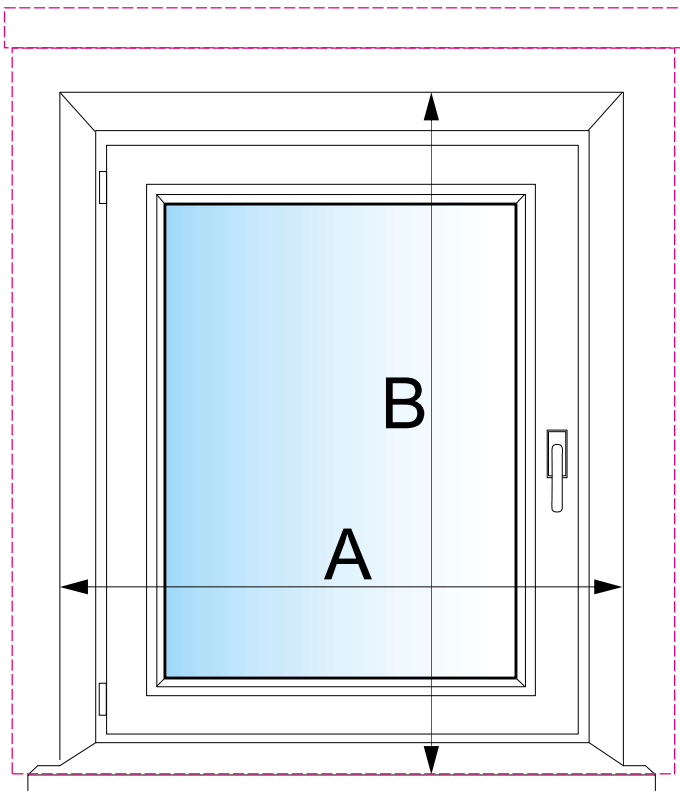

Measure the width and height of the window recess, Figure 1.

When specifying the desired width, add the allowance of fabric overlapping the wall on the right and left sides as per personal preference ( e.g. 100mm. ).


**Example: A=1250mm**  
**1250 + 100 = 1350 mm.**

When specifying the desired height, add an allowance depending on the height at which you wish to install the blind.

**Example: B = 1500mm**  
**1500 + 200 = 1700mm**


# Mounting on the window frame

Fig.1

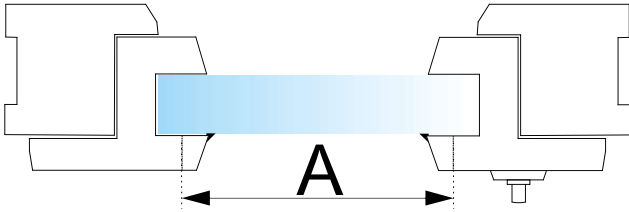


When measuring the width, check the distance between the outer edges of the frame around the glass, fig. 1,2.

Fig.3

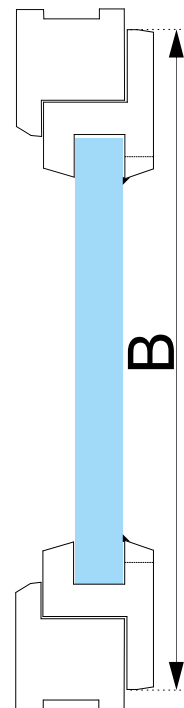

When measuring the height, check the height of the window sash. Fig. 3

Fig.2

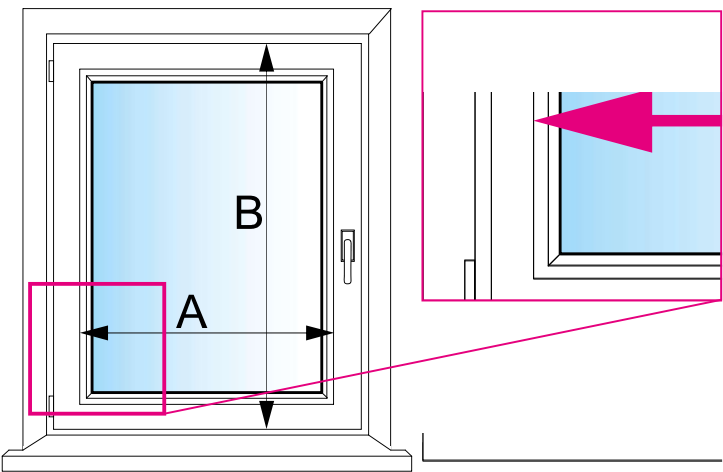

When specifying the desired dimensions, enter the values of your measurements in the configurator :

Width = A  
Height = B