




Measuring instruction for roman blinds wall or ceiling mounted

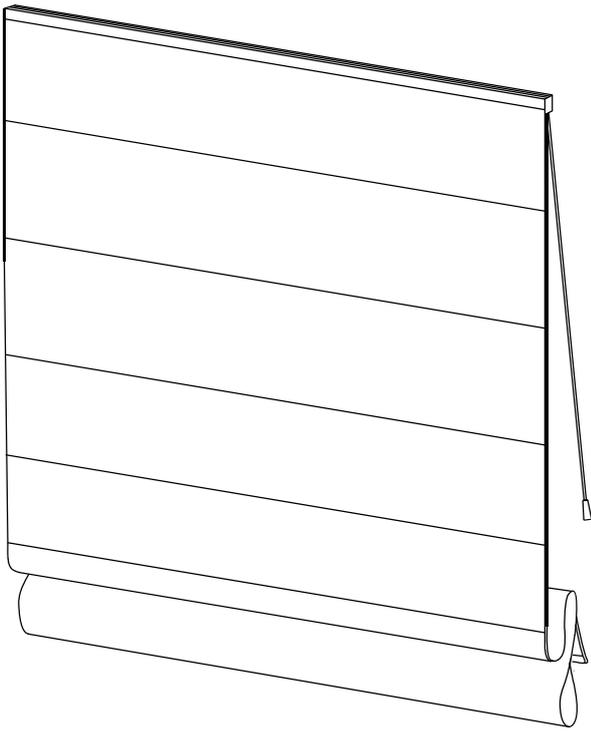

String mechanism

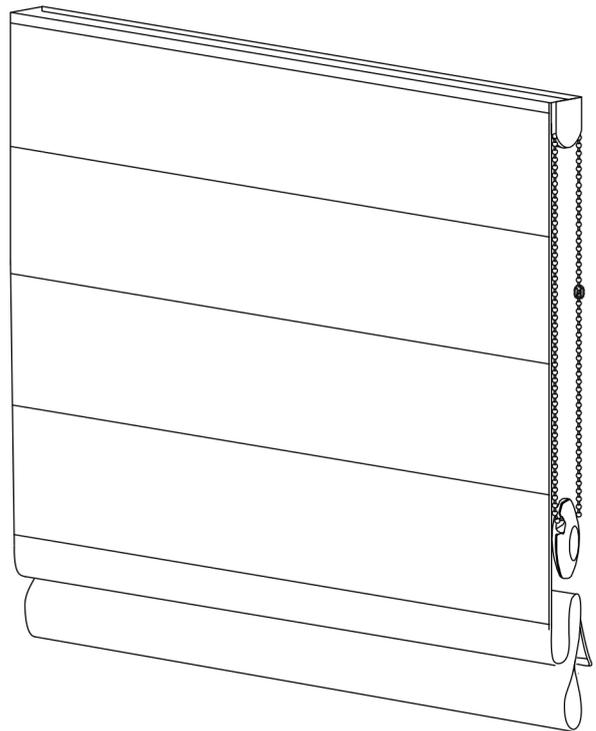


Beaded chain mechanism

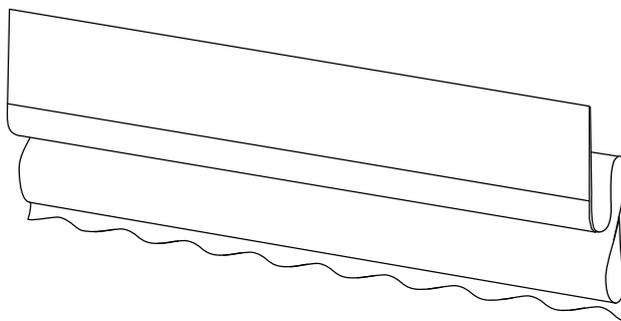


Frill option


Choose a window

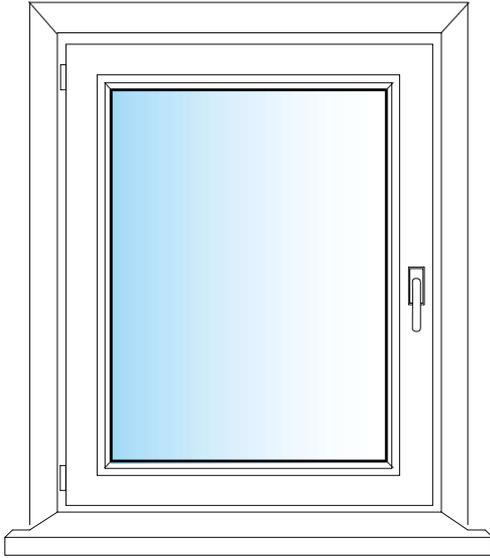

Measure

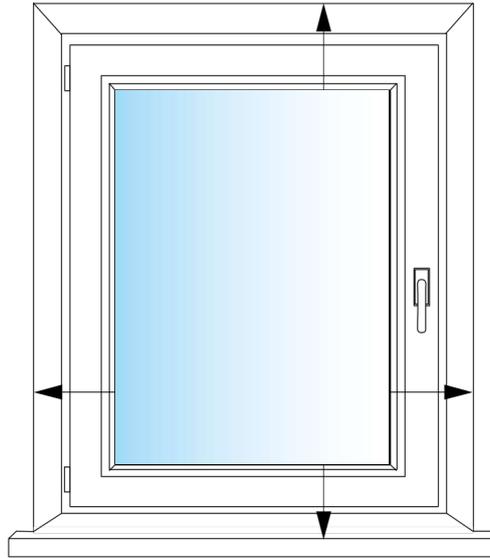

Install

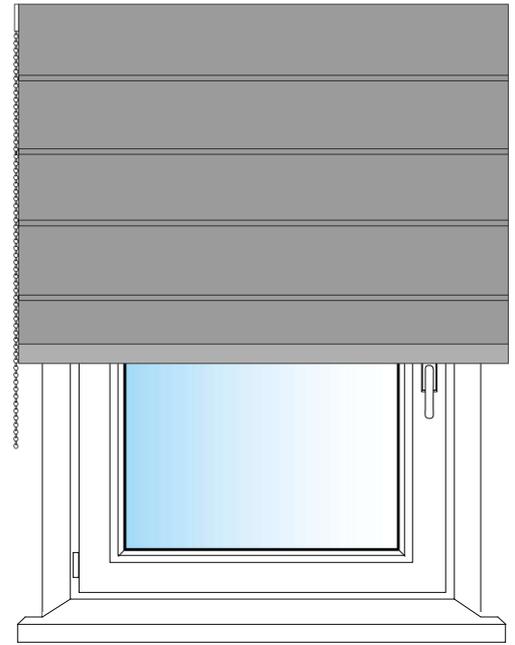

Measurements are given in centimetres (cm).

You specify the width and height of the fabric.




Keep in mind that the folded blind takes about 20 to 30 cm.

The roller blind with frill will have the package about 18 cm higher (the entire frill is 35 cm high) when rolled up, the package covers about half of the frill.

Horizontal stitching is spaced about 20 to 25 cm.

Fig. 1

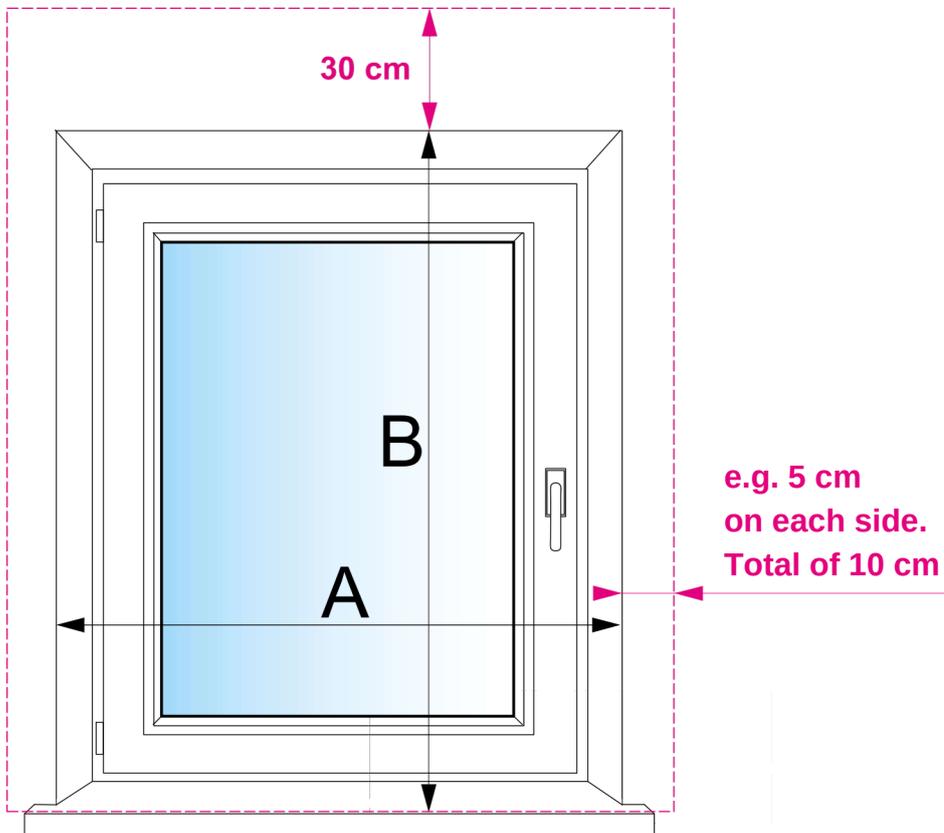

Measure the width and height of window recess Fig. 1

Enter the desired width, add the surplus of a fabric overlapping the wall on the right and left at your preference.

(e.g. 10 cm)

Example: A = 125 cm

125 + 10 = 135 cm

Specifying the desired height, add surplus depending on the height at which you want to mount the blind (e.g. 30 cm).

Keep in mind that the folds of the blind are around 30 cm.

Example: B = 150 cm

150 + 30 = 180 cm