




## Measuring instruction for Day and Night roller blind in aluminum cassette , mounted on window frame.

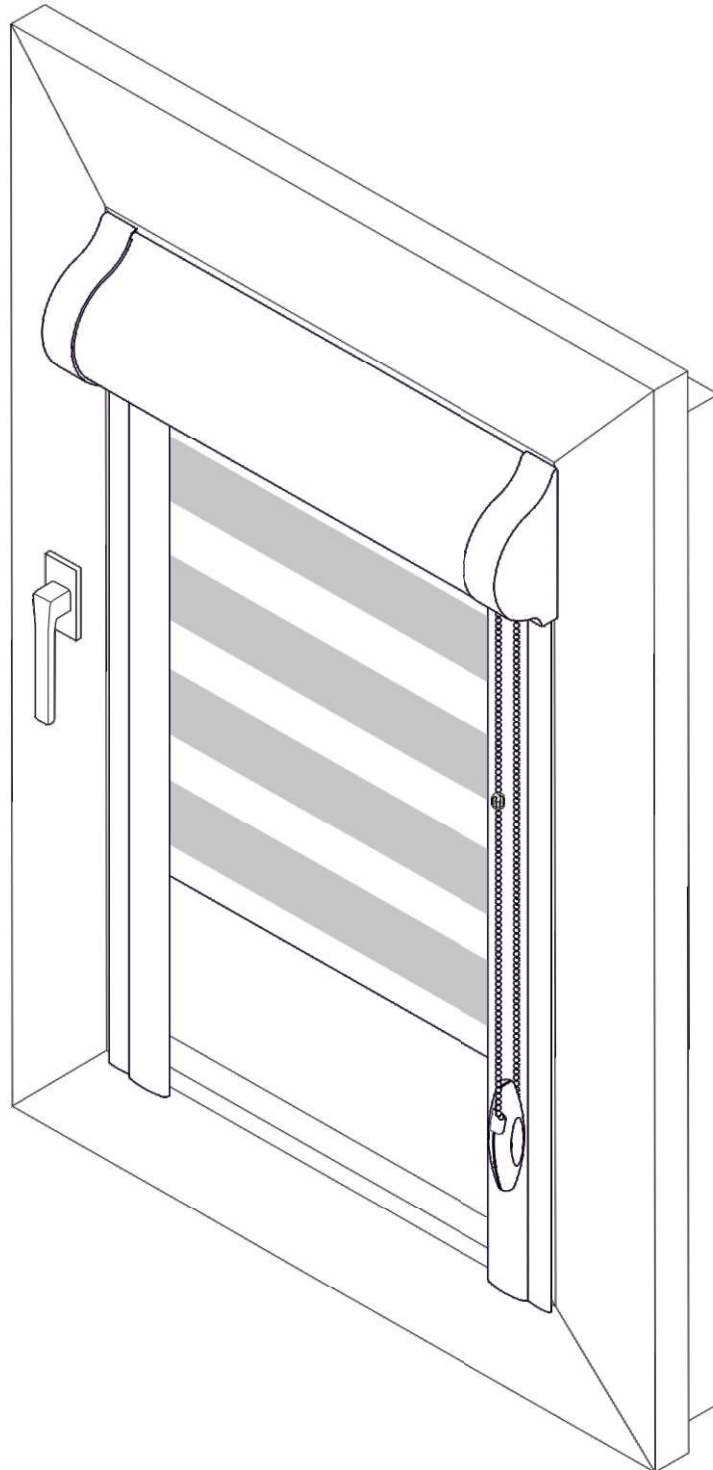


Choose window

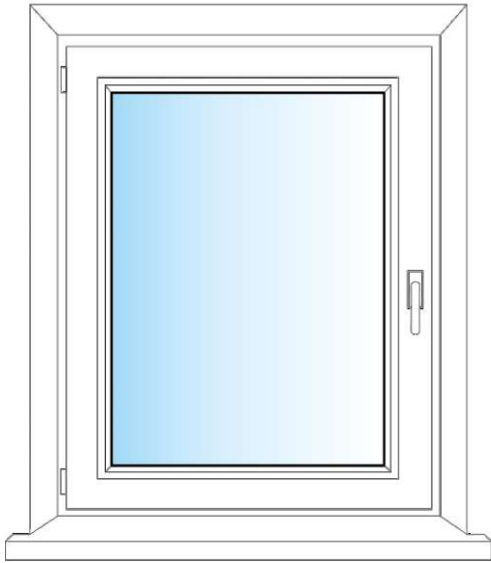

Measure

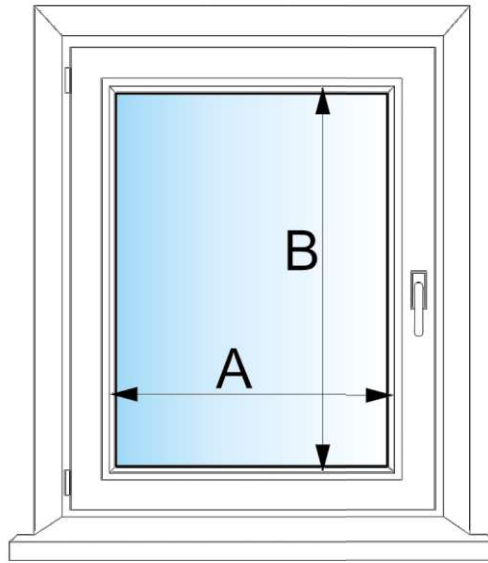


Install

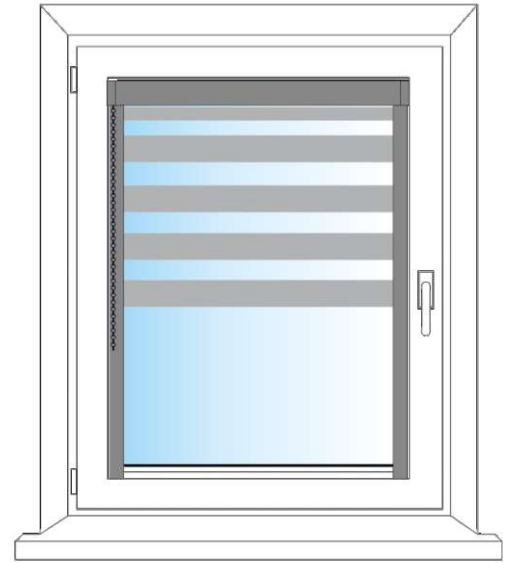


The dimensions are provided in millimeters (mm).

Enter the width and height of the glass measured at its widest point. The fabric of the blind will be 15mm narrower and the resulting gap will be covered by aesthetic side guides.

 Due to the fact that the aluminium cassette cannot be installed in all types of window (window strips) the drawings below explain how to measure and whether it is possible to install such a roller blind at all. Important! First check the shape of the window strip.


Remember that we offer other blinds on our website that you can install on your window.

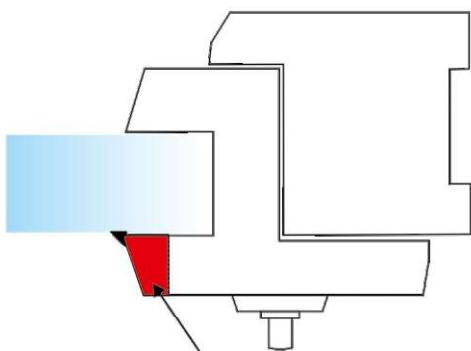

Window strip with standard slant.




**OK. Installation possible**

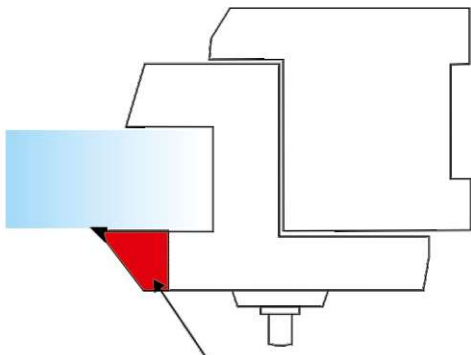


Window strip with a large slant

**V** OK. Installation possible

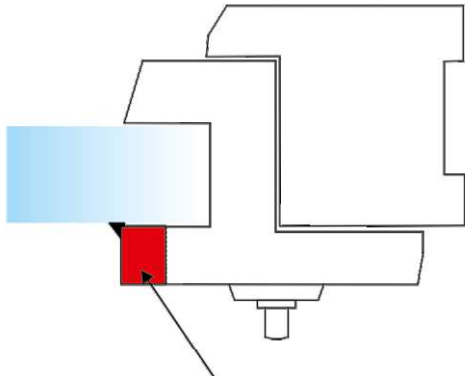


Window strip at right angle

**V** OK. Installation possible

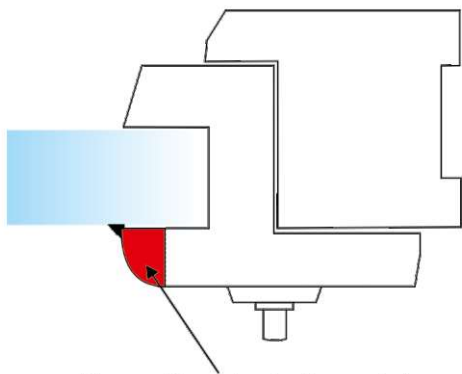

Round/oval window strip


**X** Sorry. Installation is impossible. Change the type of roller blinds

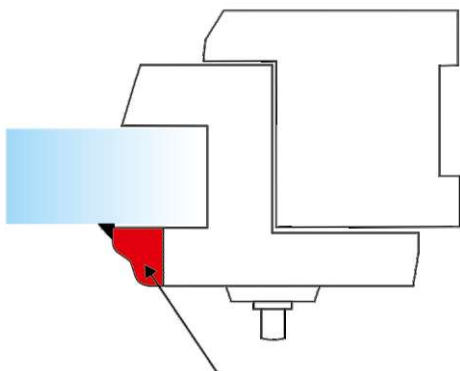


Irregularly shaped window strip

**X** Sorry. Installation is impossible. Change the type of roller blinds


Pic. 1

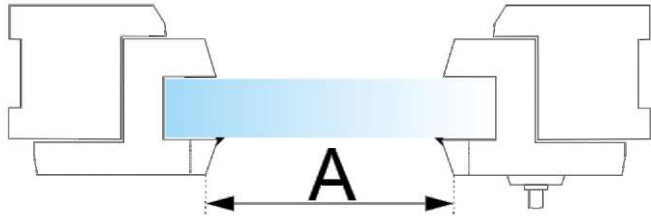

Pic. 2

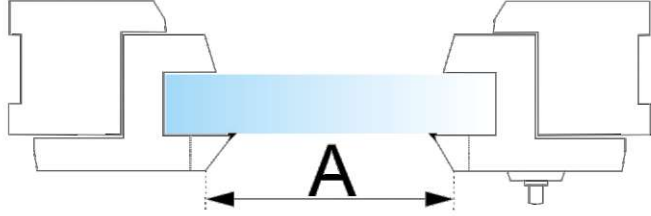


Pic. 3

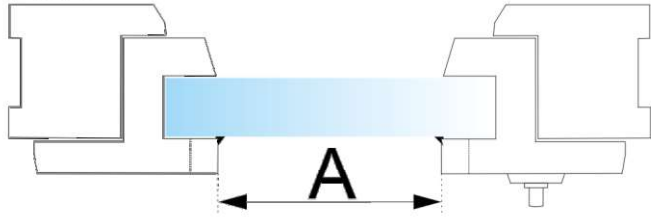


When measuring the width check the dimension of the glass pane measured at its widest point. Pic. 1,2,3 depending on the type of window you have.

When measuring the height check the dimension of the glass pane measured in the same way as you measured the width. Pic. 4,5,6 depending on the type of window you have.


Pic. 4

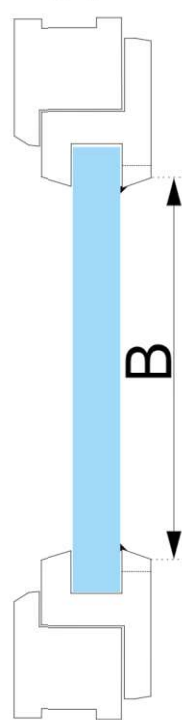


Pic. 5

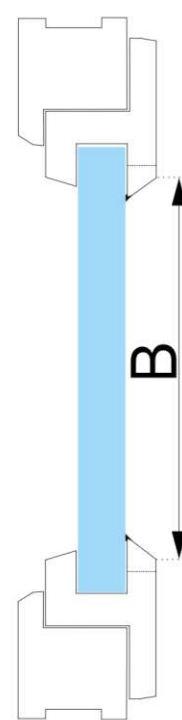

Pic. 6

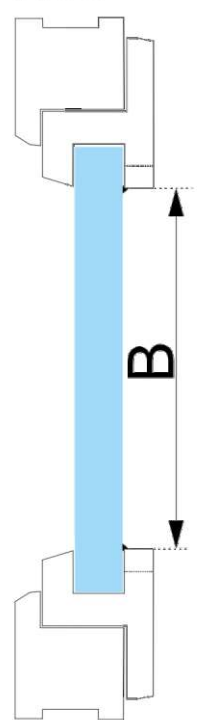

Pic. 7

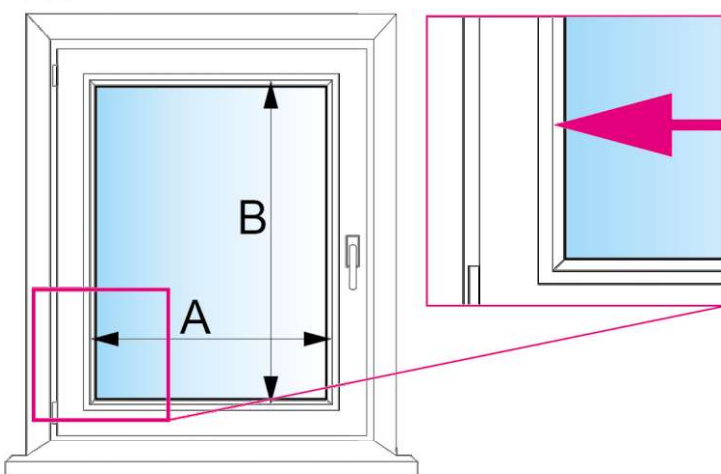

When entering the desired dimensions, enter the values of your measurements in the configurator.

**Width = A**

**Height = B**