





## **Measurement instructions for Day and Night roller blinds in a PVC cassette mounted on a window frame**

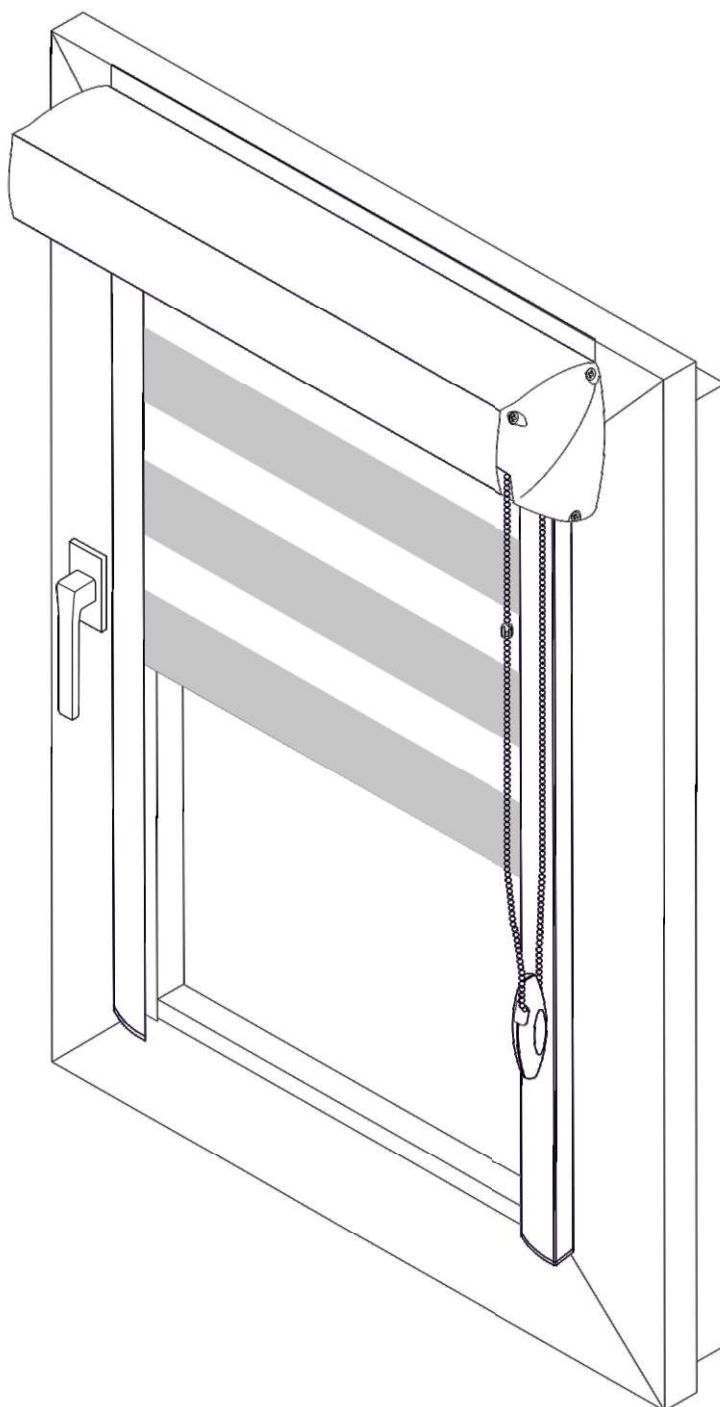

Select the window

Take the measurement

Mount the blind

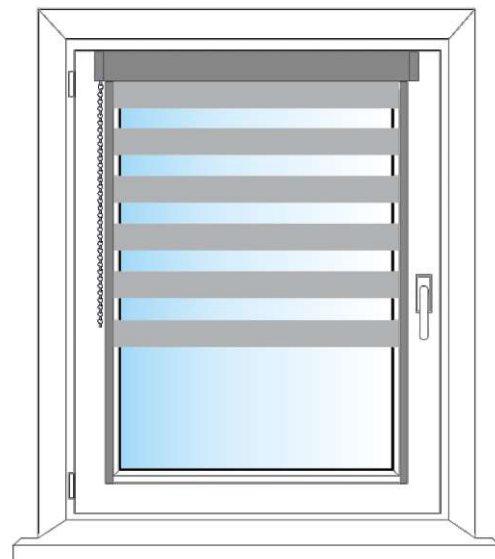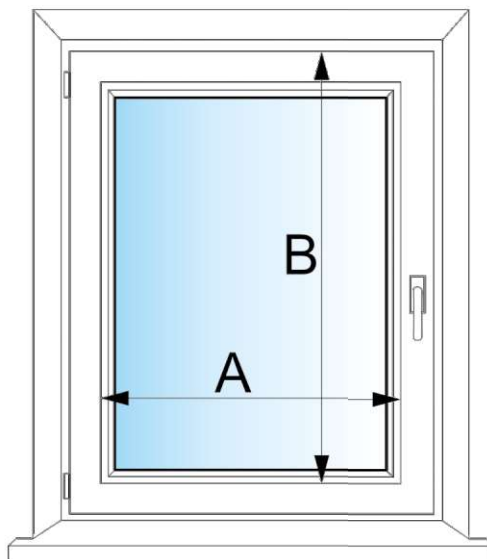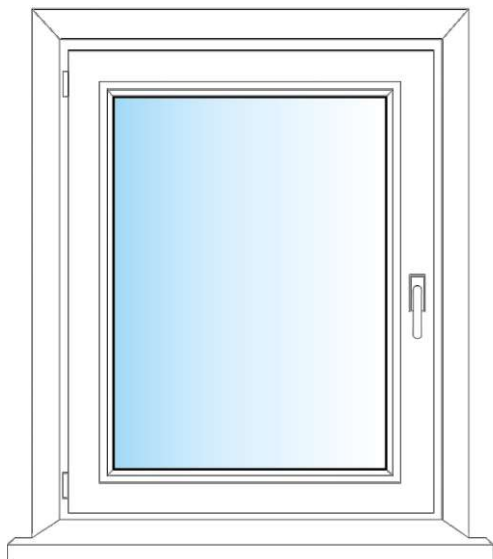

Dimensions are provided in millimetres (mm).

**! Provide the width of the blind with side guides and the height of the PVC cassette with the side guides. The fabric of the blind will be 10 mm narrower, therefore, it moves smoothly inside the side guides.**

Fig. 1

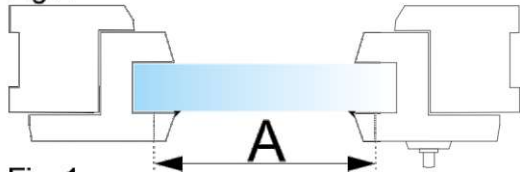


Fig. 1a


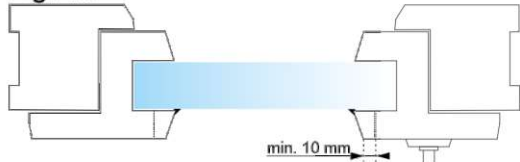



Fig. 2

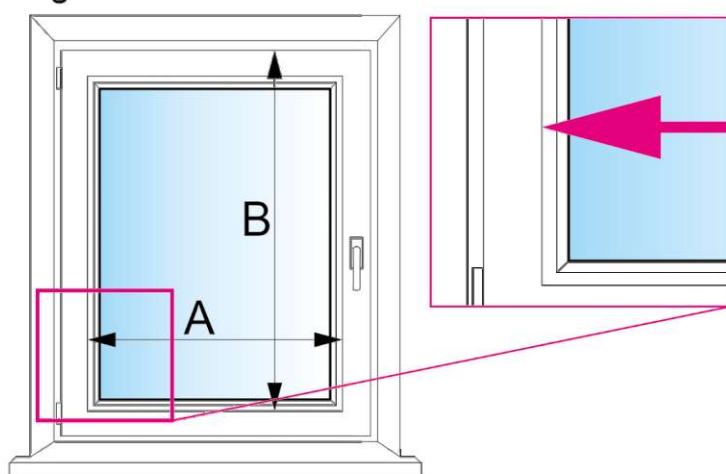

When measuring the width, check the distance between the outer edges of the glazing bead. Make sure the strip is 10 mm. Fig.1, 1a, 2.

When measuring the height, measure the dimension between the upper edge of the window sash and the lower edge of the glazing bead. Fig. 3

Fig. 3

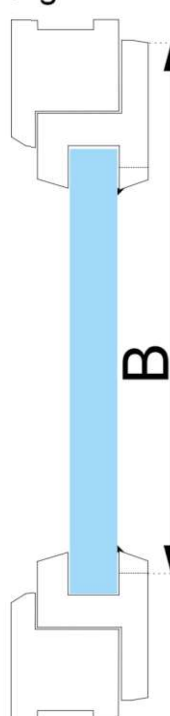

If the window at the top has a ventilation mechanism, the height is measured as if the lower edge of the vent is the beginning of the height of the window. If the choice of fabric is Day and Night, the height of the second window sash is measured in the same way as a window with a vent.

Providing the desired dimensions, enter the values of your measurements in the configurator:

**Width = A**

**Height = B**