




Measurement instructions for pleated mosquito net for
terrace windows.
Mounted on the window frame.

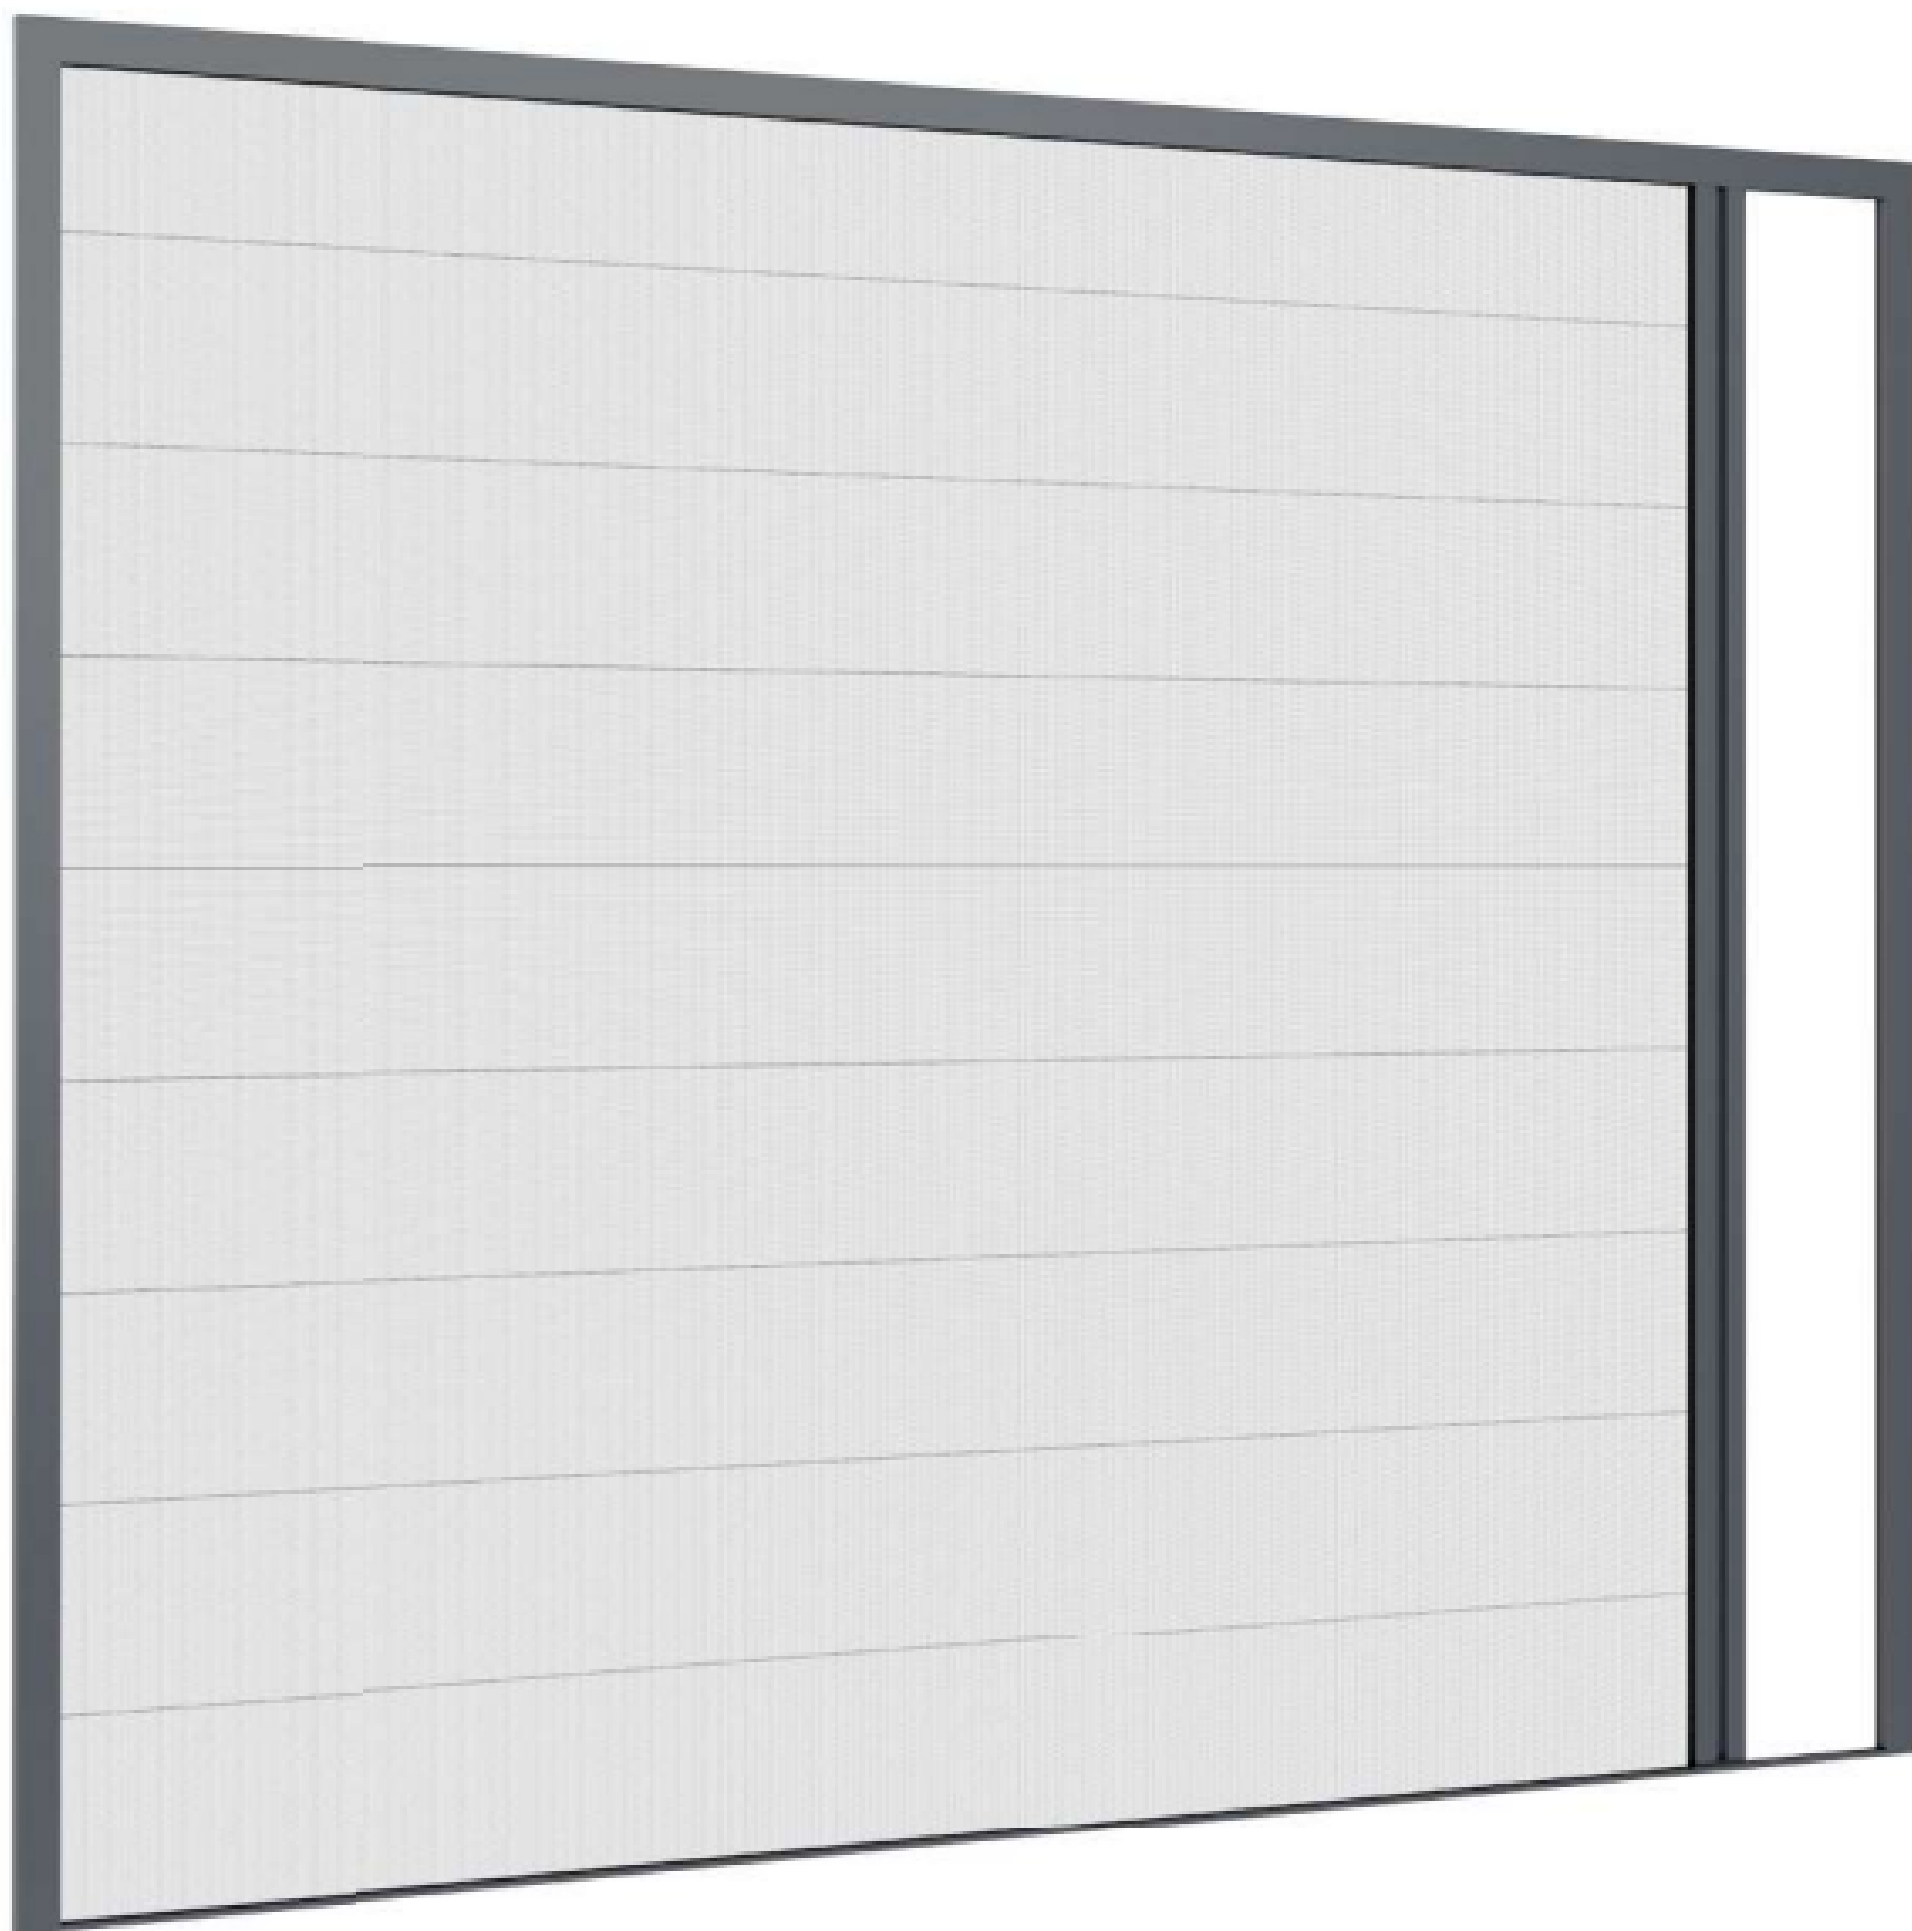

Terrace window before installation.

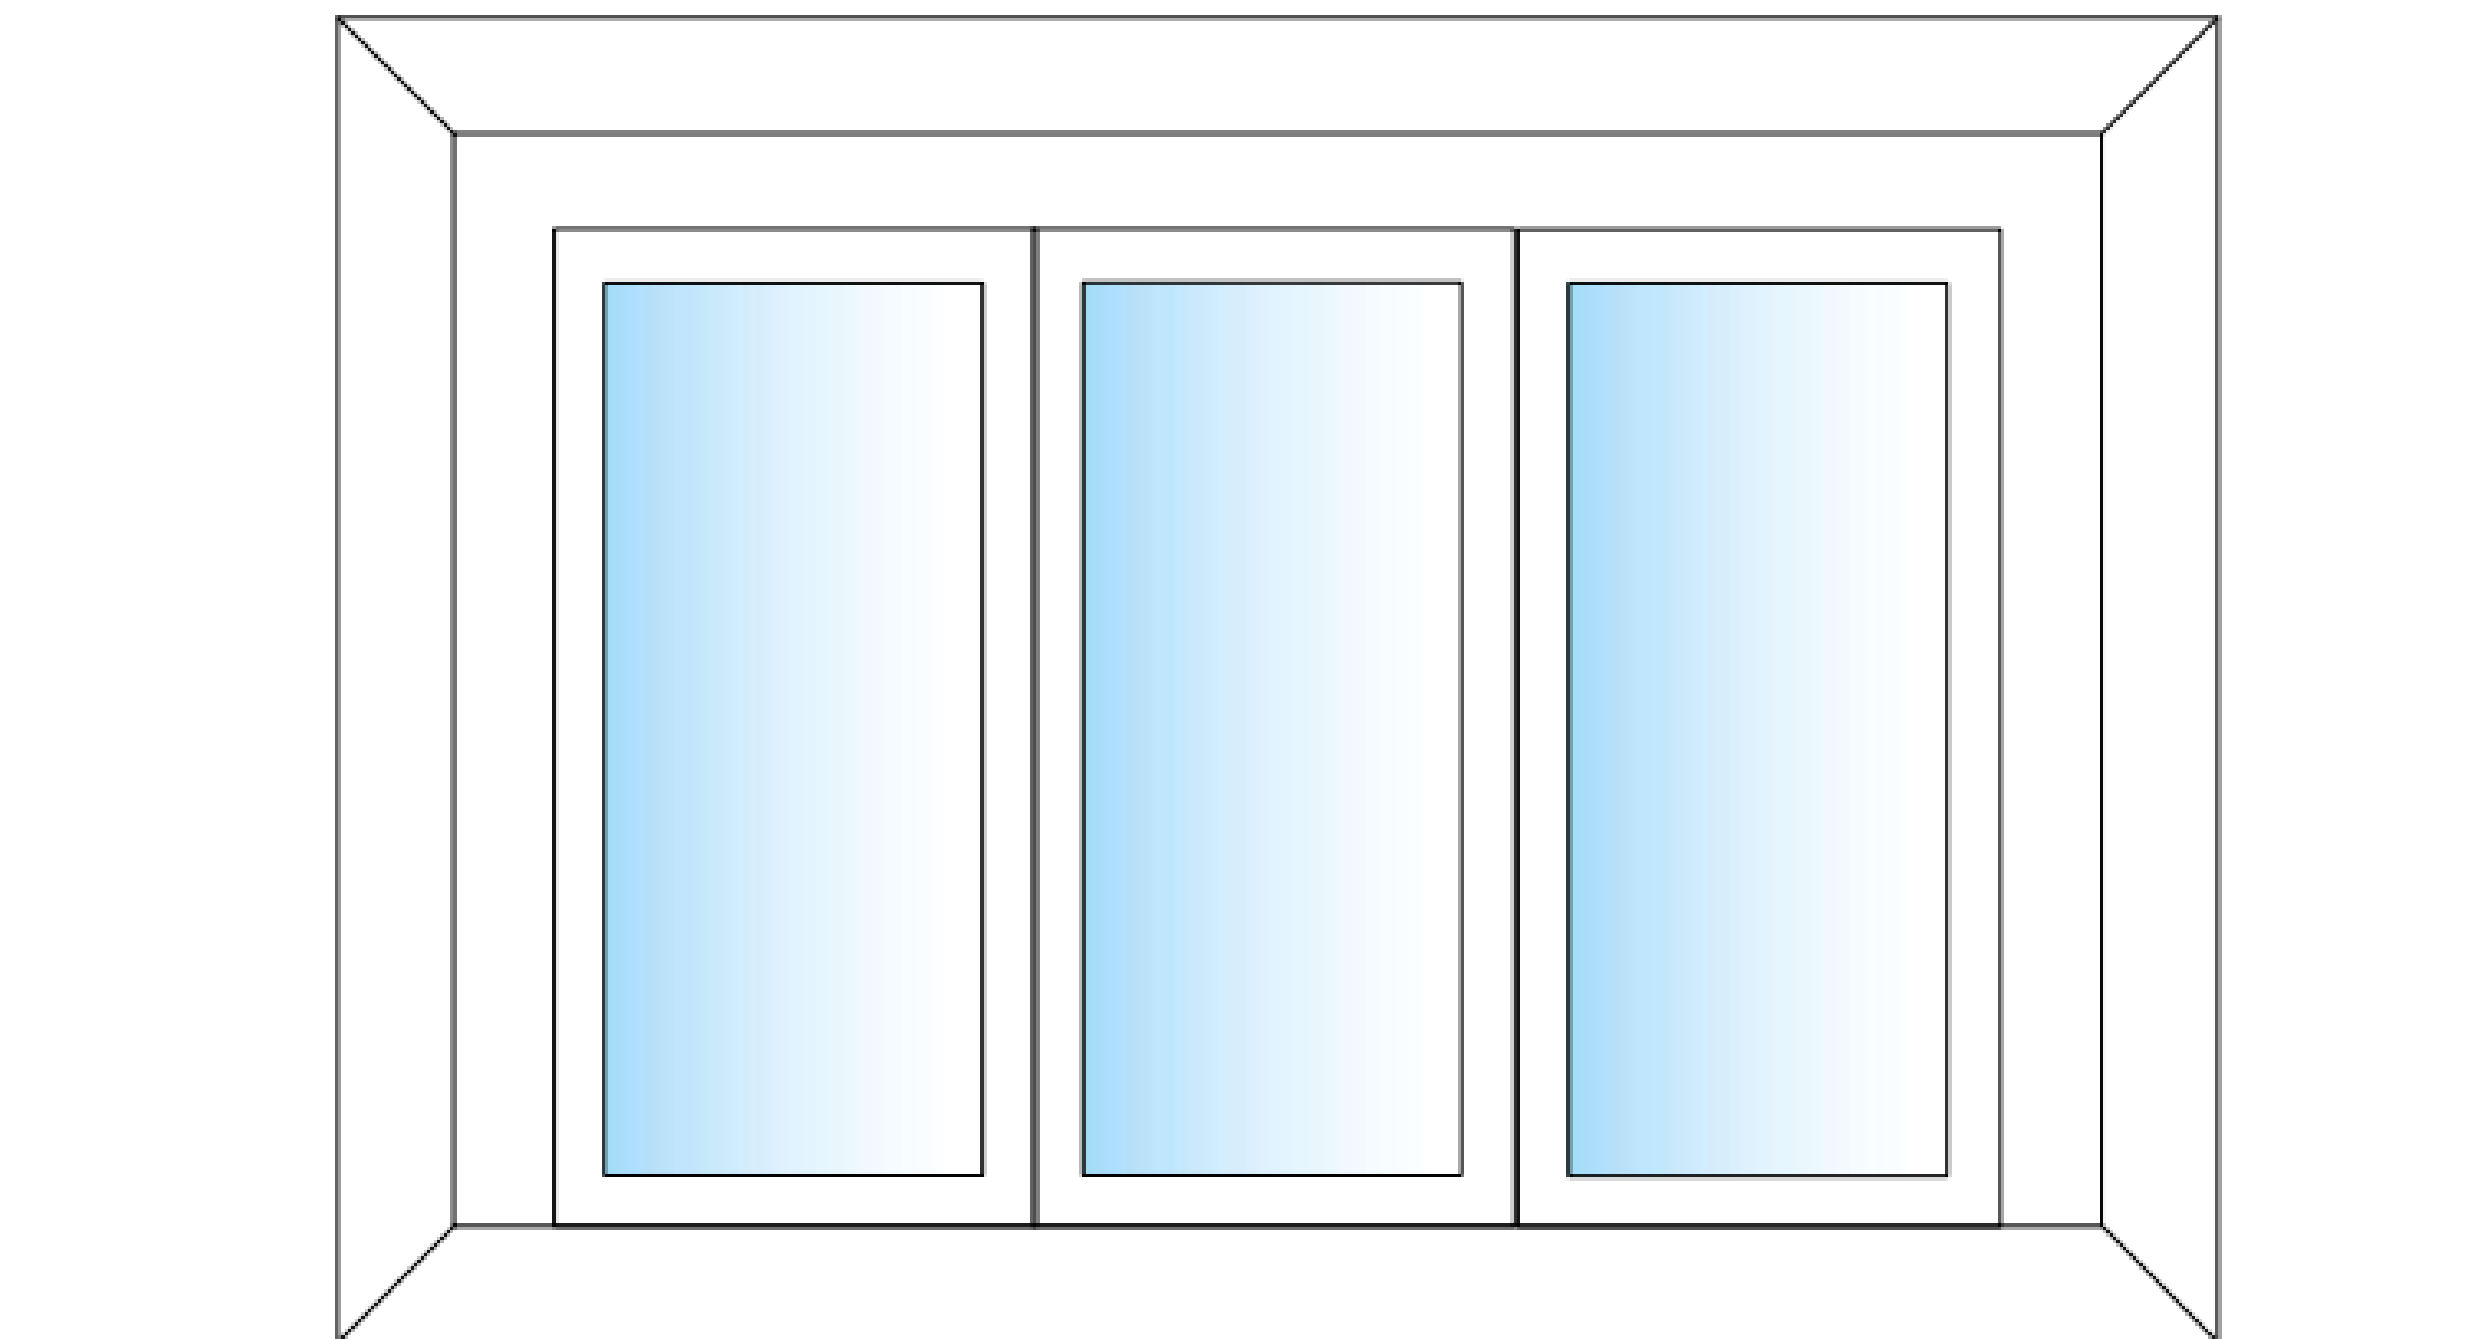

Terrace window after installing a mosquito net on the window frame.

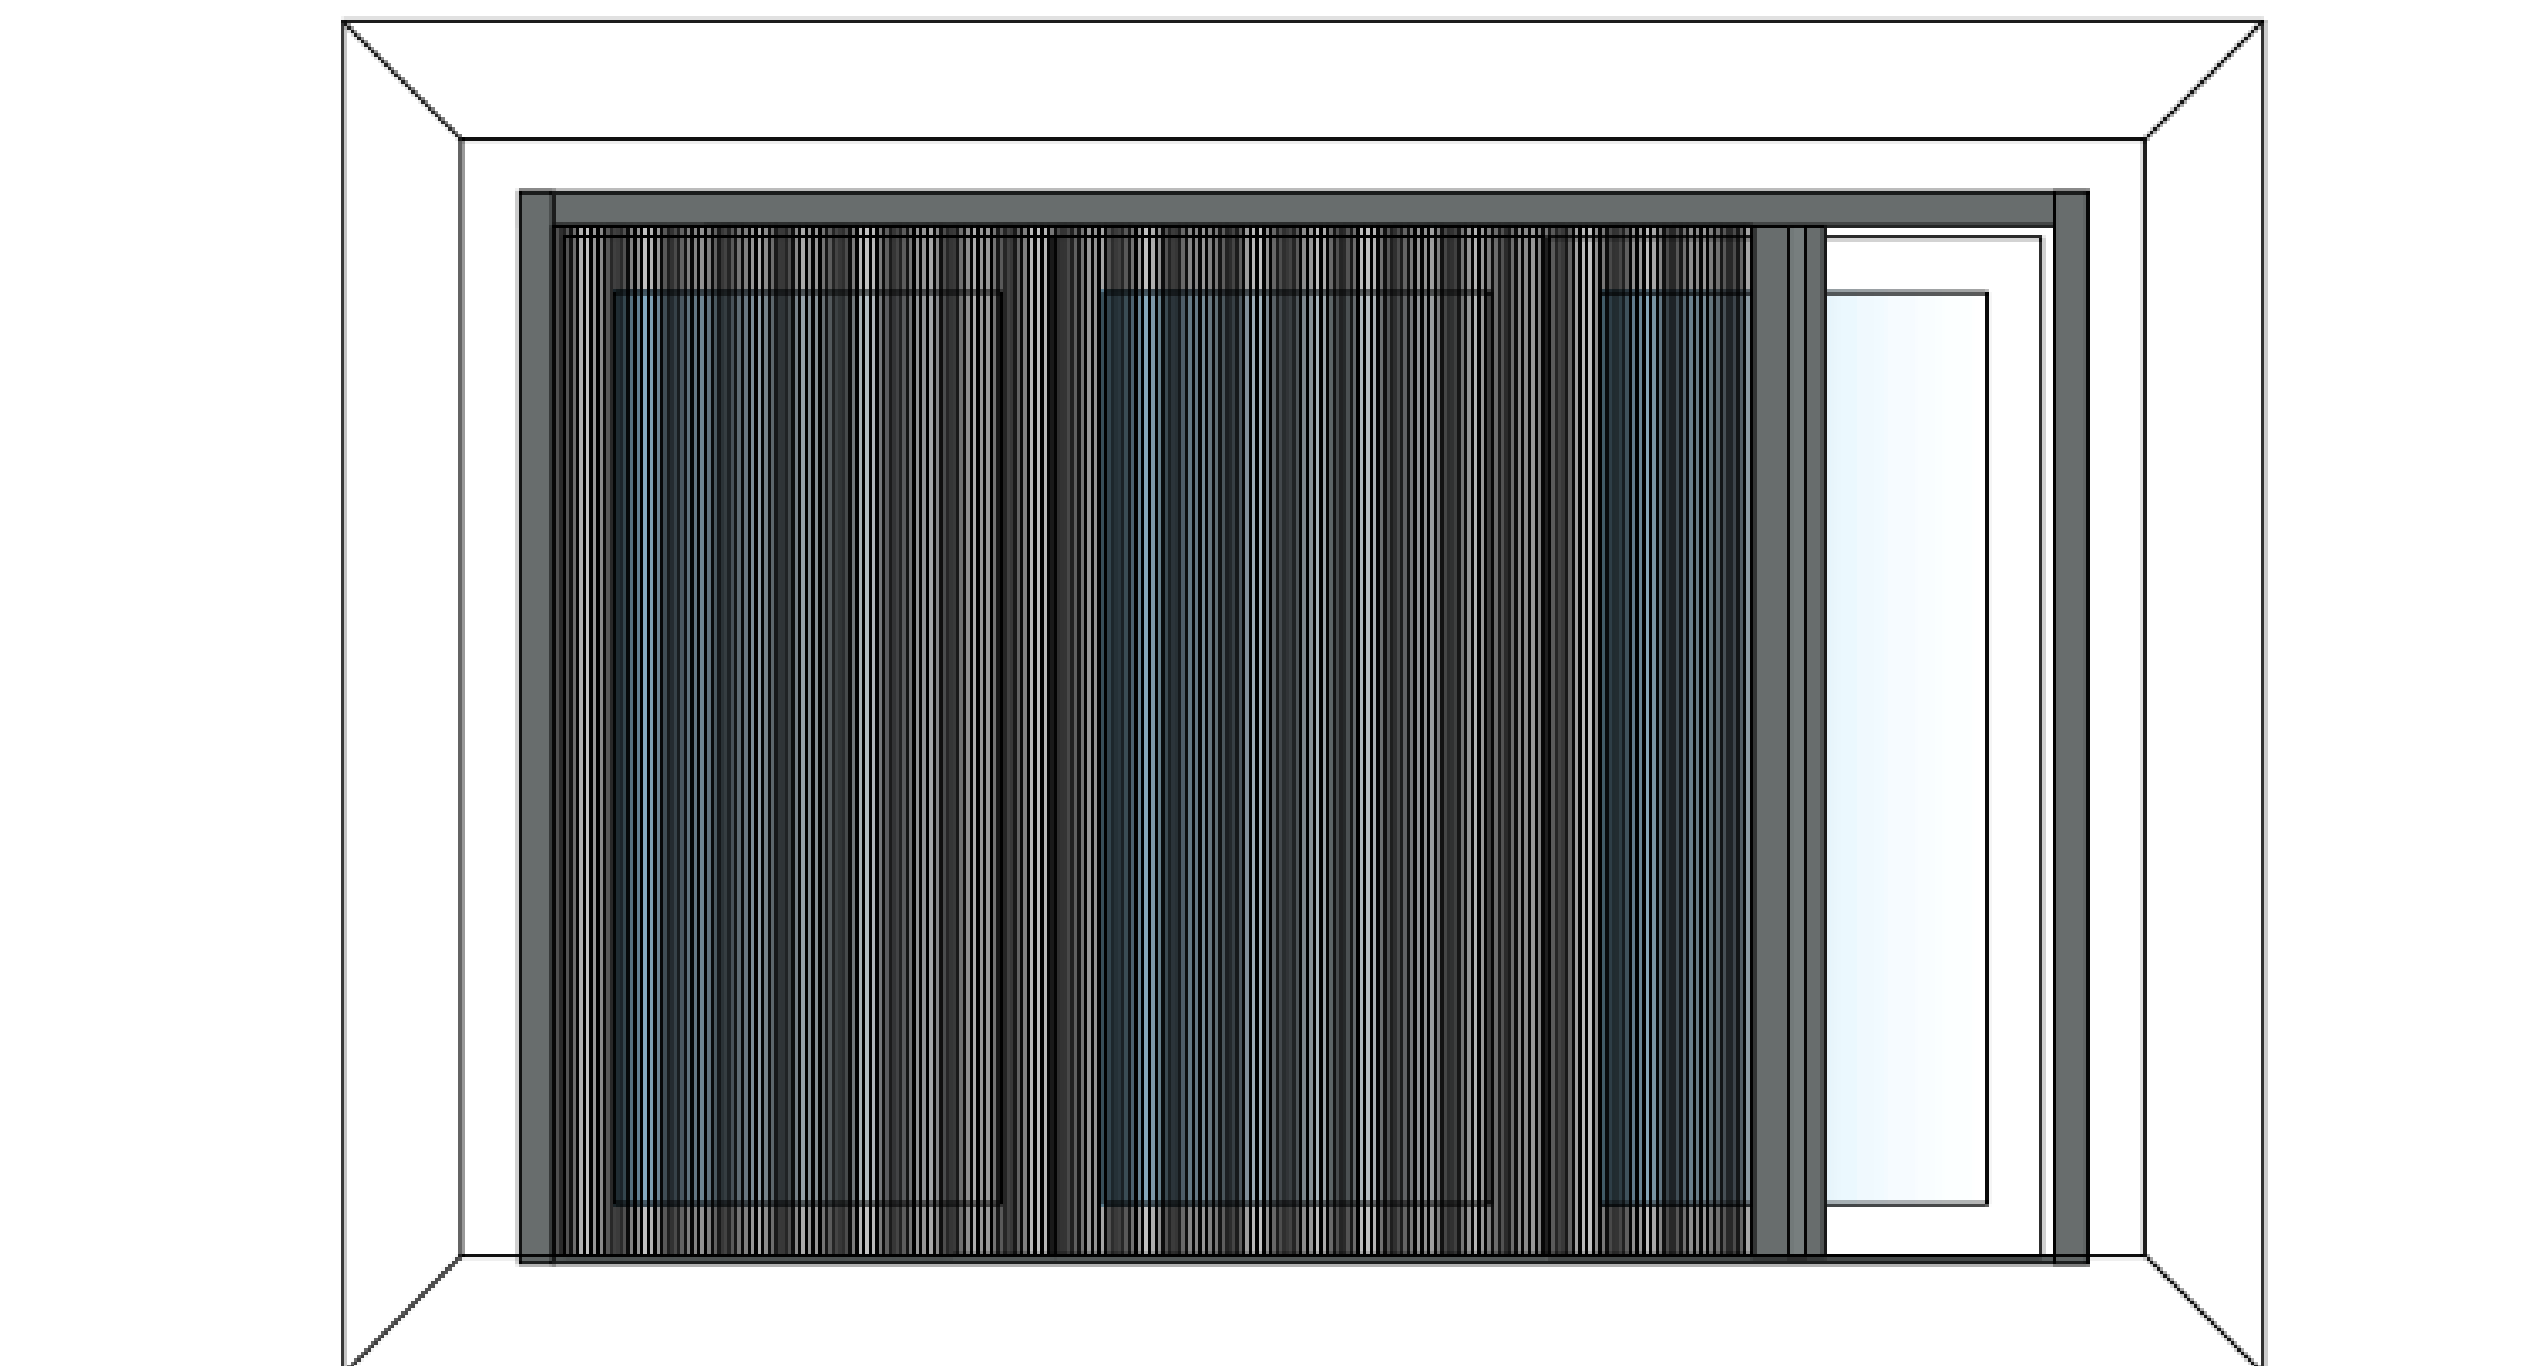


Dimensions are given in millimeters (mm).



The mosquito frame has 45mm. This should be taken during the measurement. Order width is the width of the outside mosquito net including the frame. Order height is the height of the entire mosquito including the frame at the top and the bottom profile.

Fig.1.

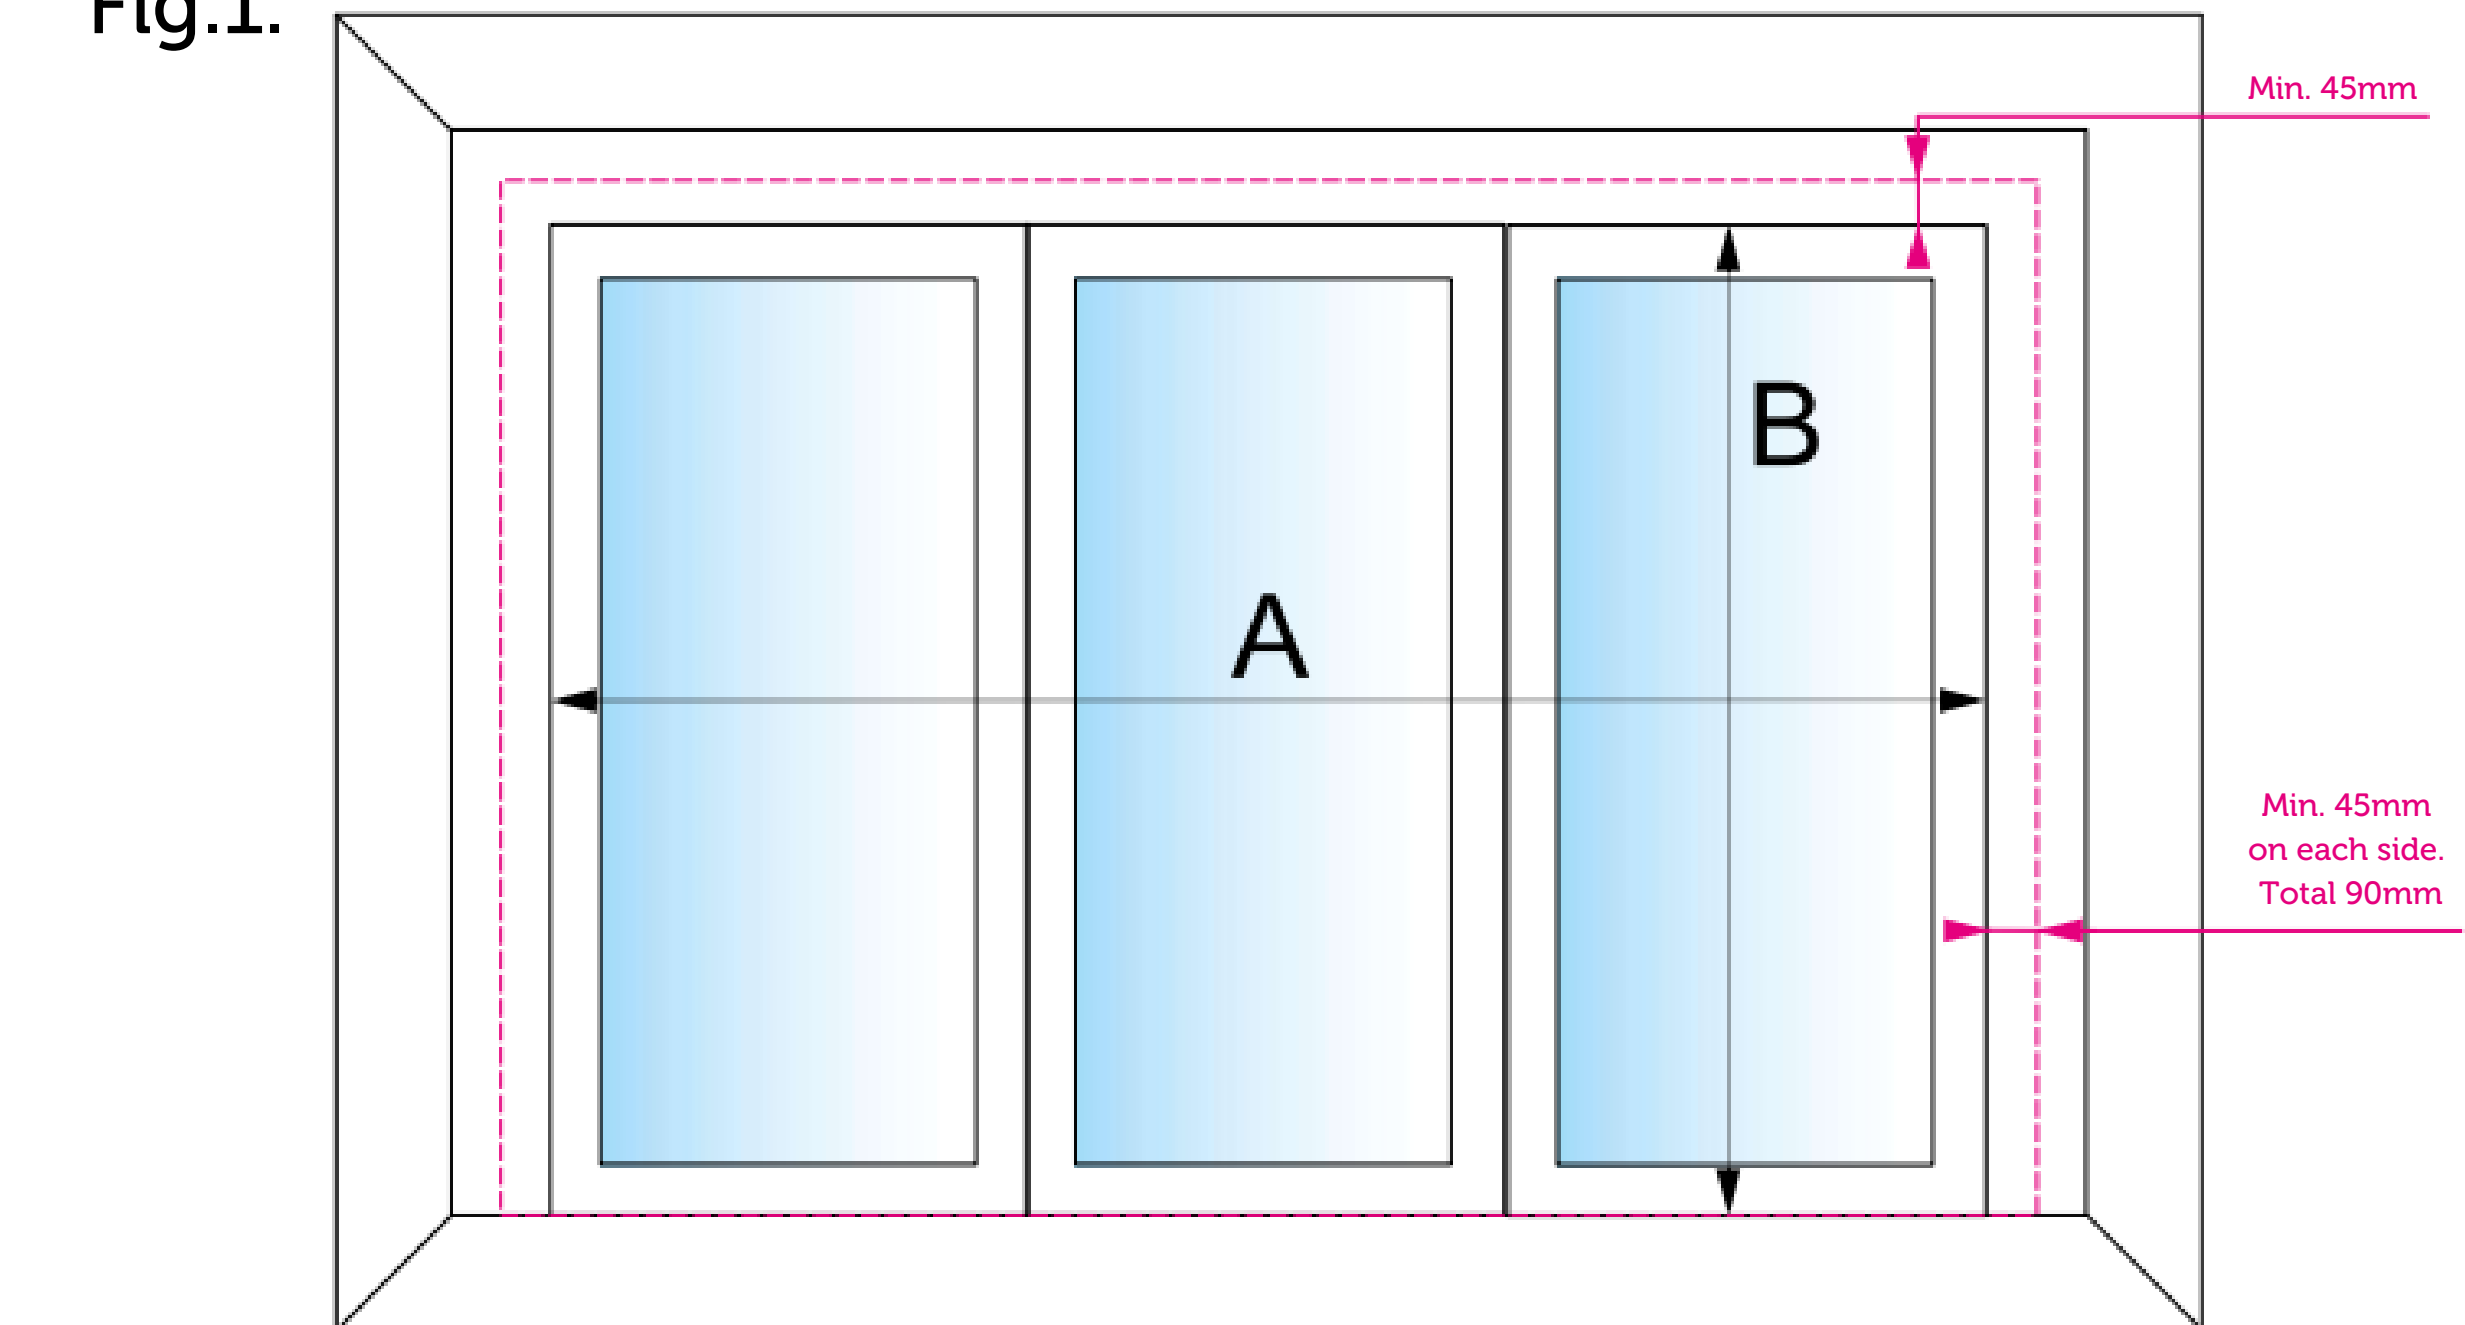

Important notice!

Make sure you have enough space to mount the mosquito net frame. You need 45mm on each side.

Check if there are no handles, window parts sticking out of the window frame of your window. These can prevent movement or installation.

Measure the width and height and the height of the inner edges of the window frame.

Fig. 1.

Given the desired width, add the width of the mosquito frame 45mm on the left and 45mm on the right.

Total 90mm.


Example: A = 1800mm
 $1800 + 90 = 1890\text{mm.}$

Given the desired height, add the height of the frame at the top.


The frame is **45mm.**

Example: B = 2000mm
 $2000 + 45 = 1890\text{mm.}$


Measurement instructions for pleated mosquito net for
terrace windows.
Mounting to wall (masonry).

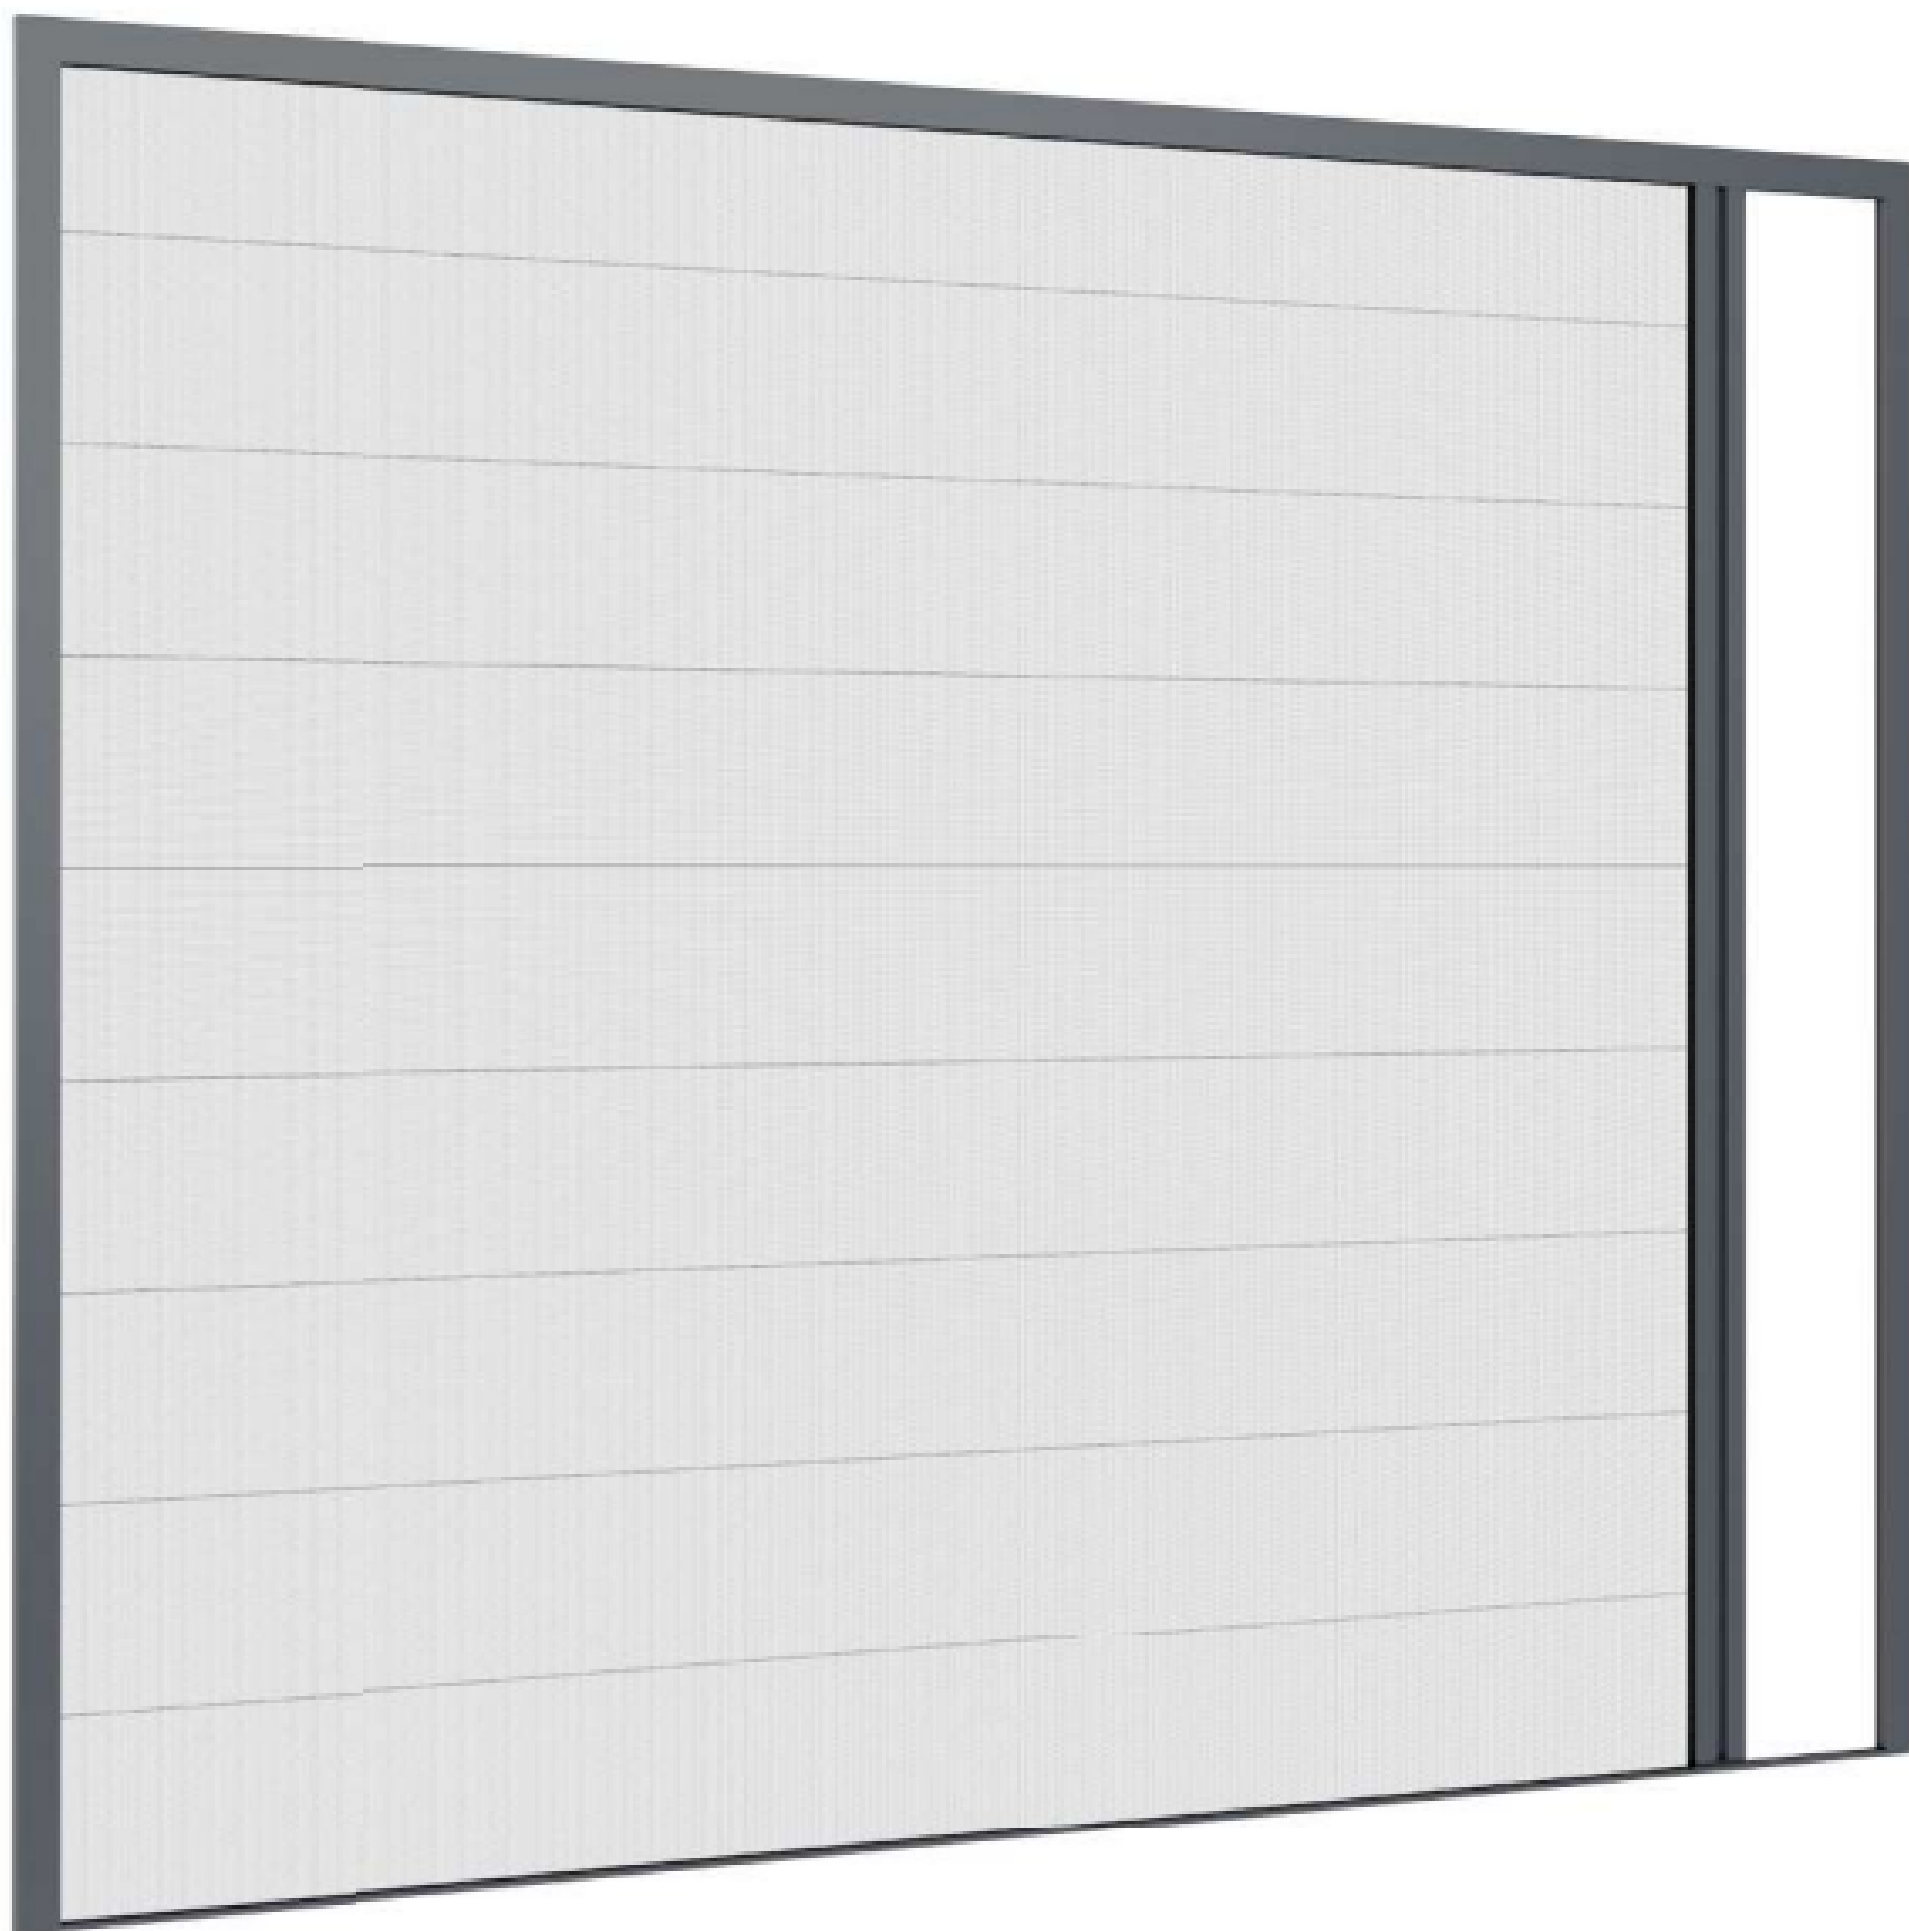

Terrace window before installation.

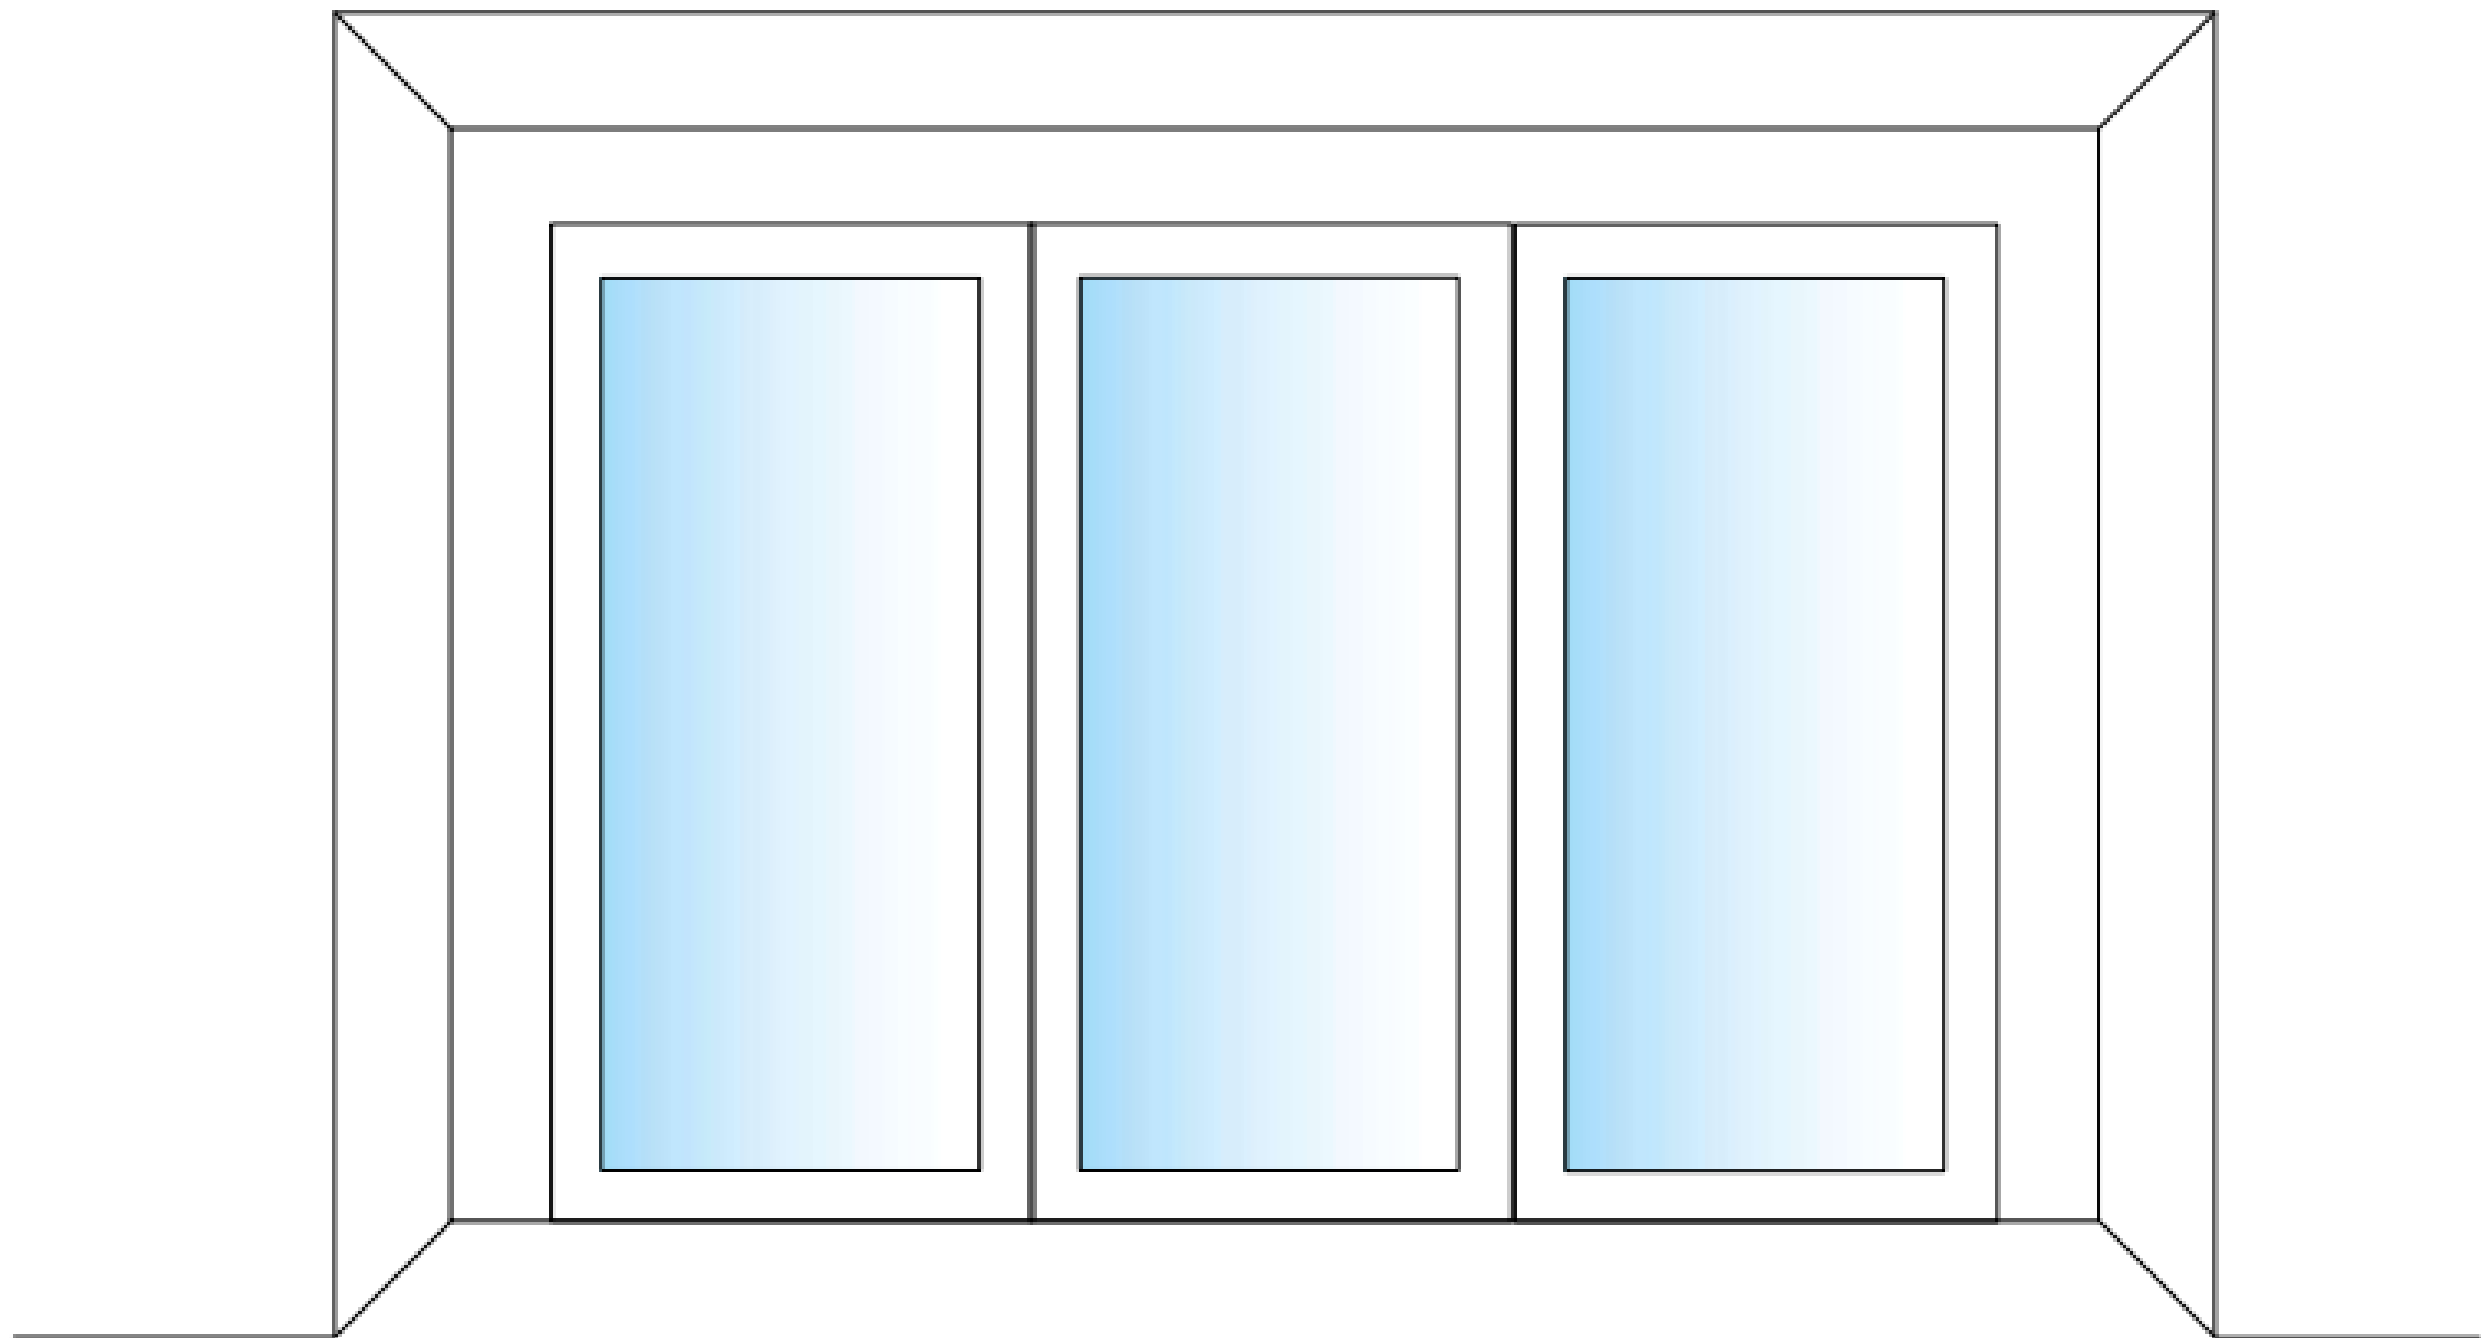

Terrace window after installation of mosquito net to the wall.

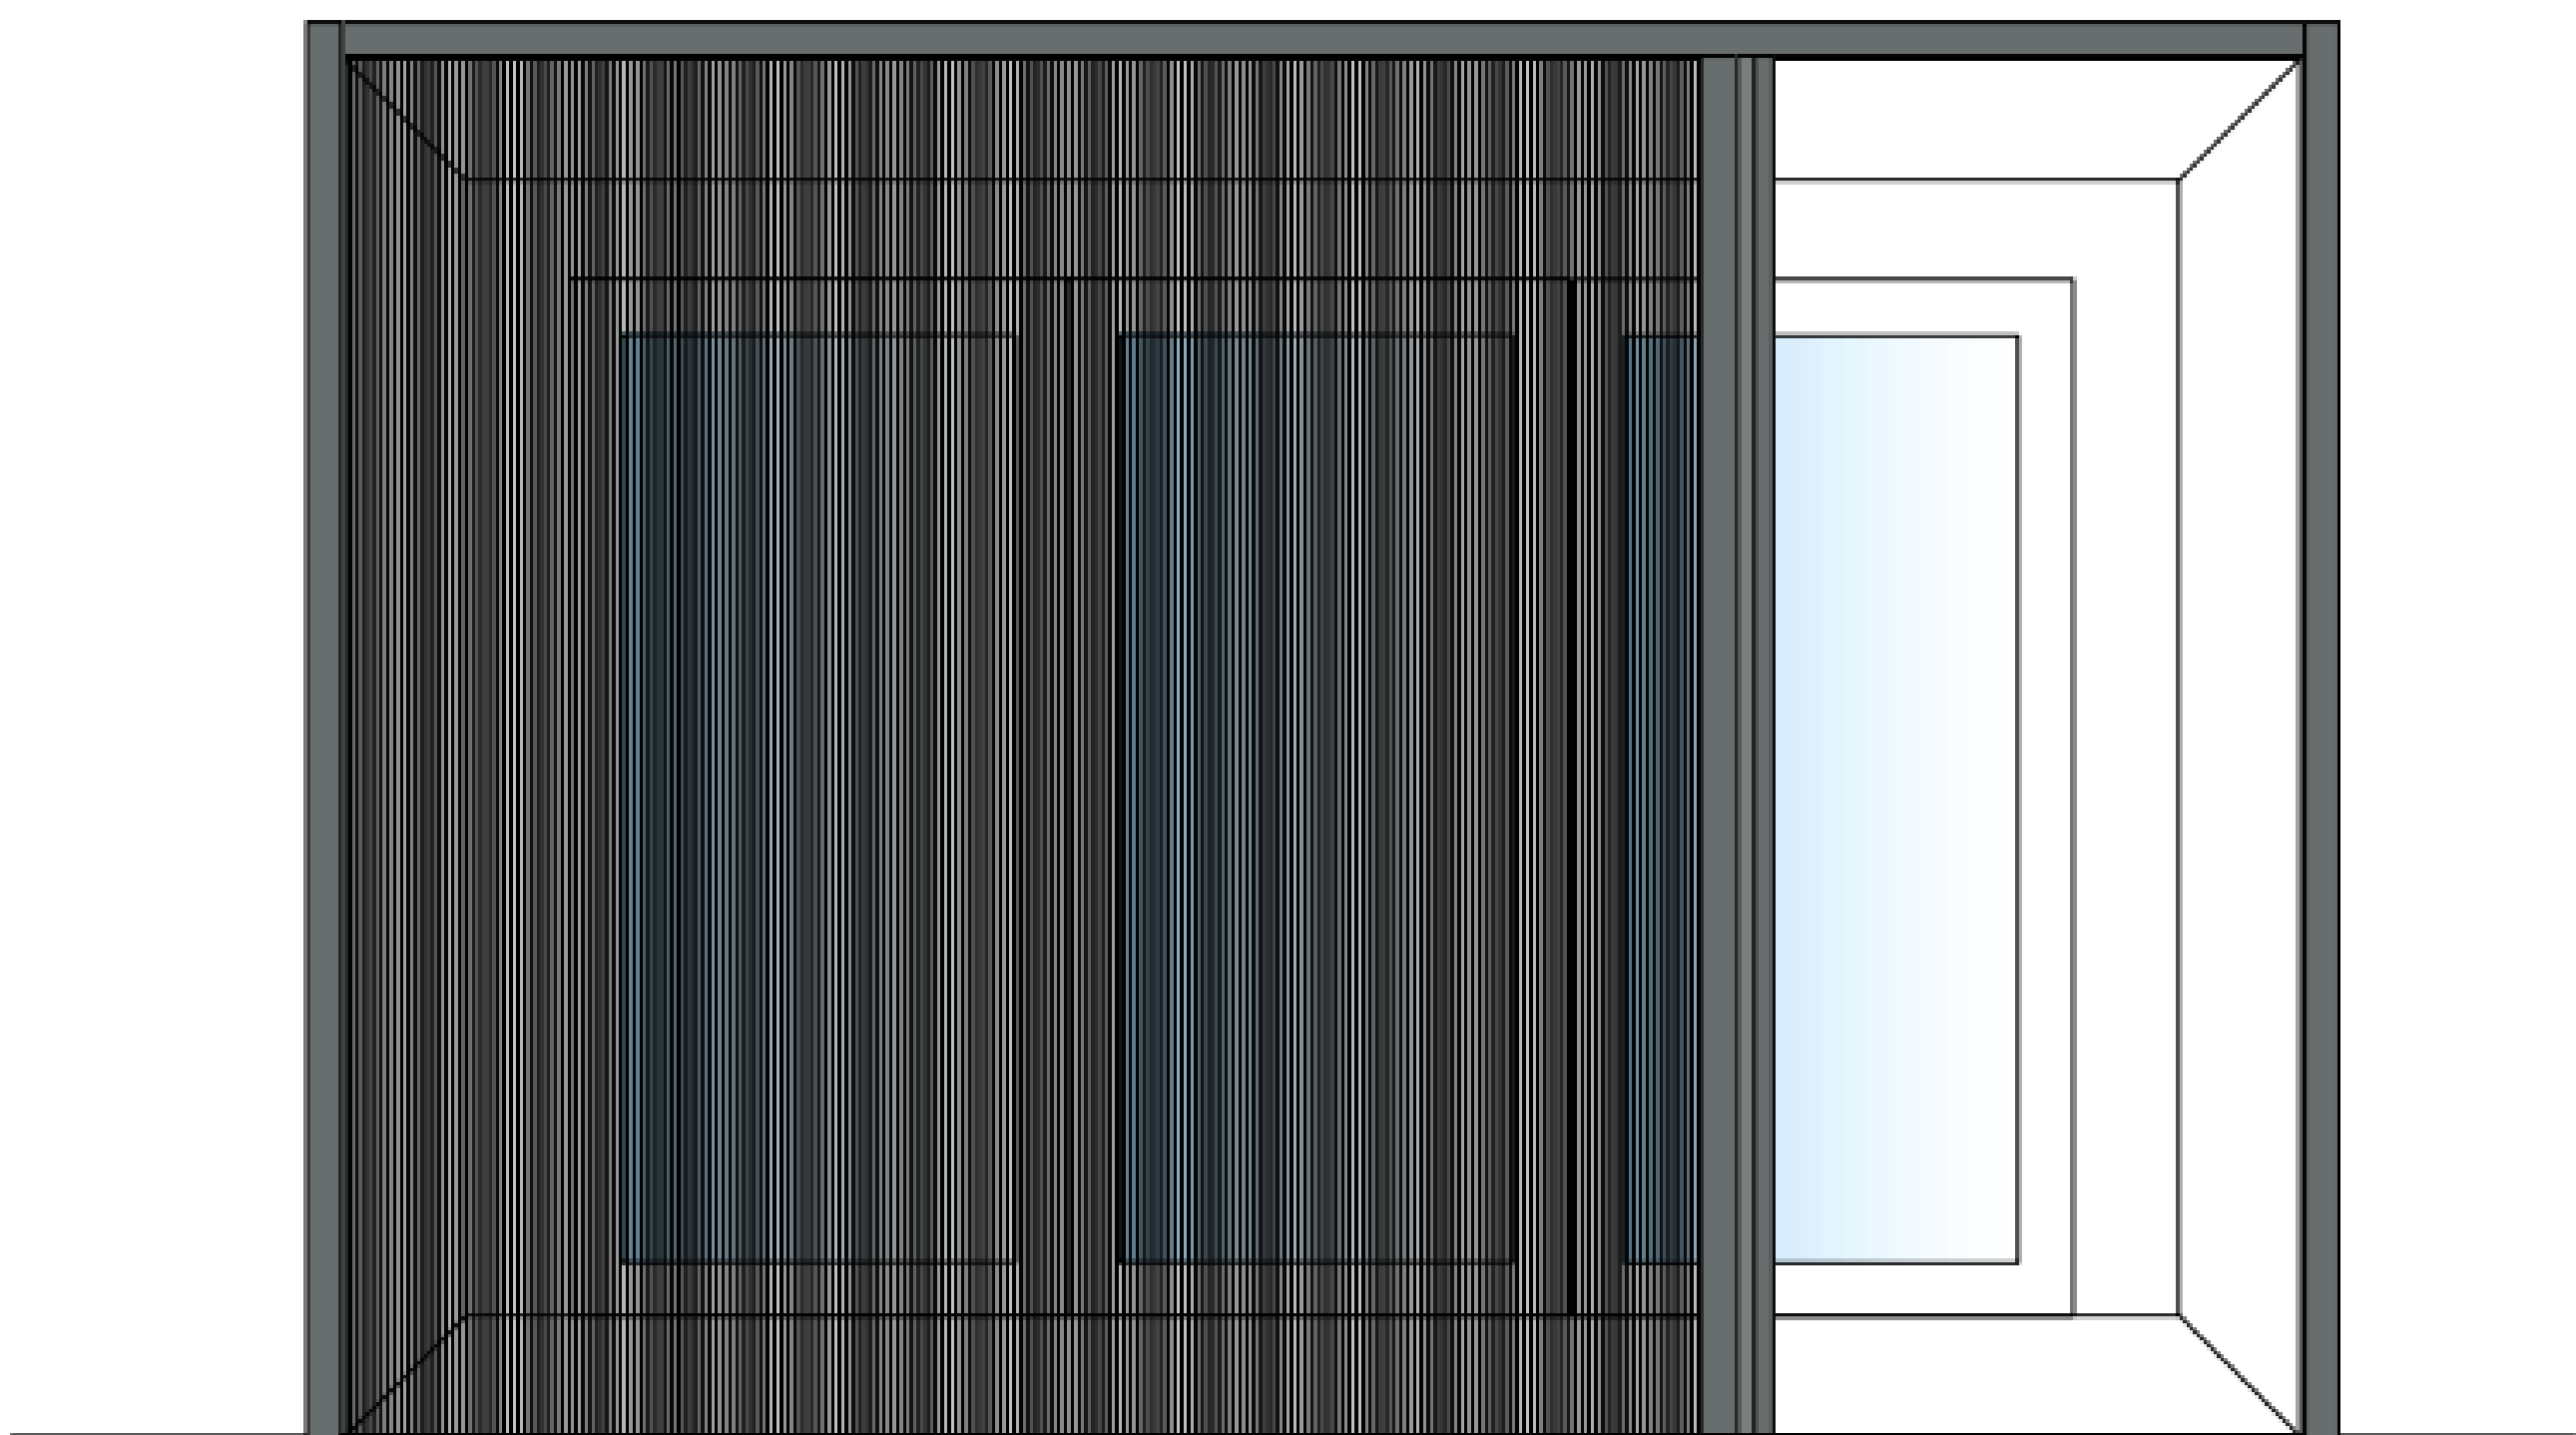




Dimensions are given in millimeters (mm).

The mosquito frame has 45mm. This should be taken during the measurement. Order width is the width of the outside mosquito net including the frame. Order height is the height of the entire mosquito including the frame at the top and the bottom profile.

Fig.1.

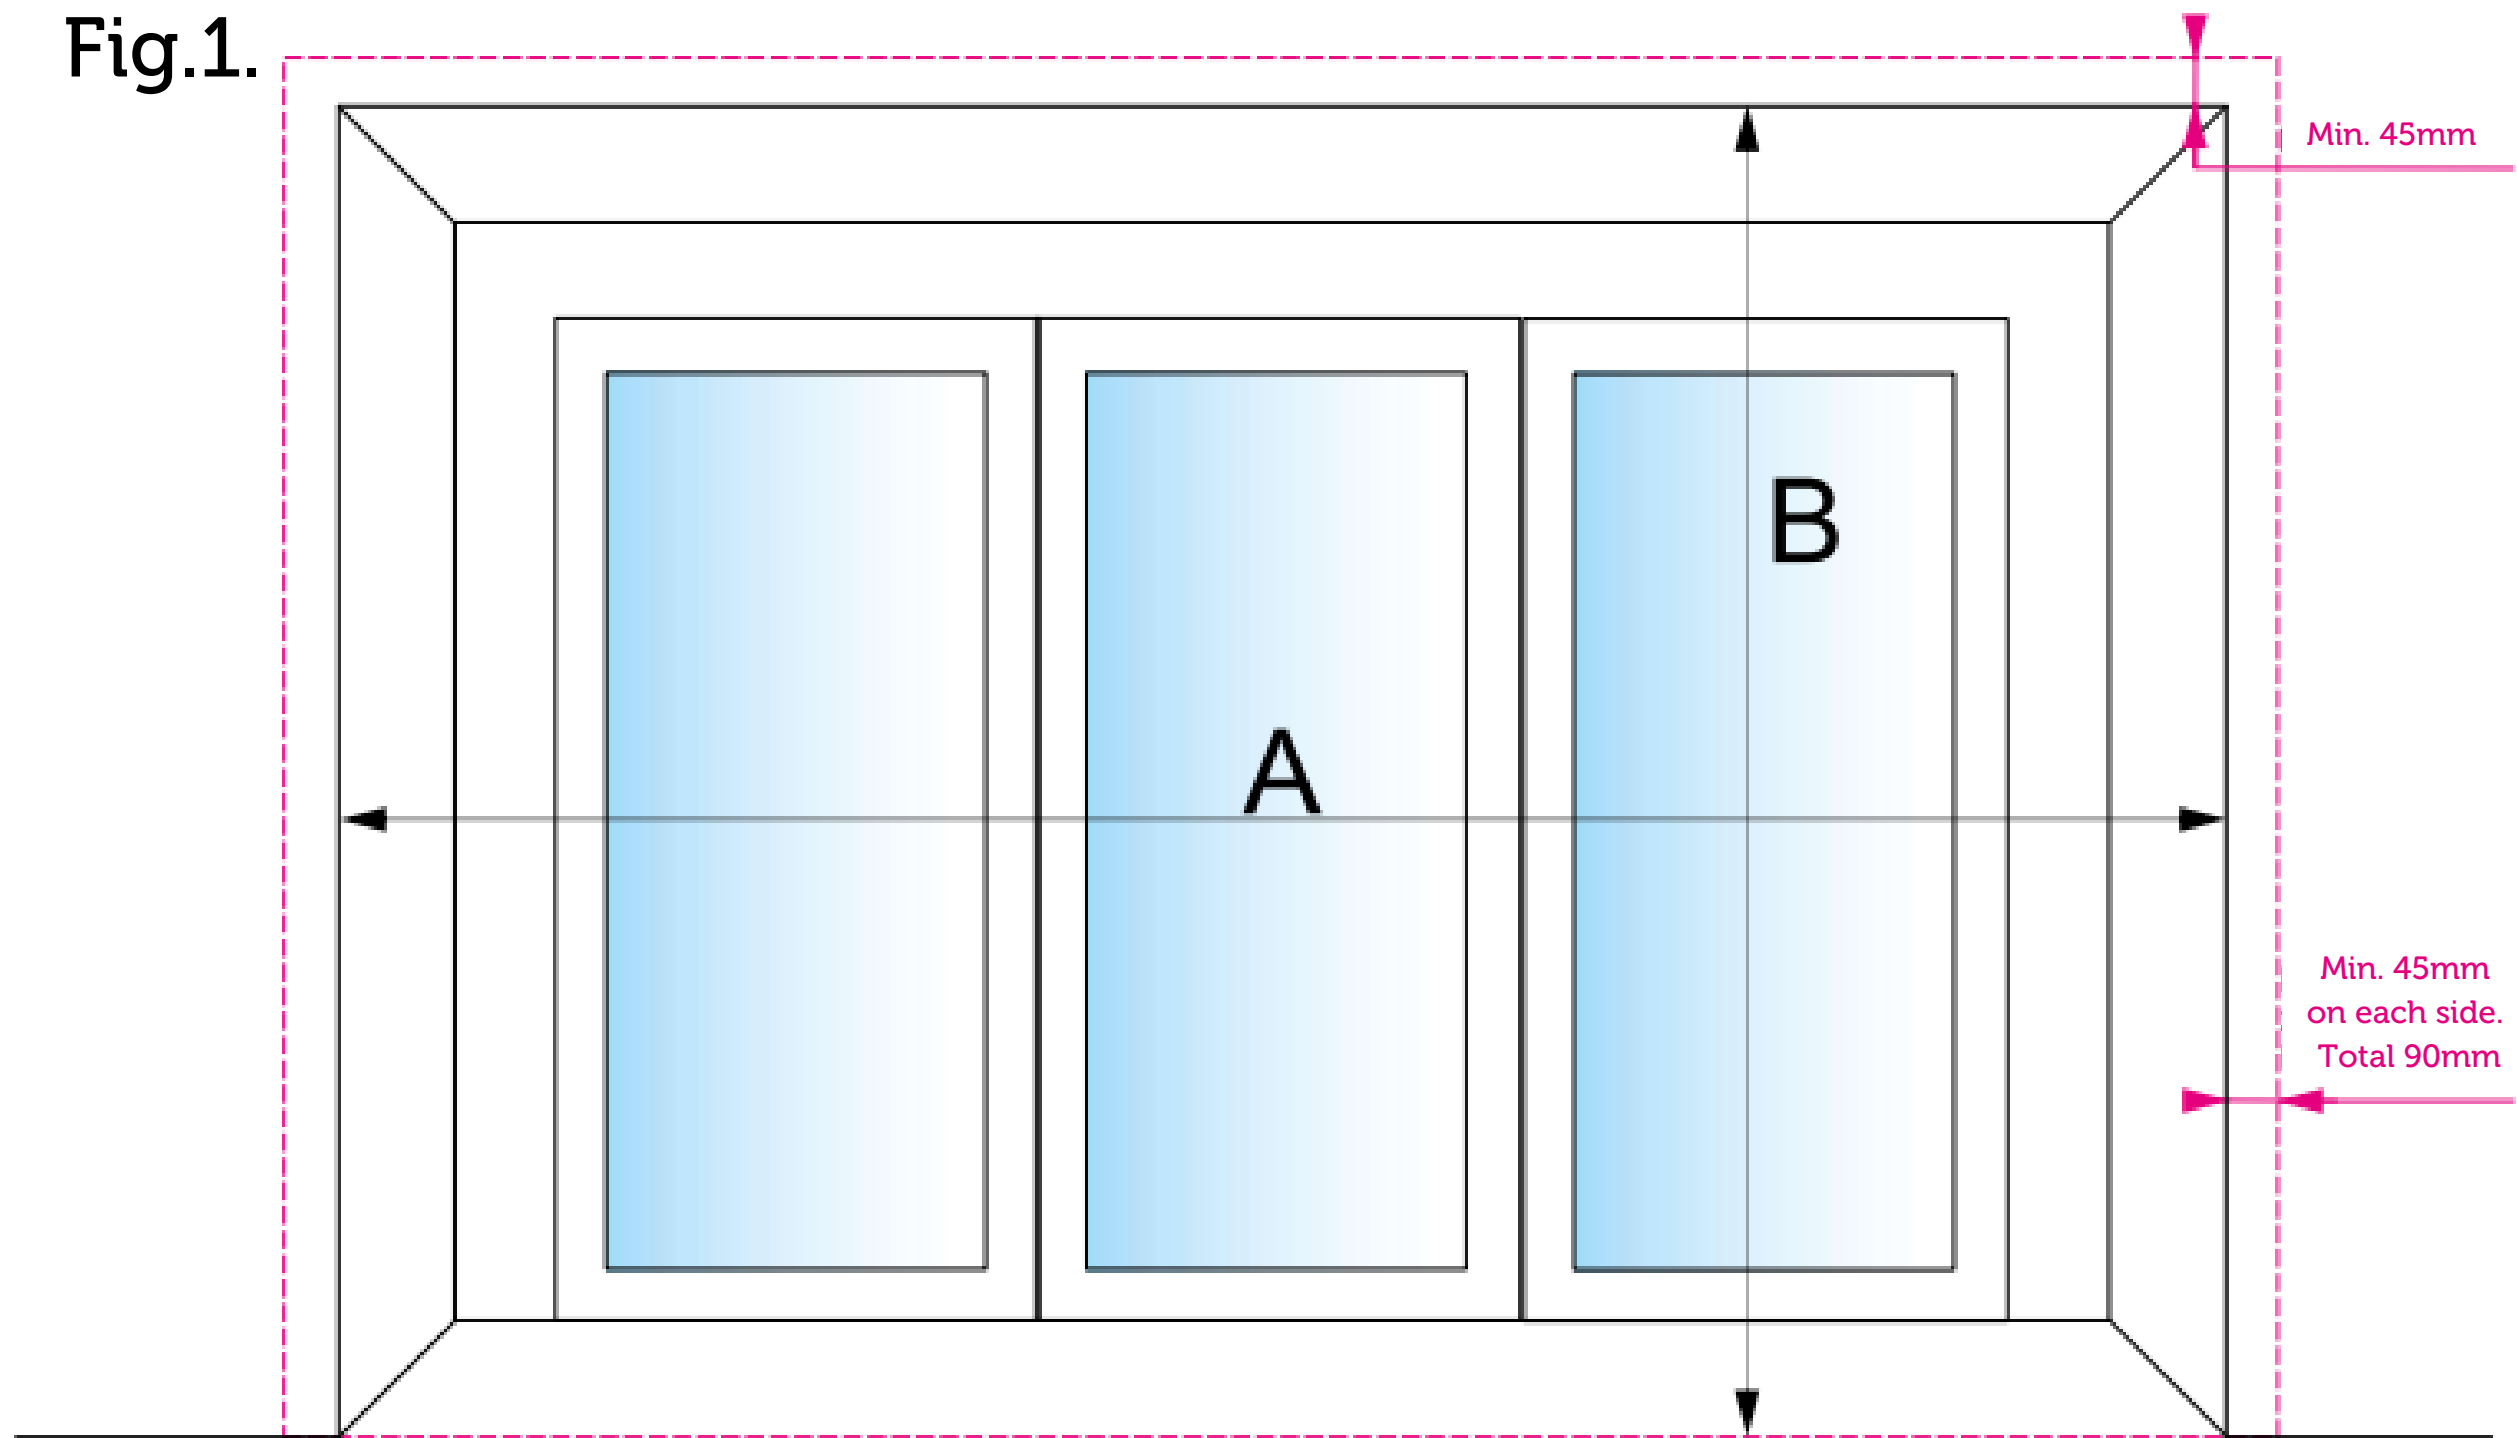

Measure the width and height of the window recess. Figure 1.

Add the width of the mosquito frame 45mm on the left and 45mm on the right when entering the desired width.

Total 90mm.


Example: A = 2000mm,
 $2000 + 90 = 2090\text{mm}.$

Add the height of the frame at the top when entering the desired height.


The frame is **45mm.**

Example: B = 2400mm,
 $2400 + 45 = 2445\text{mm}.$


Measurement instructions for pleated mosquito net for
terrace windows.
Mounting in window recess.

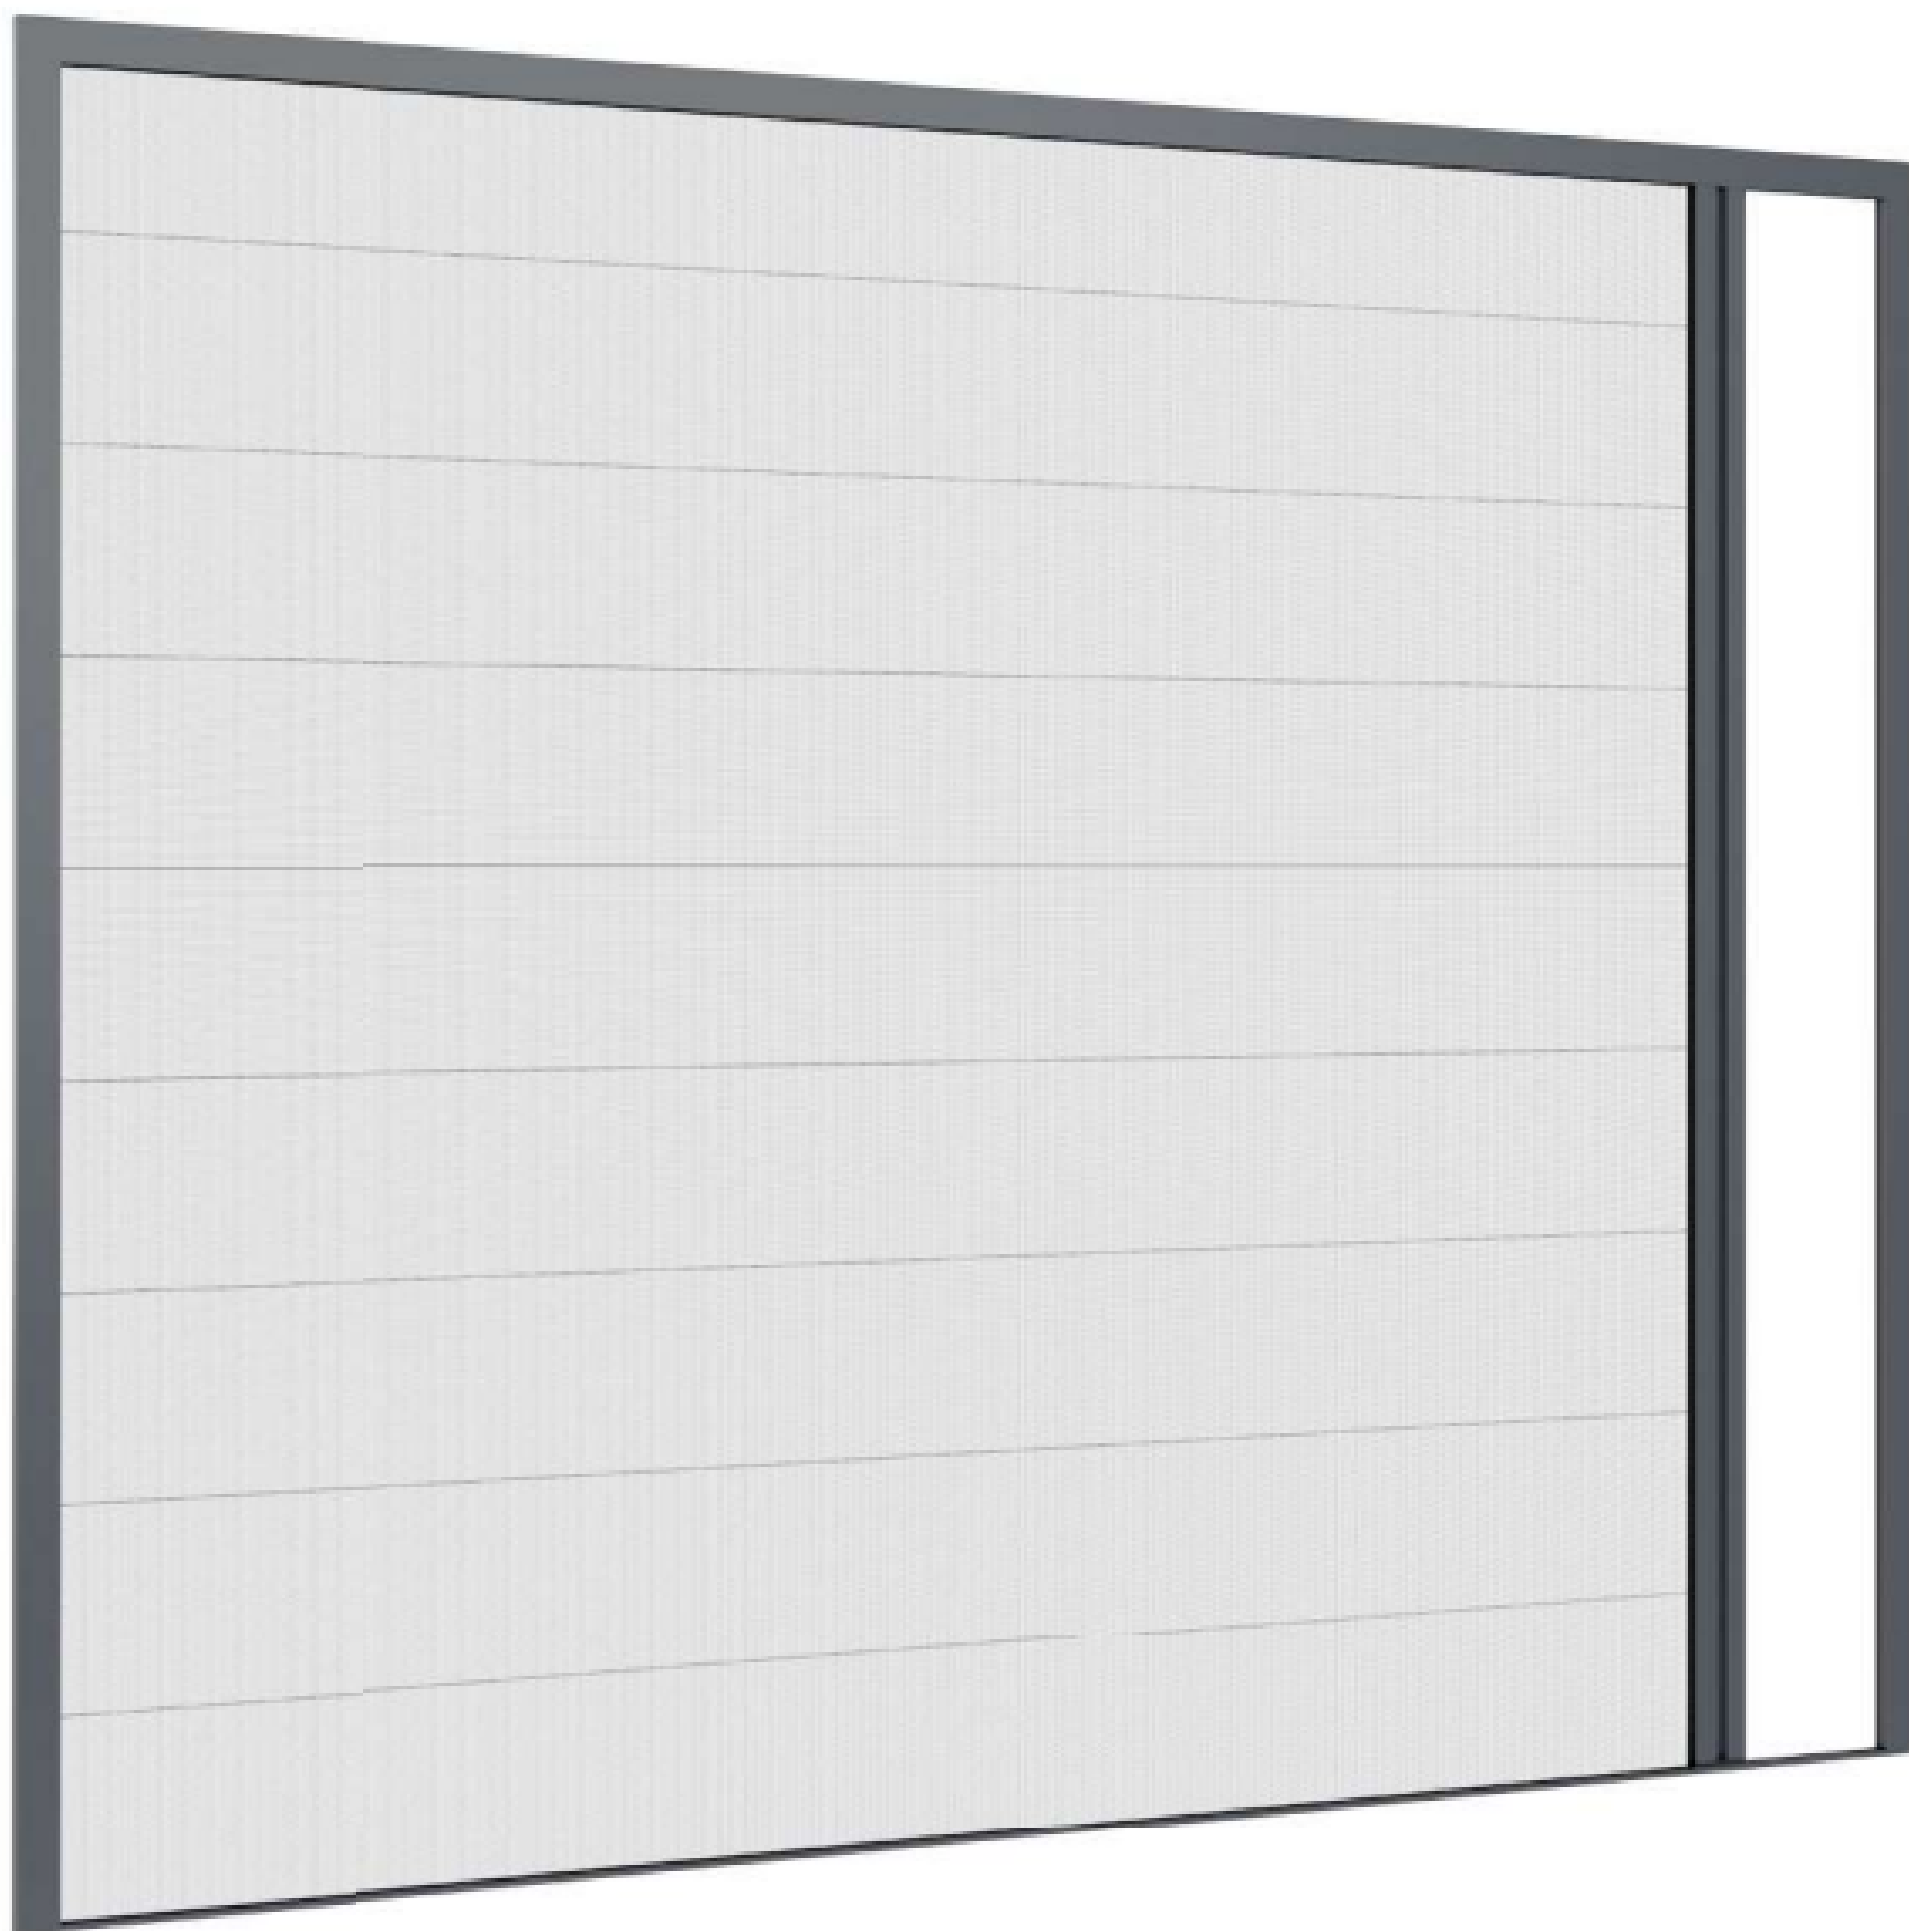

Terrace window before installation.

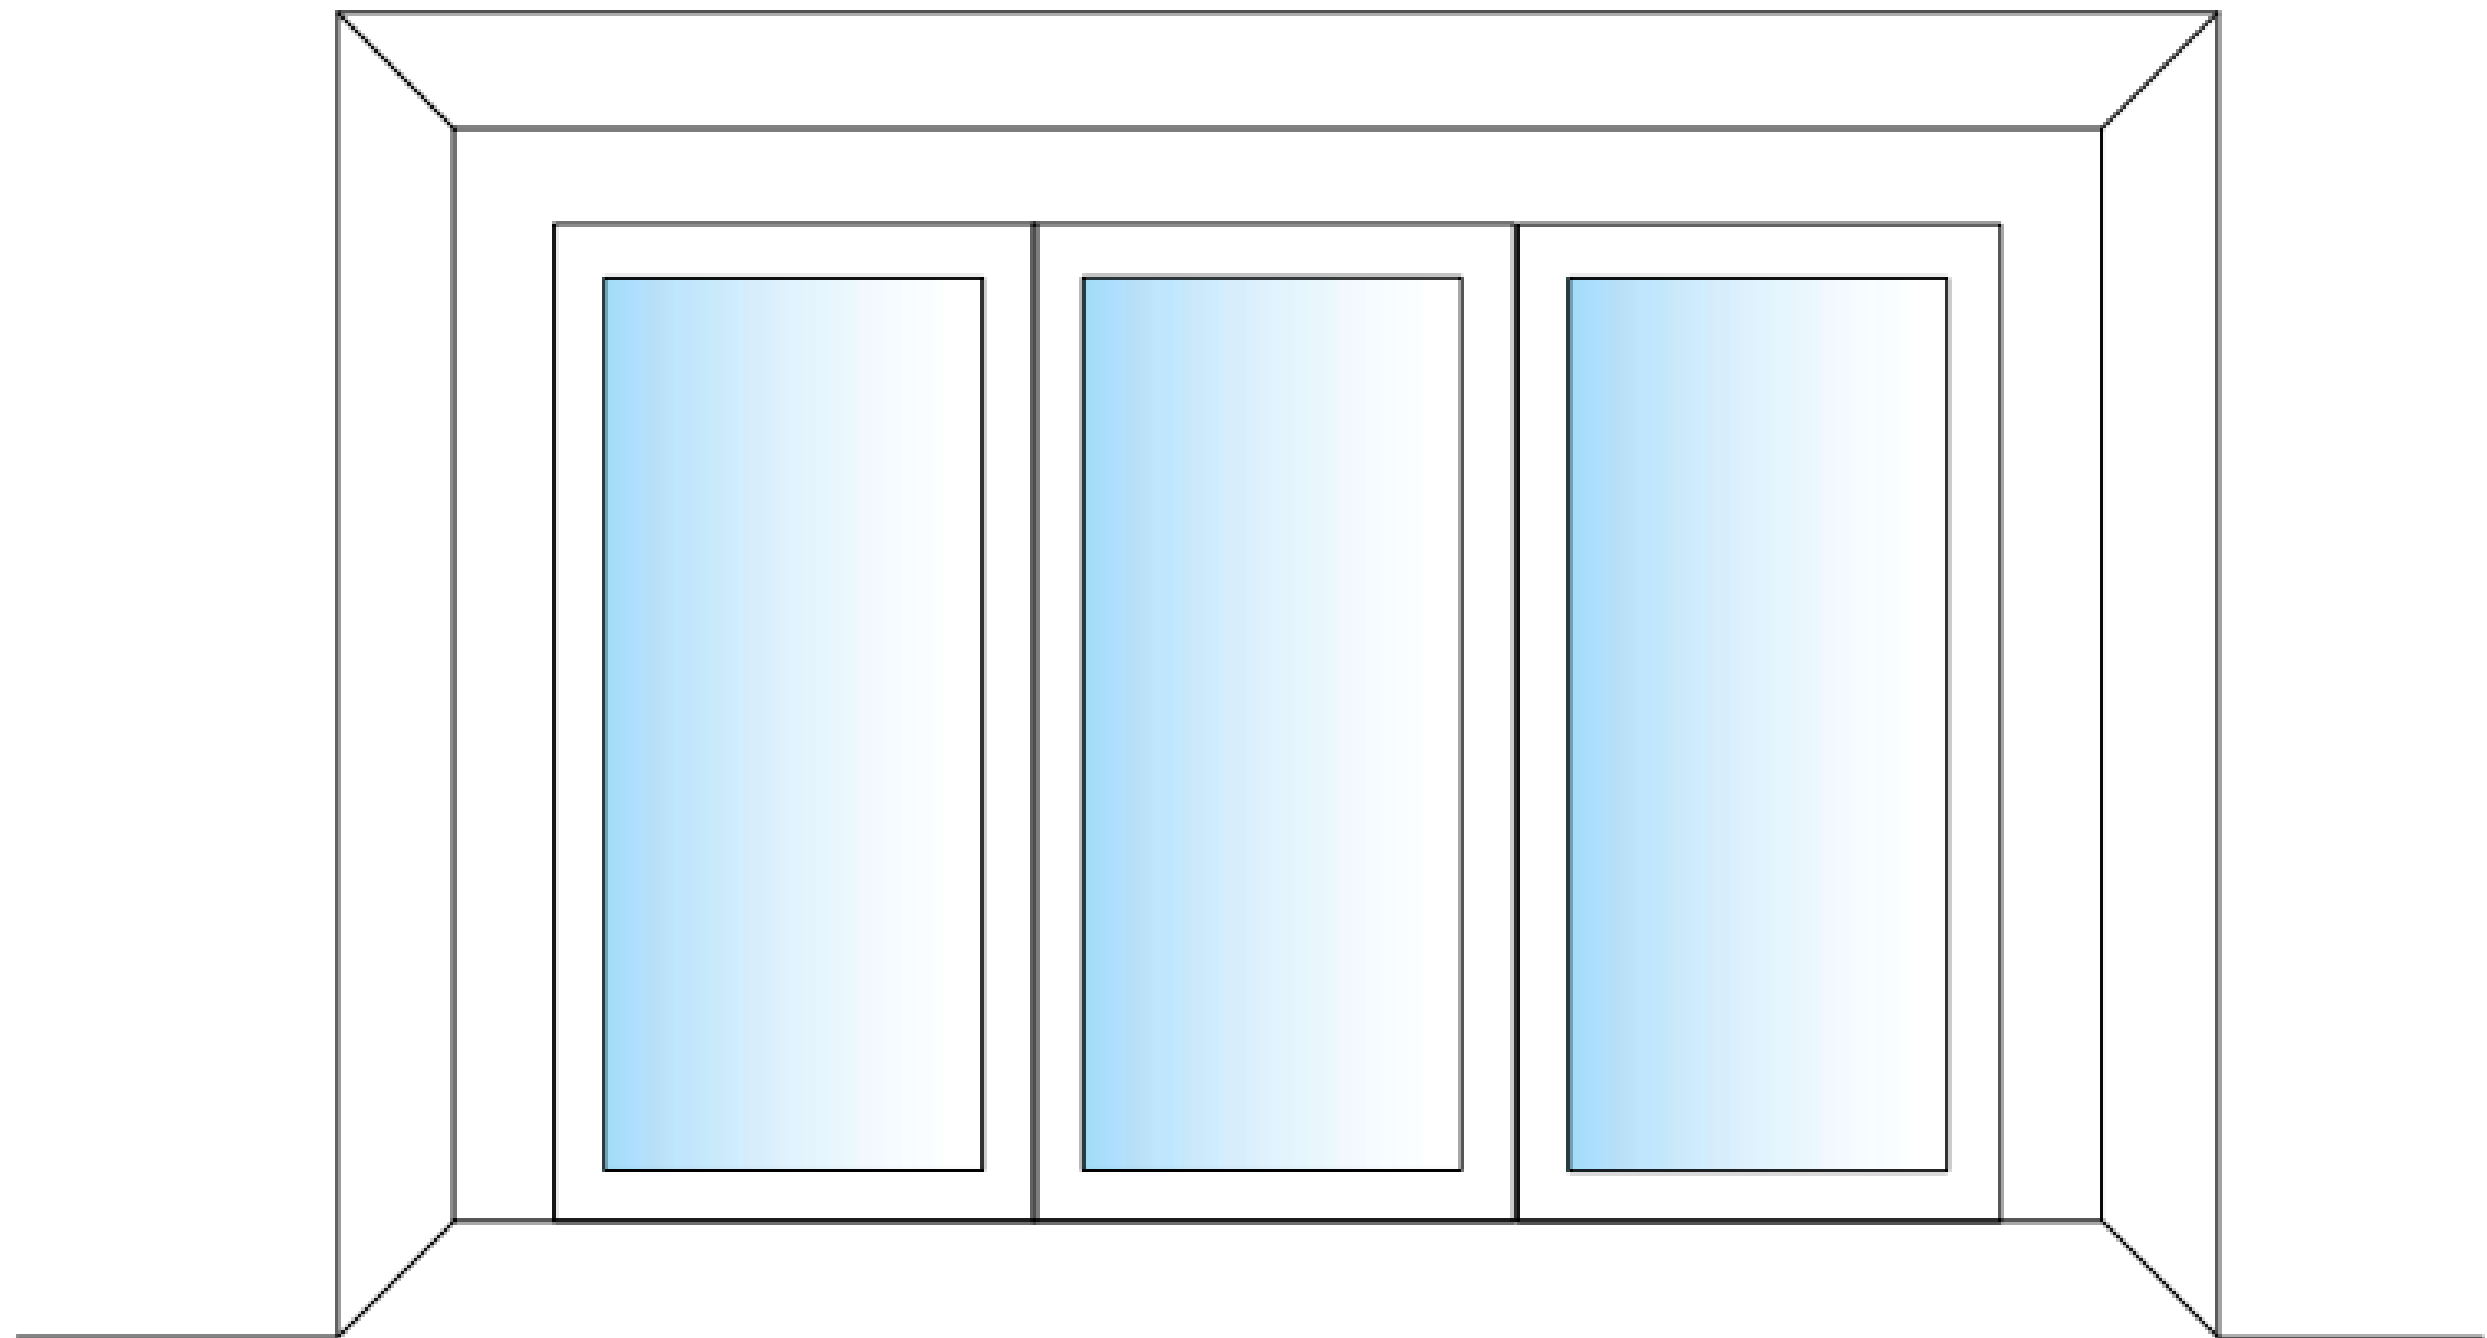

Terrace window after installation of mosquito net in window recess.

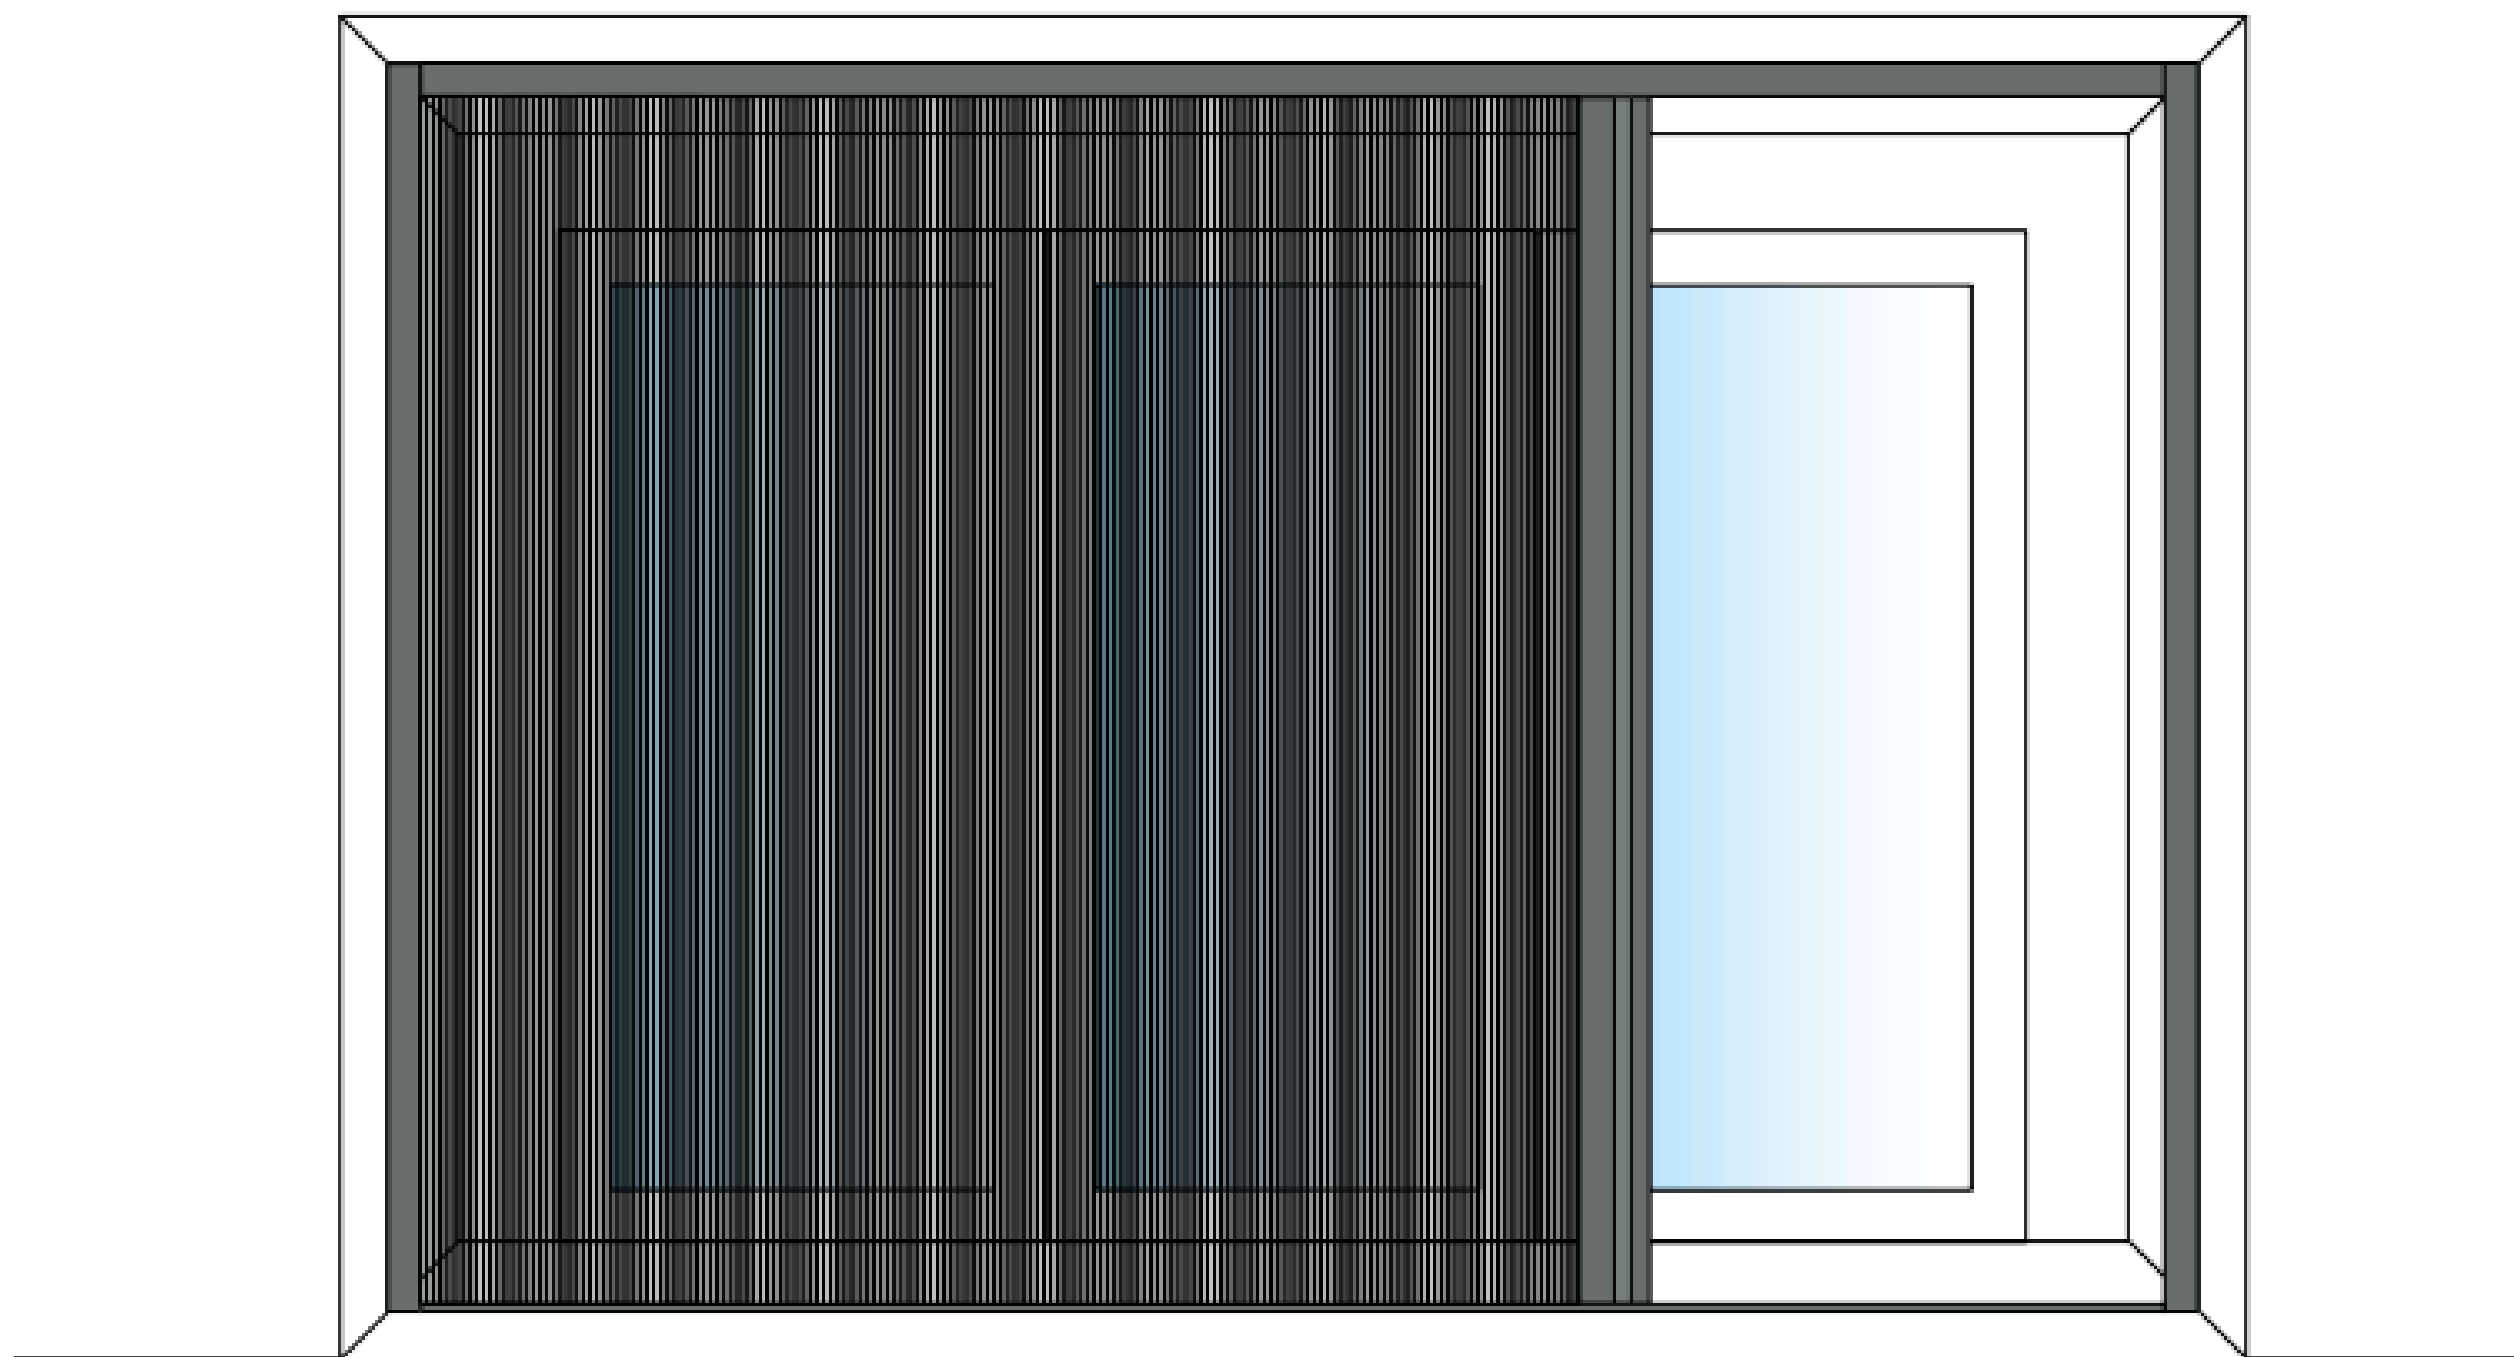


Dimensions are given in millimeters (mm).



To mount a mosquito net in a recess, it must be an ideal rectangle. The width of the order is the outside width of the mosquito net together with the frame. The order height is the height of the entire mosquito including the upper frame and the lower profile.

Fig.1.

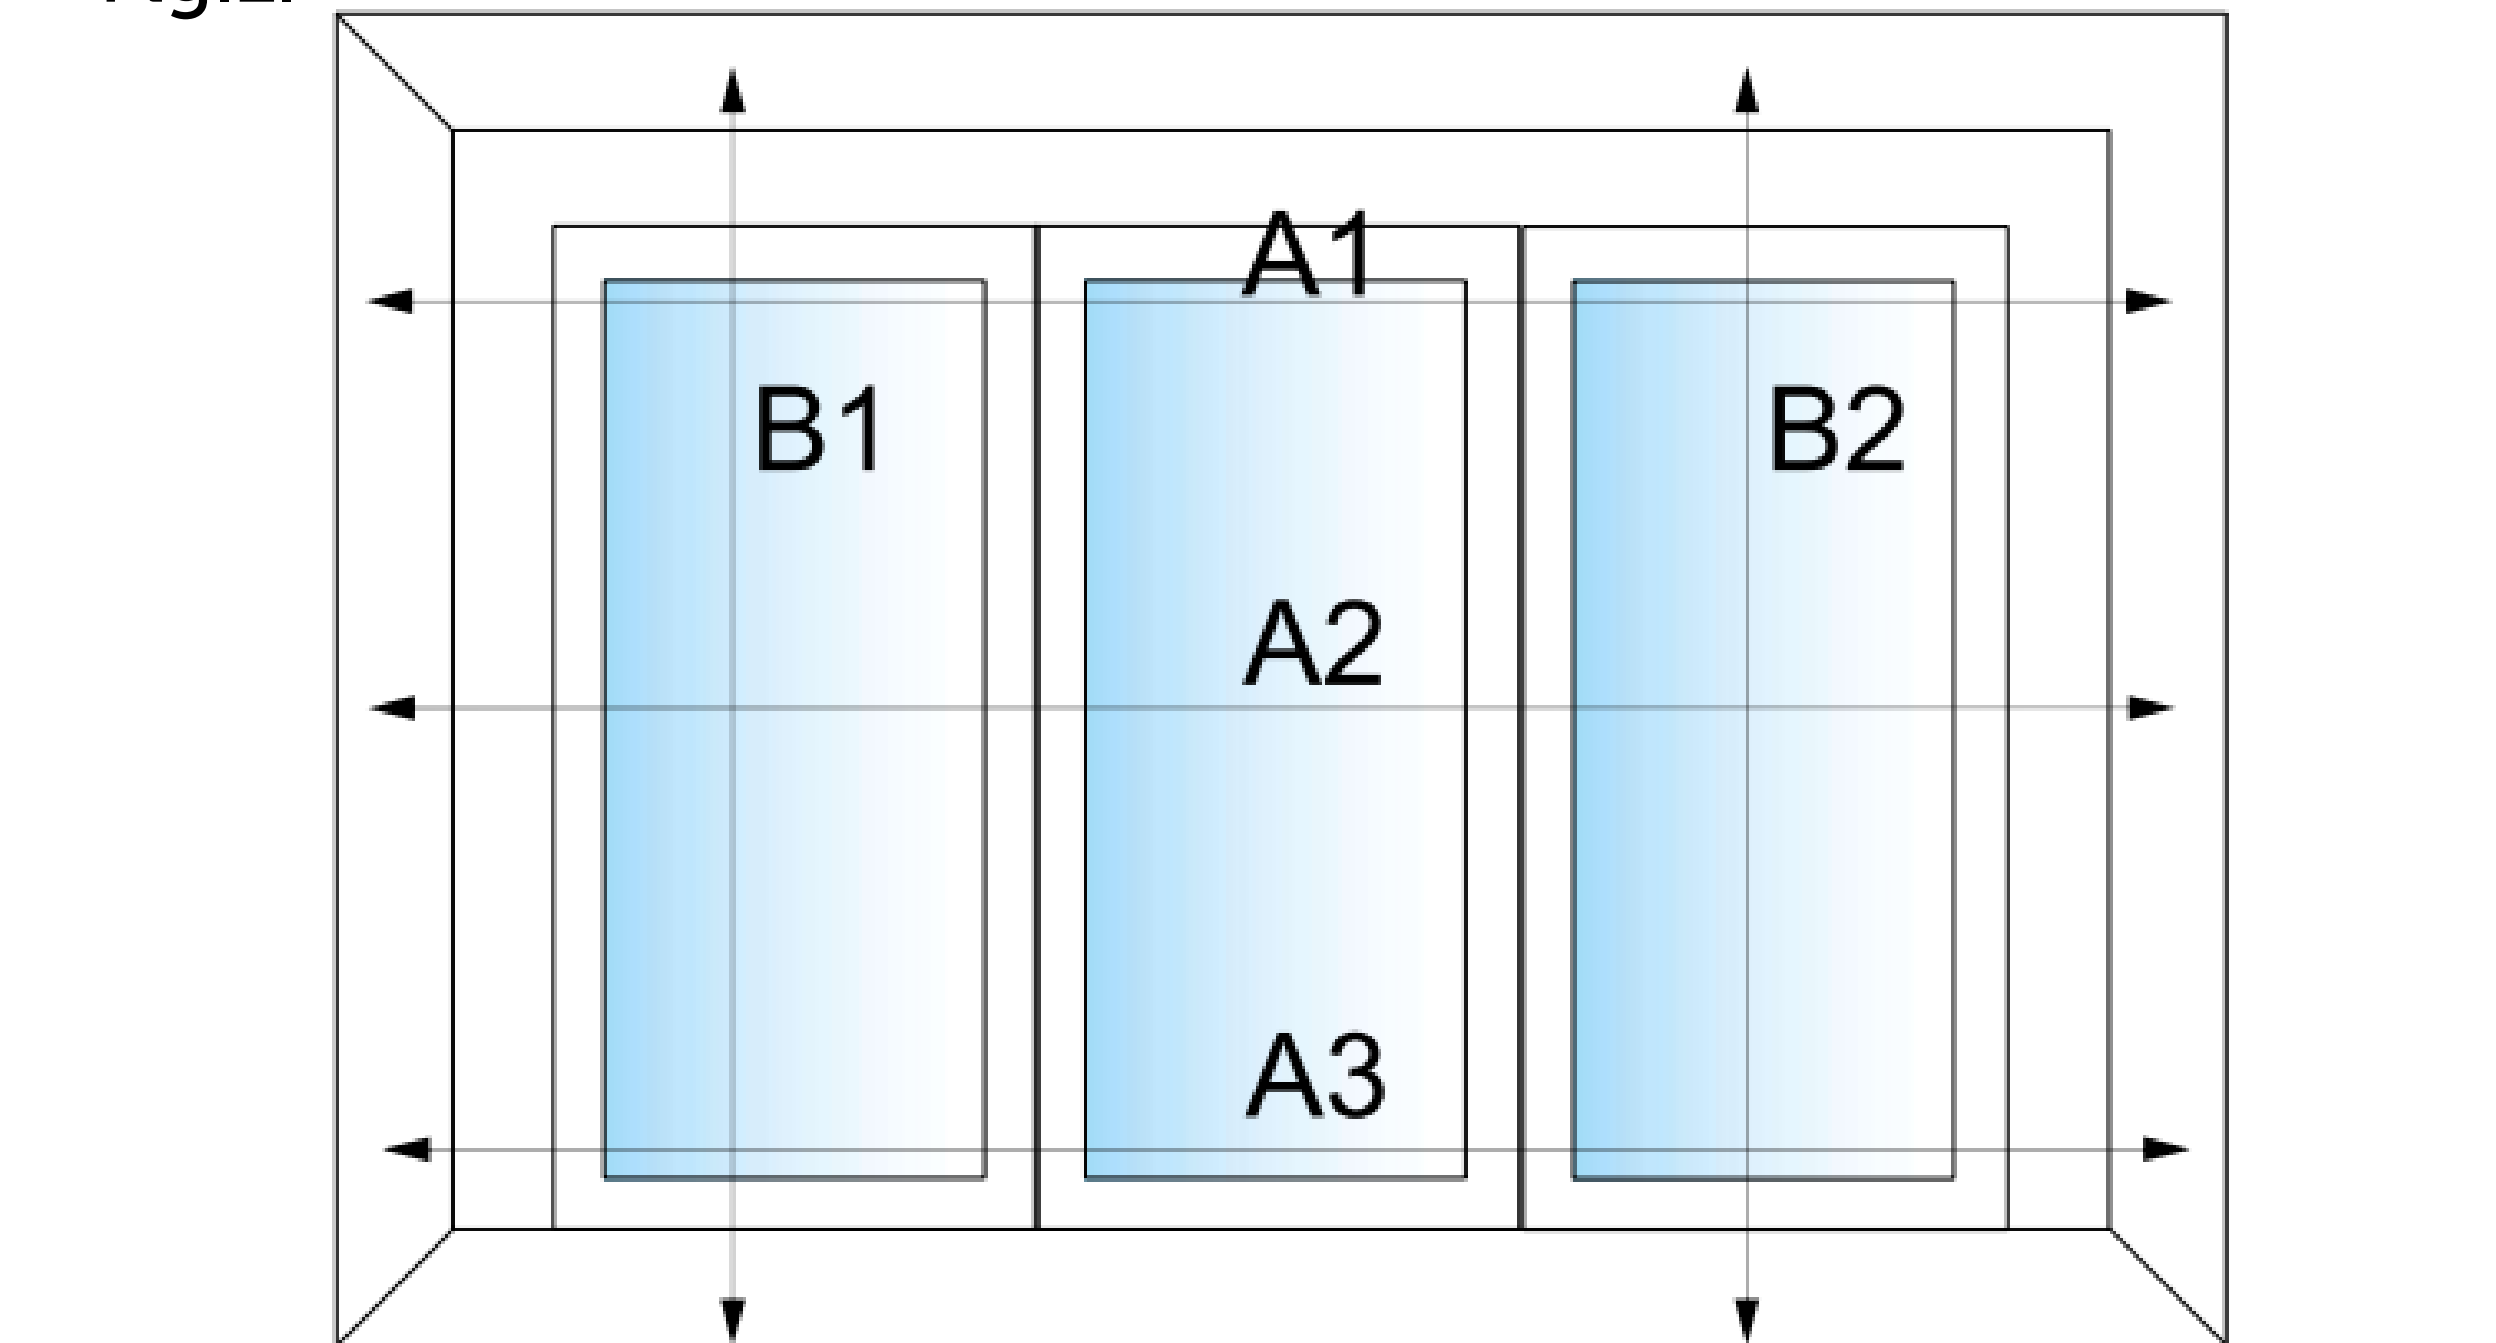

Measure the width of the window bay in three places, A1, A2, A3.

Figure 1.

If the dimensions are identical, you can install mosquito net in your recess.

Enter the width A **minus 2mm** for the desired width.

Example: A = 2000mm,
 $2000 - 2 = 1998\text{mm}$.

Measure the height of the window recess at least in two places B1, B2.

Figure 1.

If the dimensions are identical, you can install mosquito net in your recess.

Enter the height B **minus 2mm** for the desired height.

Example: A = 2400mm,
 $2400 - 2 = 2398\text{mm}$.