





Dimensioning instruction for vertical blinds

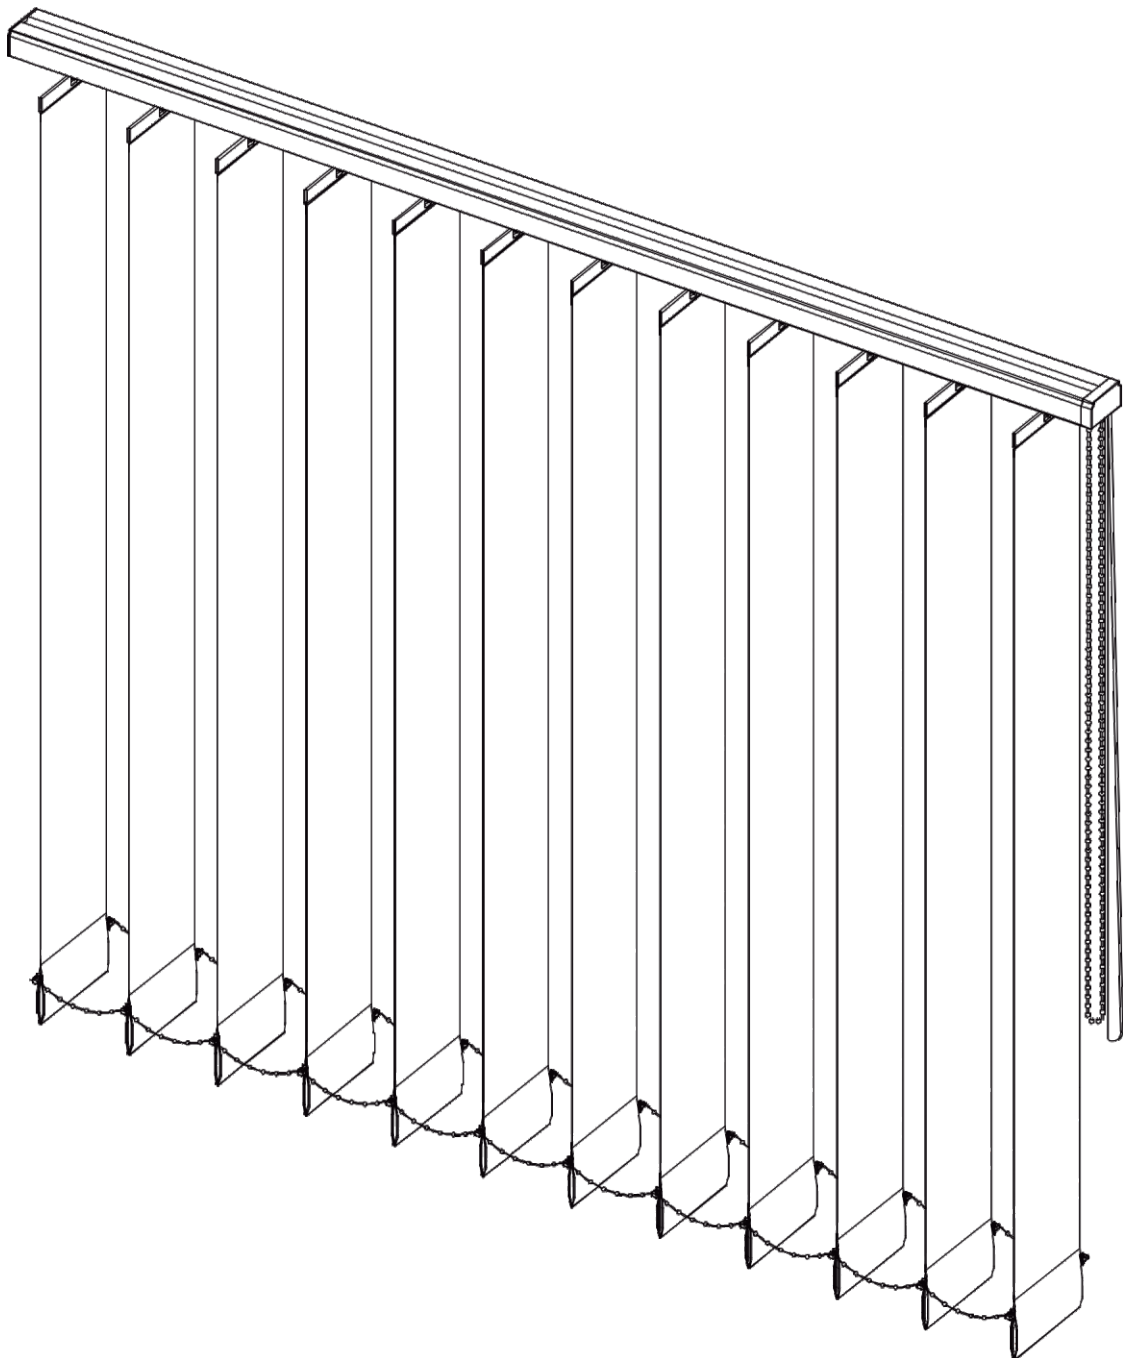

Select Window

measure

install

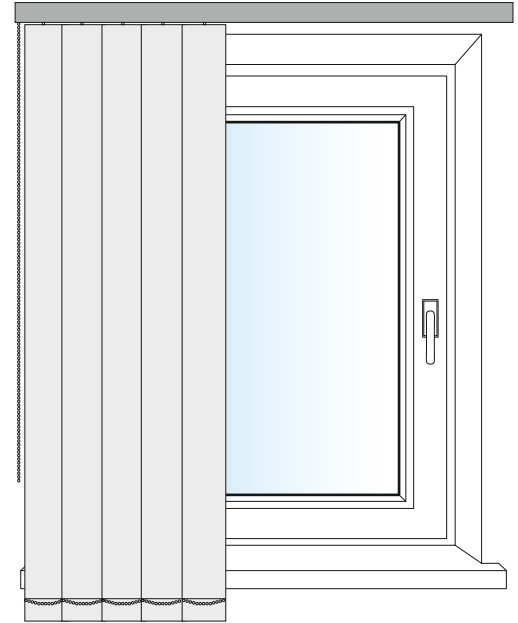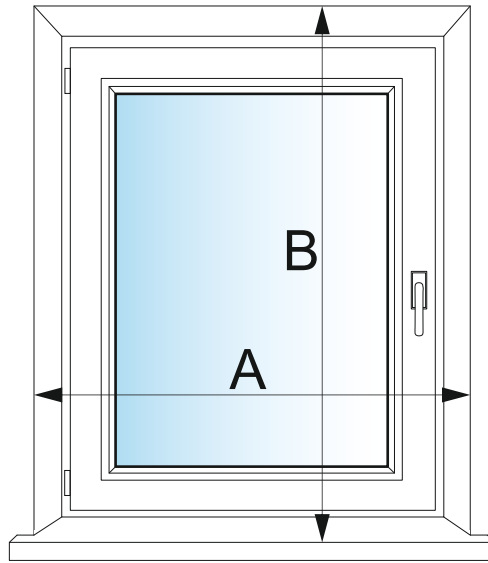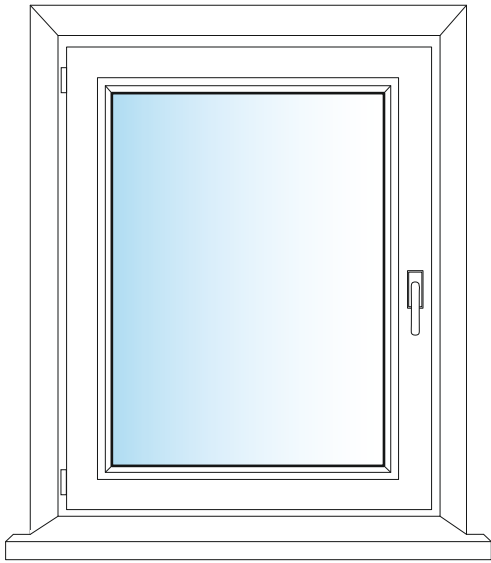


Dimensions are given in millimeters.



Vertical blinds can be mounted to the ceiling or wall.

The width given in the order is the width of the rail. the height given in the order is the total height of the entire blind including rail on the top.

Pic. 1

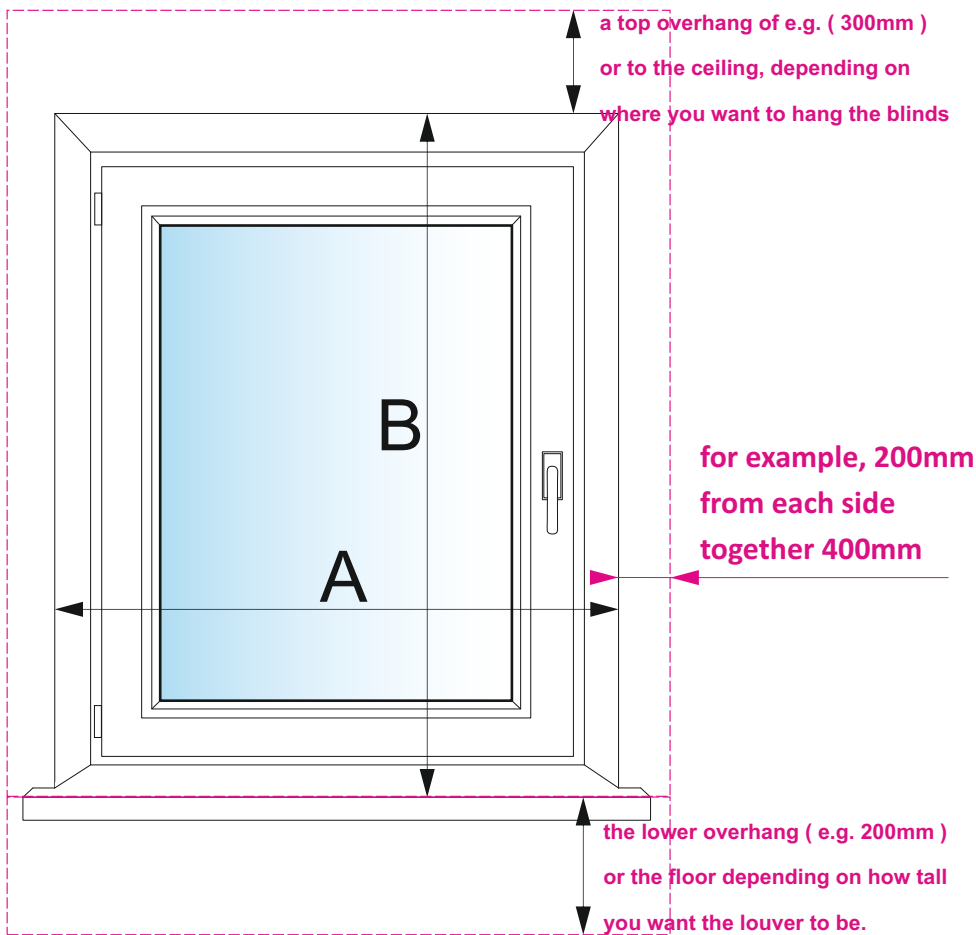

Measure window width and height. Pic.1.

Add an overhang by specifying the desired width so that the blind will overlap the wall on the right and left sides at your personal discretion (e.g. 400mm)

Example: A = 1400 mm

1400 + 400 = 1800 mm.

Add the upper overhang and the lower overhang behind the windowsill, either to the floor lying down from your personal preference. You are adjusting the total height of the louver

Example: B = 250 cm