



Measurement instructions for pleated mosquito net for skylight.
Mounted to wall, in front of window recess at attic.

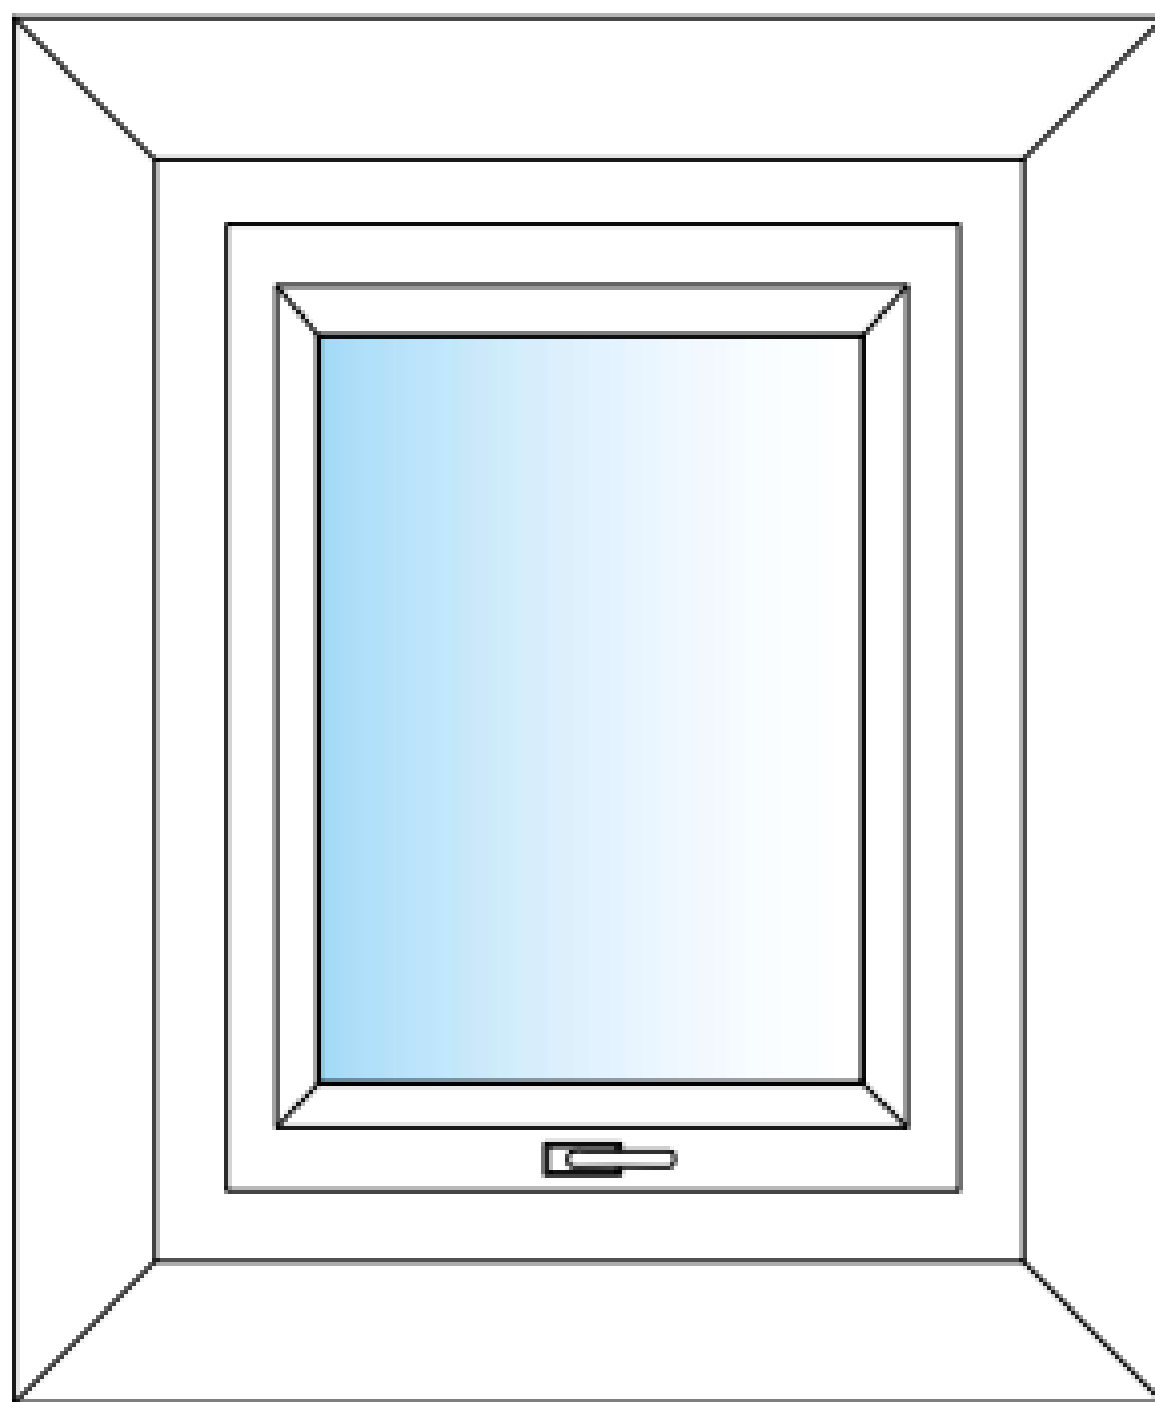

Skylight window before installation.



Skylight window after installation of a mosquito net to wall on the attic.

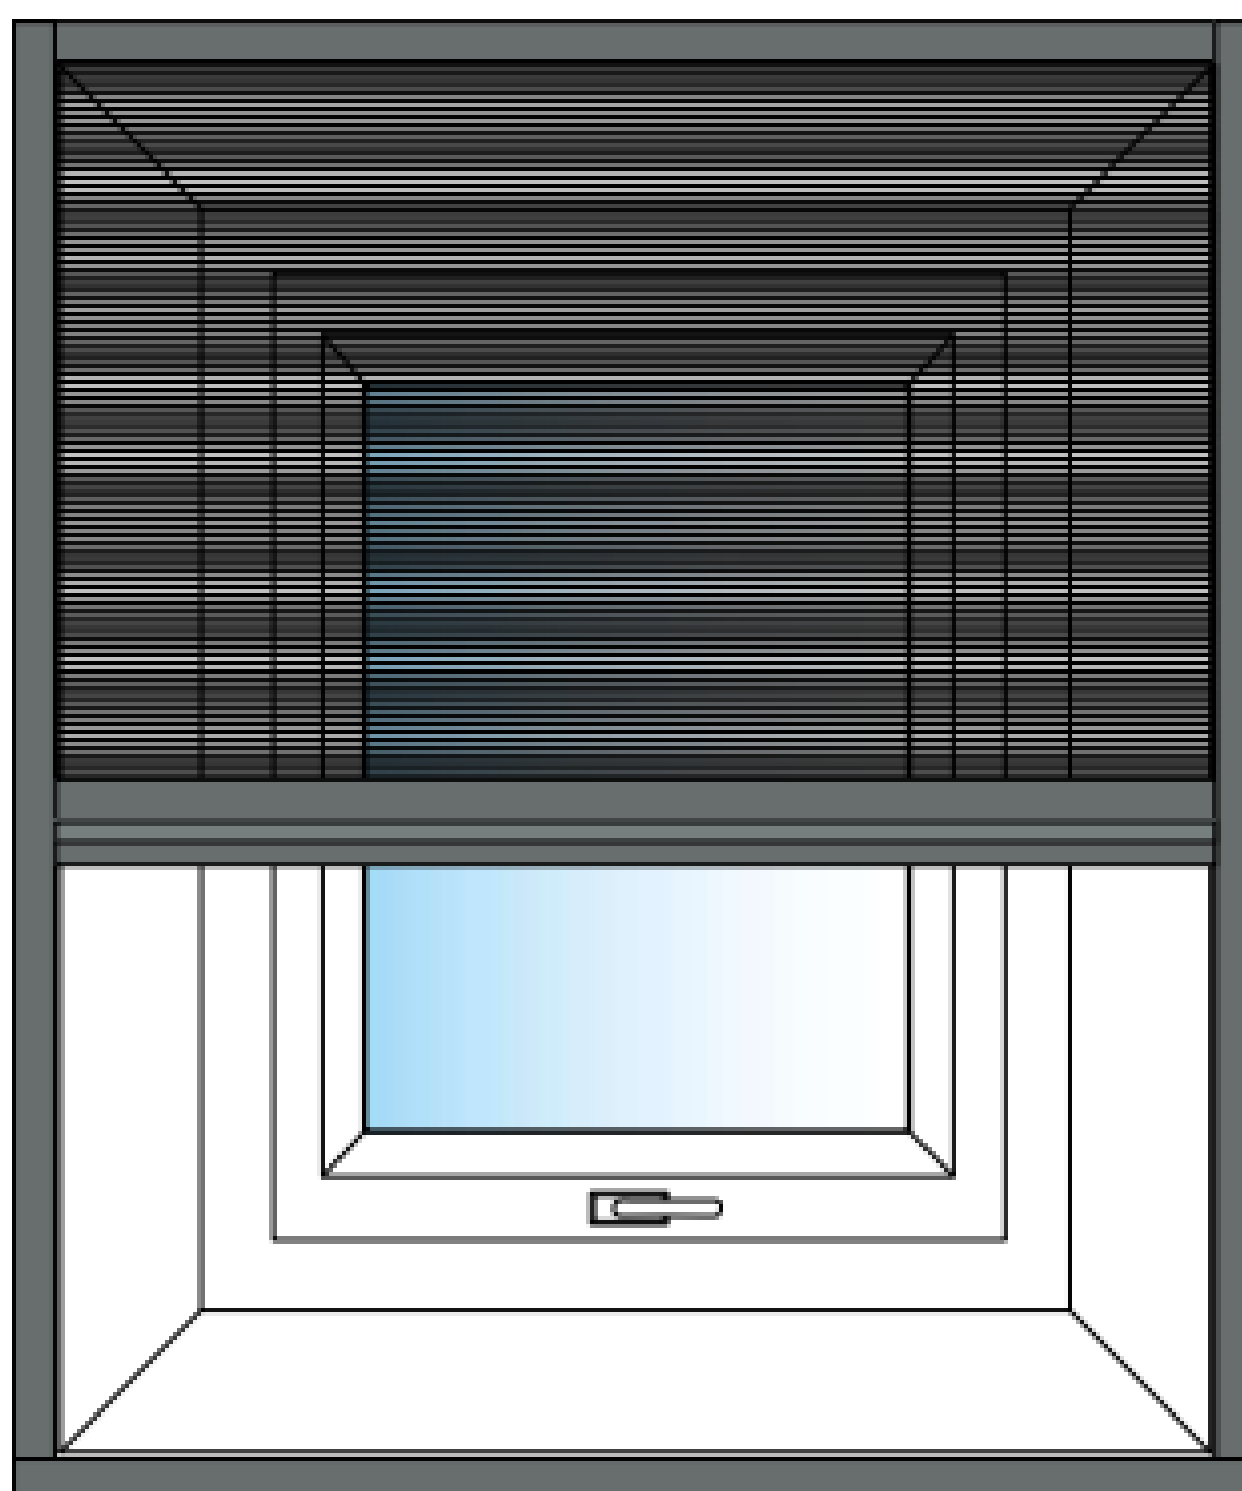




Dimensions are given in millimeters (mm).

The mosquito frame has 45mm. This should be taken during the measurement. Order width is the outside width of the mosquito net including the frame. The order height is the height of the entire mosquito net including the frame.

Fig.1.

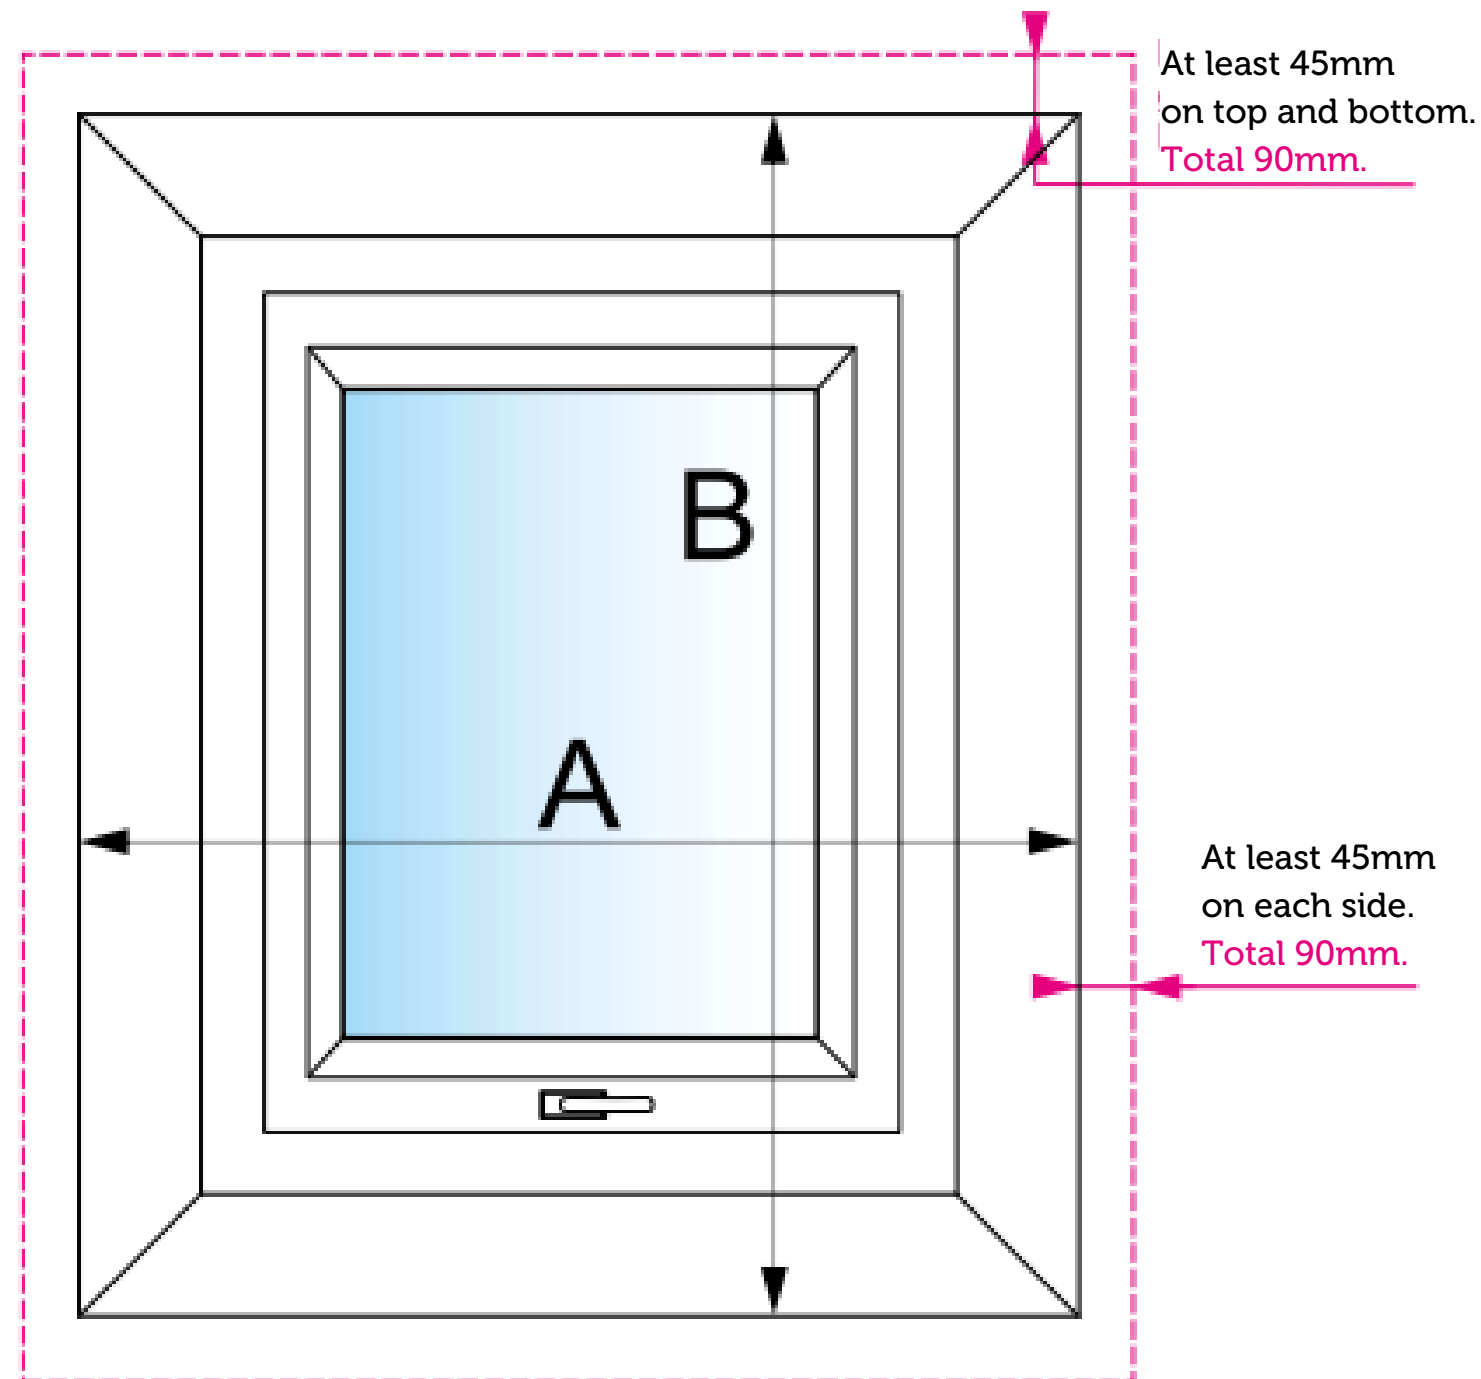

Measure the width and height of the window recess (hole in the wall).

Figure 1.

Add the width of the mosquito frame 45mm on the left and 45mm on the right when entering the desired width.

Total 90mm.

Example: A= 900mm

$900 + 90 = 990\text{mm.}$

Add the height of the mosquito frame 45mm at the top and 45mm at the bottom when entering the desired height.

Total 90mm.

Example: B= 1400mm

$1400 + 90 = 1490\text{mm.}$