





Dimensioning Instructions for 25 mm Aluminum blinds mounted in window recess

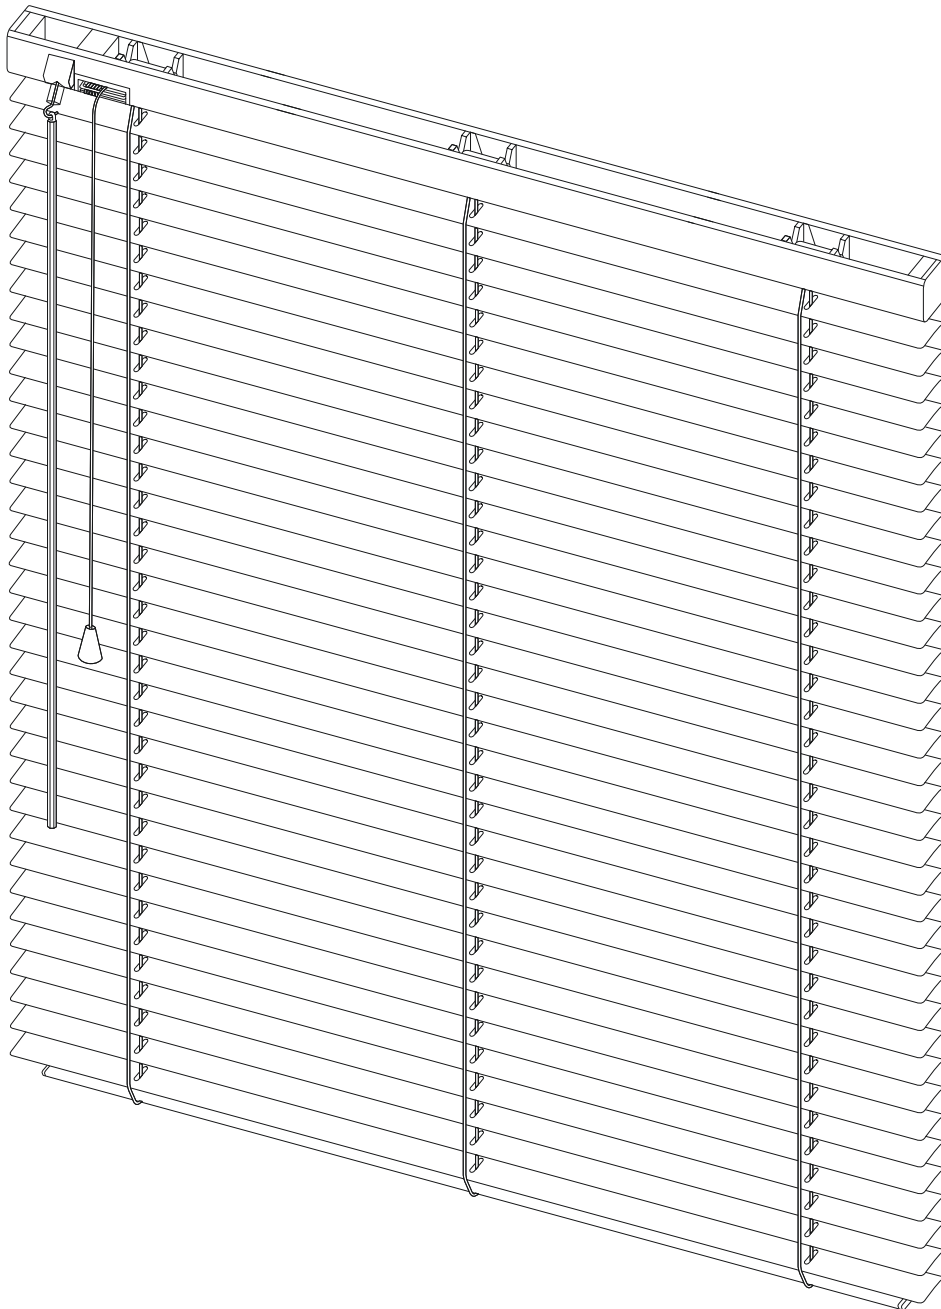

Choose window

Measure

Install

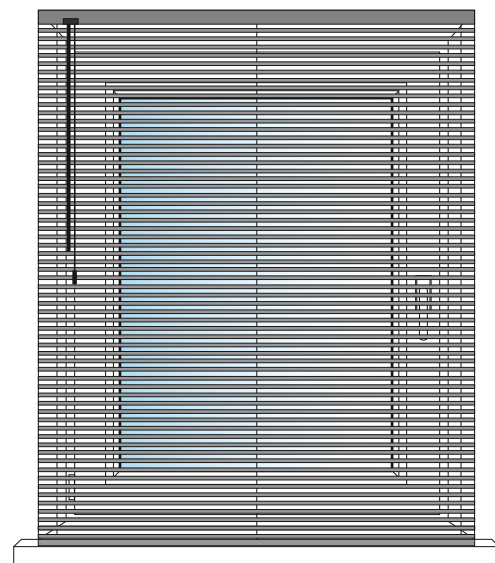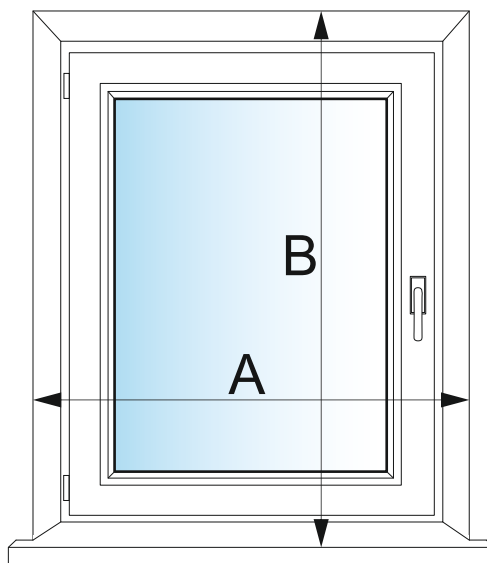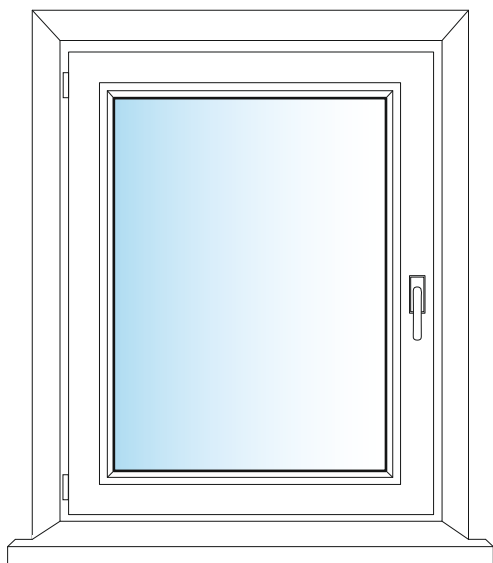

Dimensions are given in millimeters(mm).
 You specify the width of the finished blind and the height of the entire blind.



Note that after the blind has been lifted, the set of removed aluminum feathers will take about 3 % of its height plus 3 cm.

To obtain accurate measurements, measure the width of the window door at least 3 positions: On the top, in the middle, and on the bottom (A1, A2, A3). Pic. 1

Measure the window recess at the highest point in Pic. 1.

Enter the minimum value obtained from measurements A1, A2, A3 in the configurator, **less 10 mm.**

Example: A = 1250 mm

1250 - 10 = 1240 mm.

Enter the pre-set height in the configurator the value obtained from measurements B **less 3 mm.**

Example: B = 1500 mm

1500 - 3 = 1497 mm.

Pic. 1

