




Measuring instruction of electric roller blind in a cassette

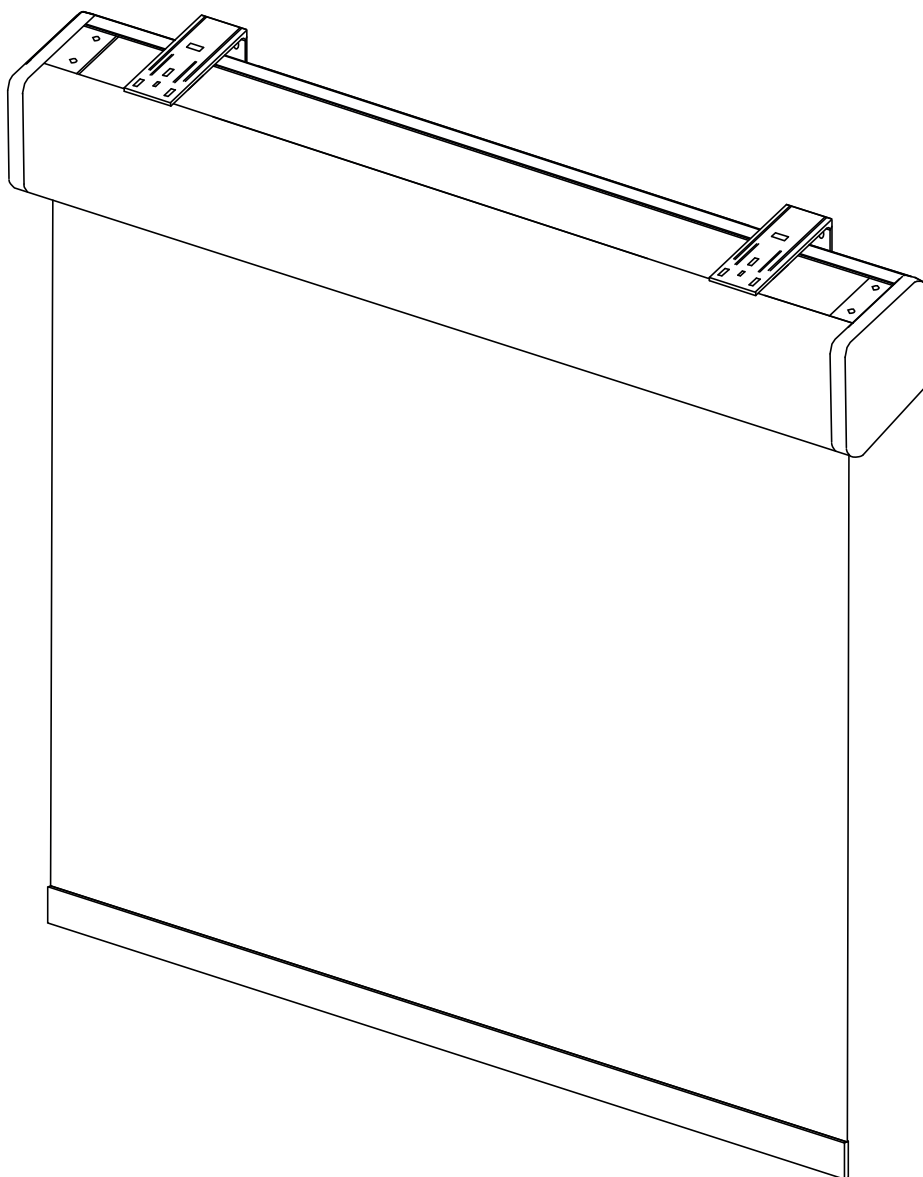


Choose a window

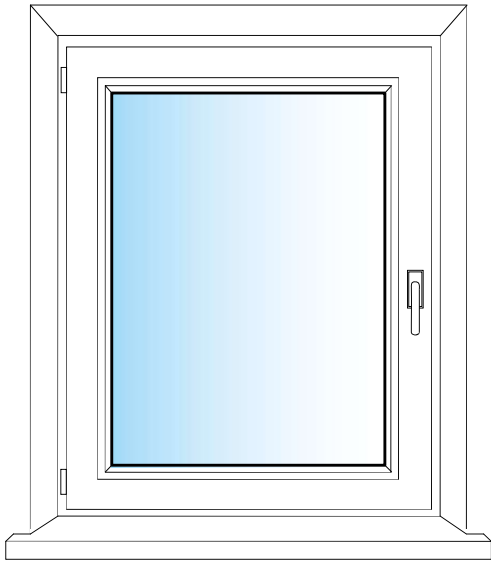

Measure

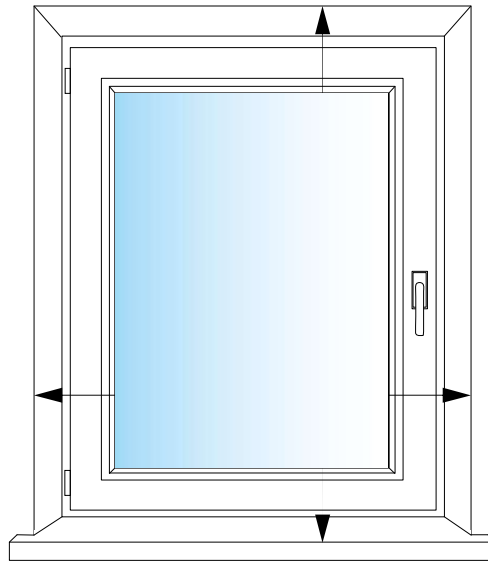

Install

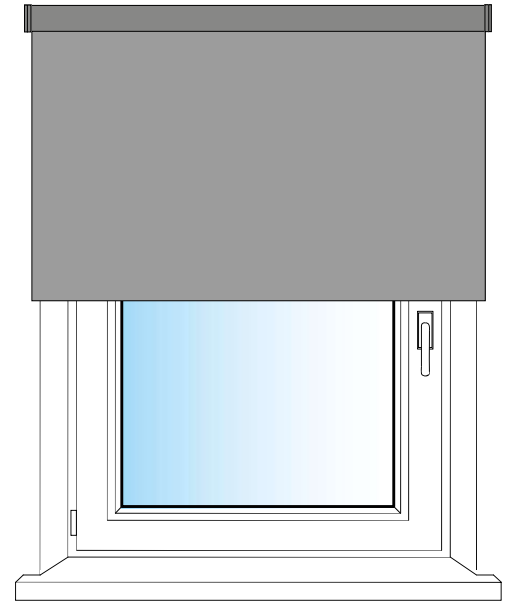

Measurements are given in millimetres (mm).



You specify the width of the fabric and height of the blind including the cassette.

Cassette with brackets is 78 mm high and 88 mm high.

The cassette will be wider by 46mm than the fabric.



Fig. 1

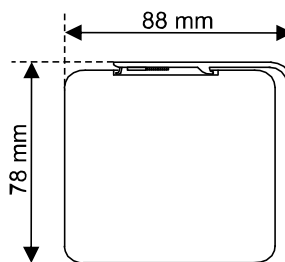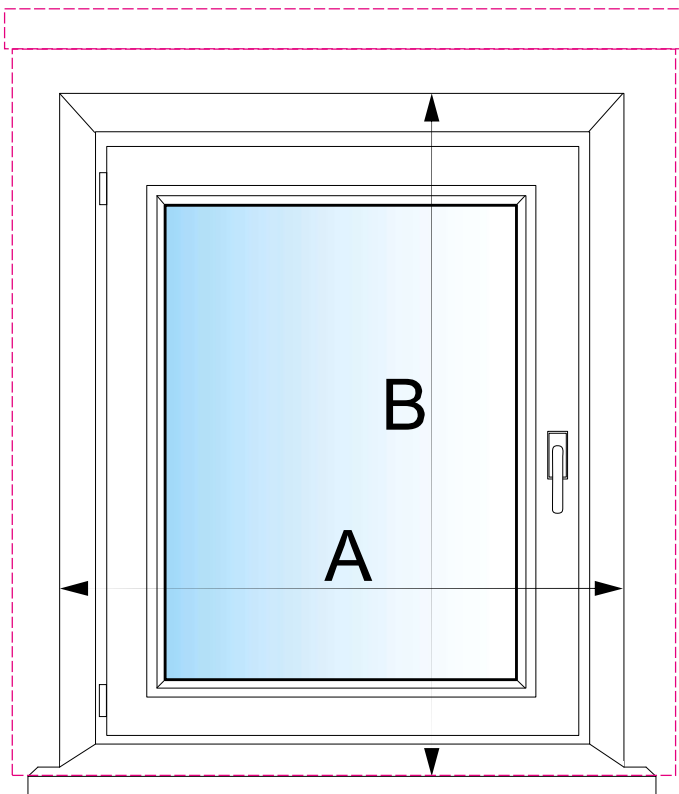

Measure the width and height of window recess Fig. 1

Enter the desired width, add the surplus of a fabric overlapping the wall on the right and left at your preference.

(e.g. 100 mm)

Example: A = 1500 mm
 $1500 + 100 = 1600$ mm

Specifying the desired height, add surplus depending on the height at which you want to mount the blind. (e.g. 200 mm).

Example: B = 1500 mm
 $1500 + 200 = 1700$ mm