


Installation instruction for Skylight Pleated Blind

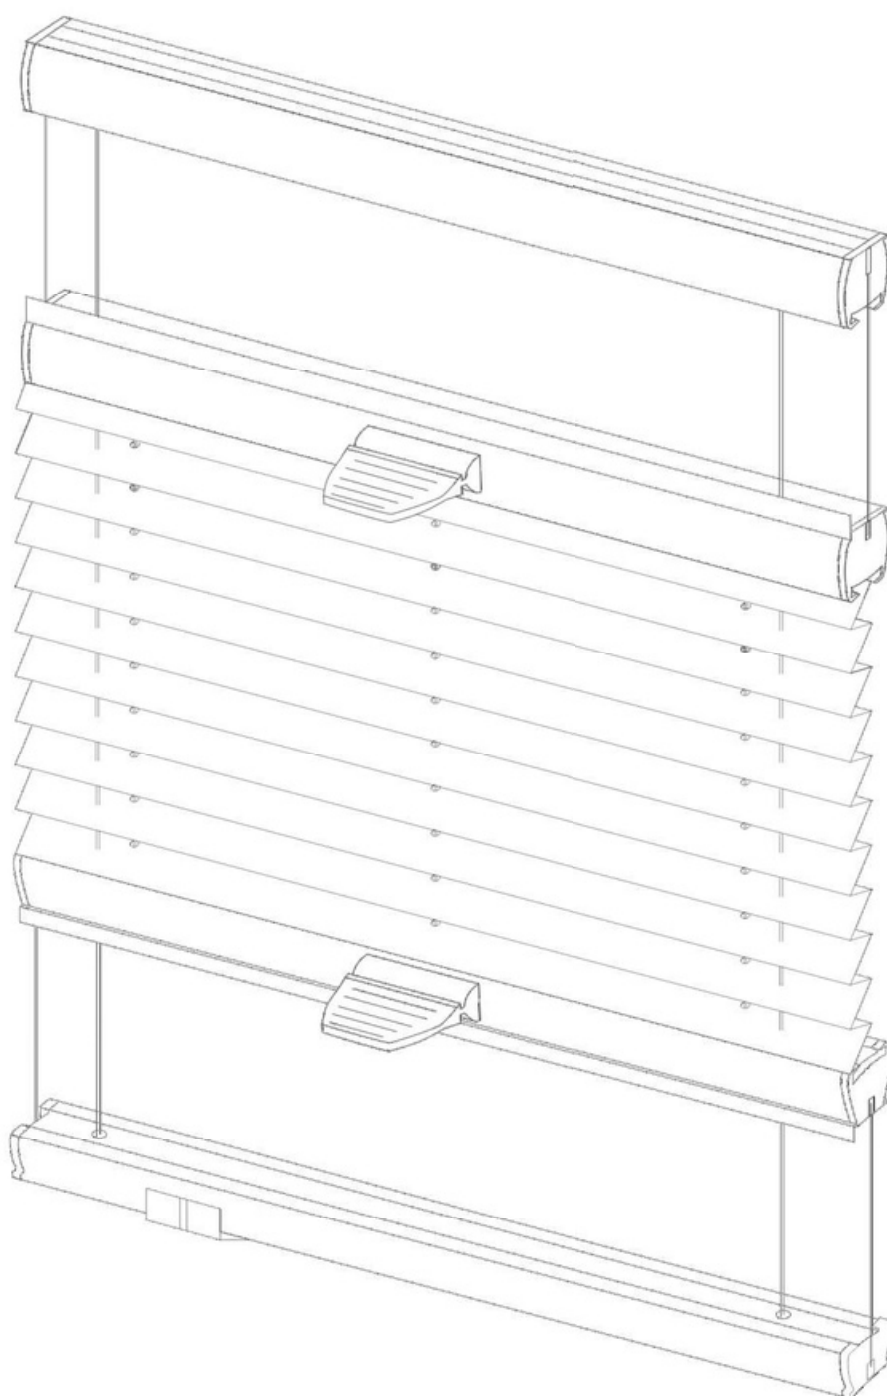


In set with blind you will find :

6 mounting clips


6 screws

2 handles for operating the pleat

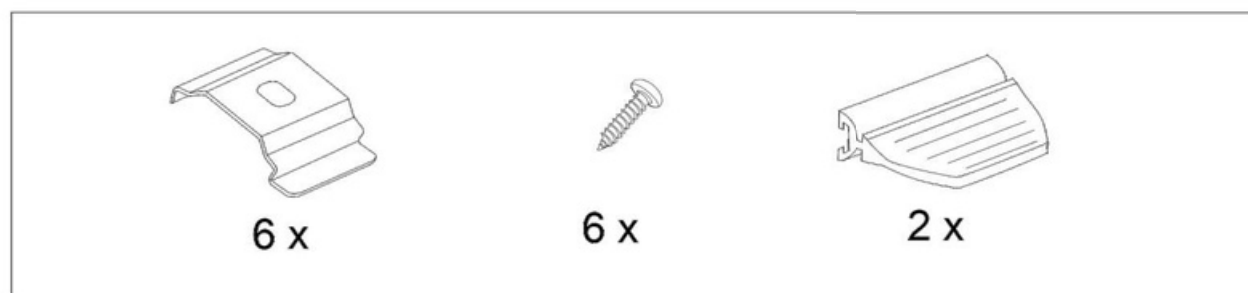


Step 1

Screw mounting clips according to below illustration. 3 clips at the bottom of the window and 3 at the top. The openings should be about 15 mm from the glass.

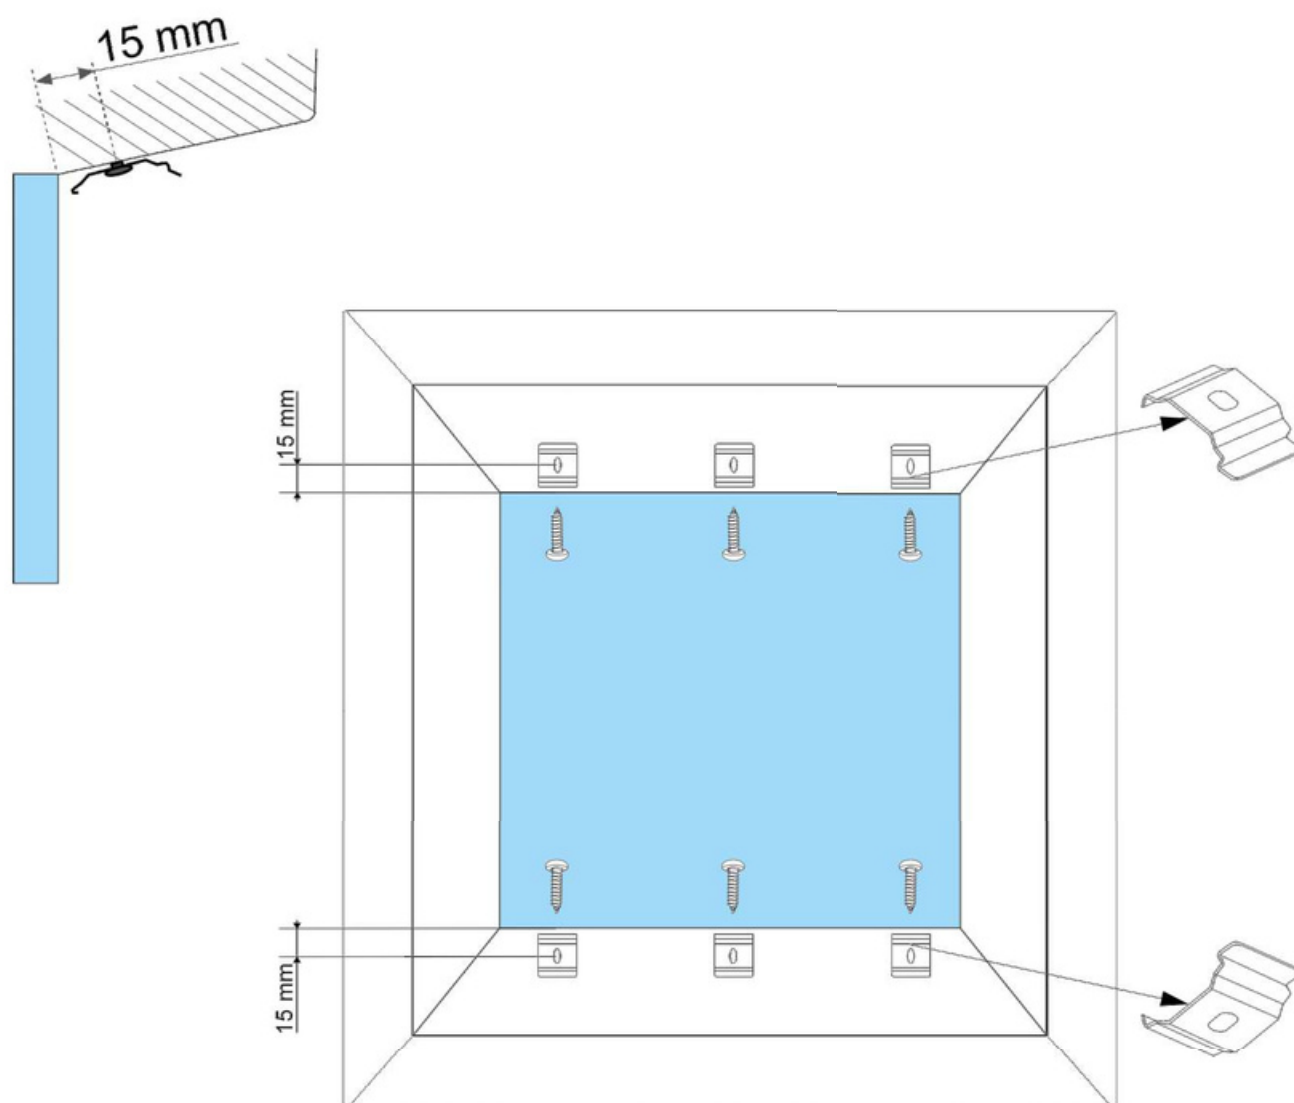


Step II

In mounted clips press bottom and top profil of the pleat. Next put on the handles for operating the pleat. Below illustration explain the way of installation.

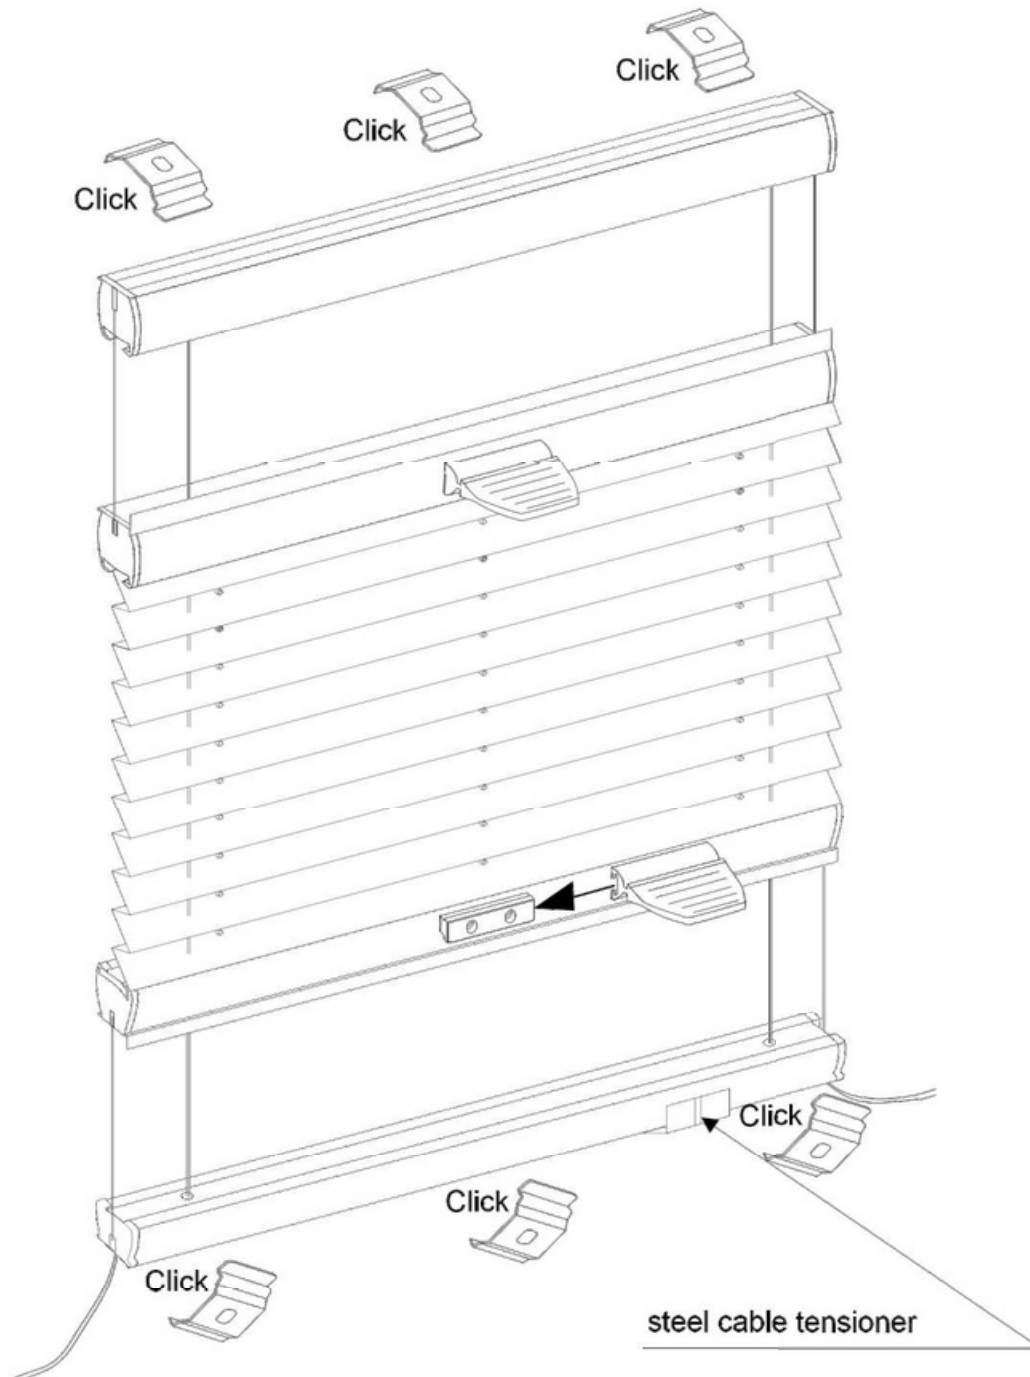

Step III

Adjust the optimal tension by moving the steel cable tensioner left or right. This line prevents the fabric from hanging.

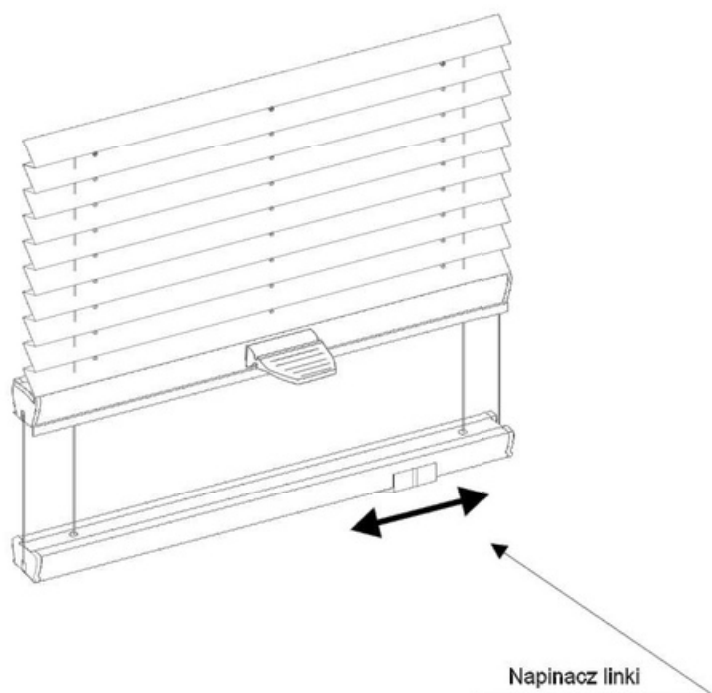

Step IV

If the pleat drops by itself or there is any resistance when closing and opening, it means that the string tension should be adjusted. To do this, move the knots in the bottom profile on the left and right sides. The last step is to cut off any excess strings.

