




Measuring instruction for non-invasive Roman Blinds mounted on window frame

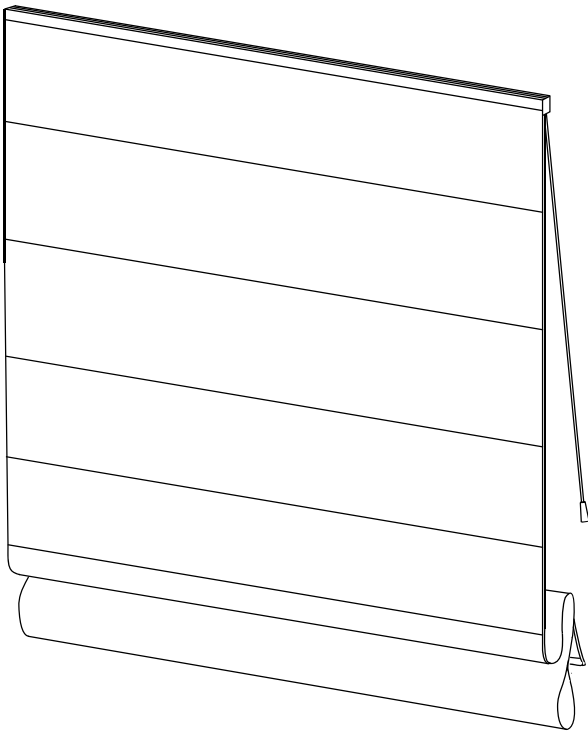

String mechanism

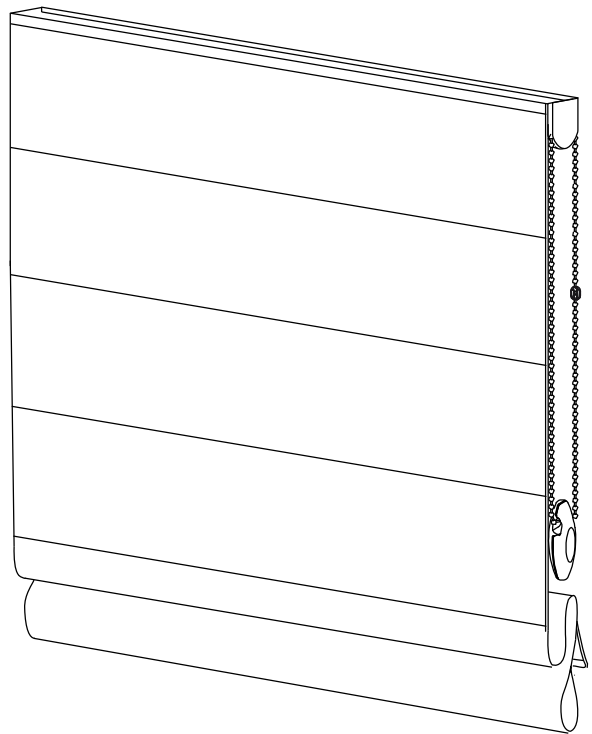

Beaded chain mechanism



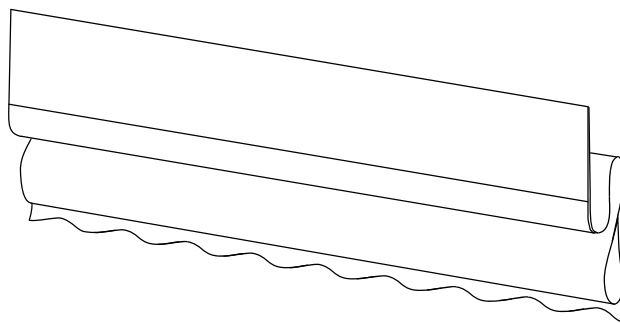


Frill option

Choose a window

Measure

Install

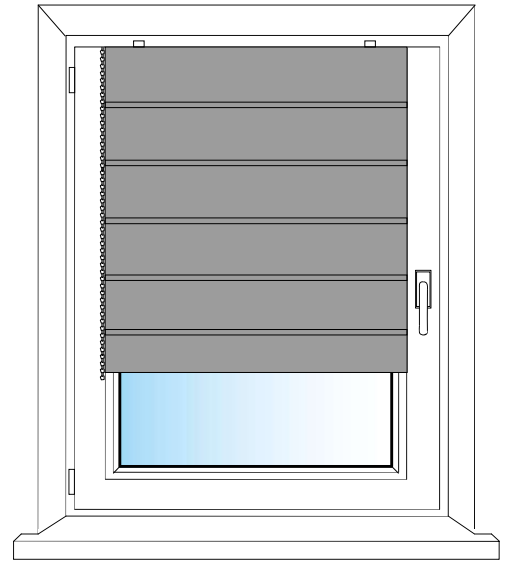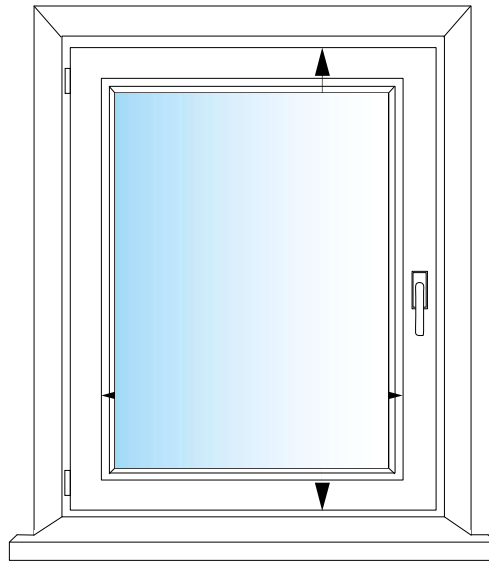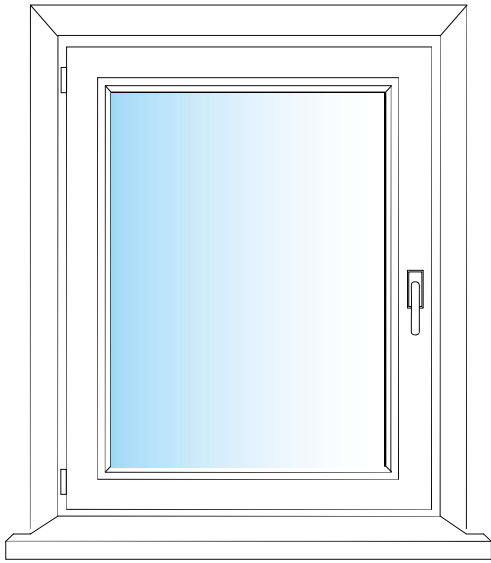

Measurements are given in centimetres (cm).
You specify the width and the height of the fabric.
Keep in mind that the folded blind takes about 20 to 30 cm.
Blind with additional frill will be higher by 8 cm.
Horizontal stitching is spaced about 20 to 25 cm.



Fig. 1

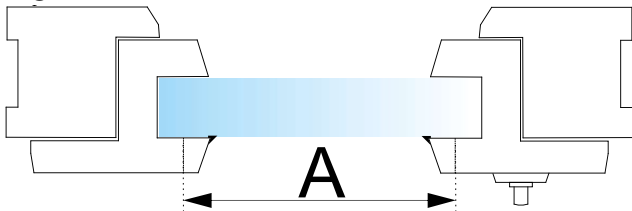


Fig. 2


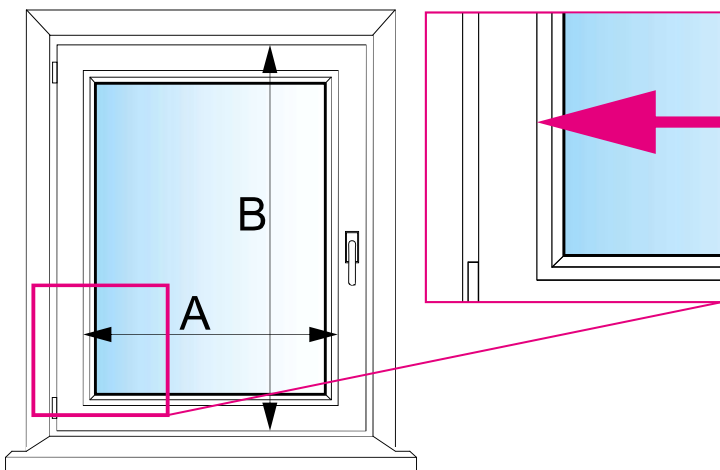


Fig. 3

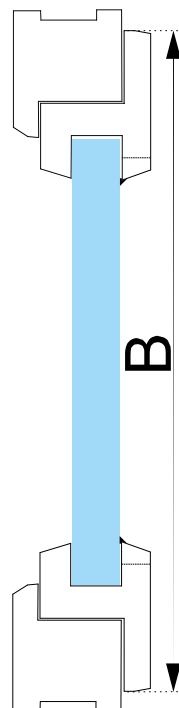

when measuring the width, check the distance between the outer edges of the frame around the glass. fig. 1,2

check the height of the window sash. Fig. 3

when specifying the desired dimensions, enter your measurements in the configurator:

Width = A

Height = B