



Assembly instructions for frame mosquito nets

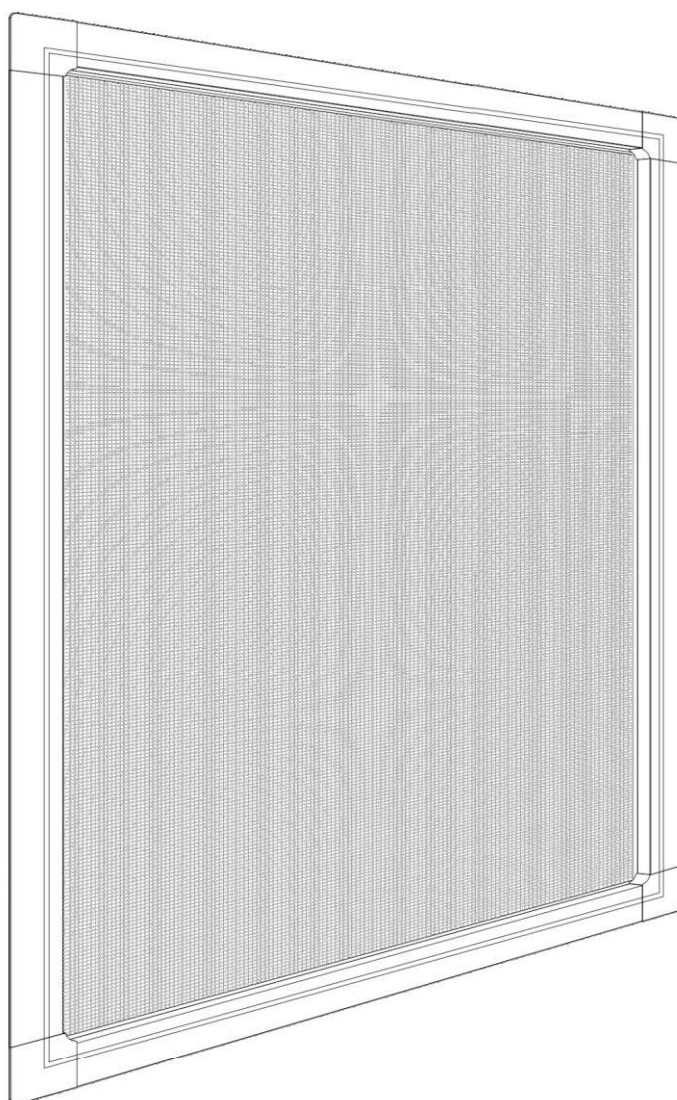


The set includes the following mounting elements:

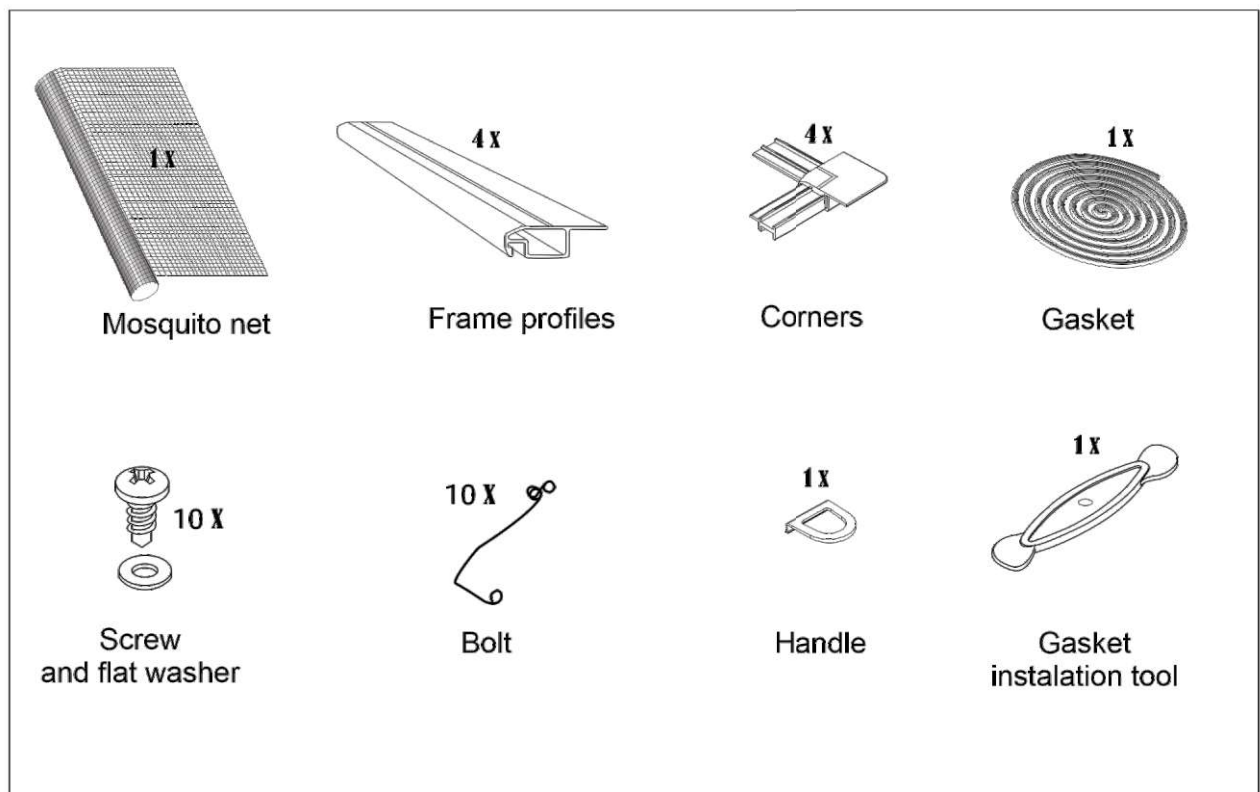


Stage 1

Slide the corners into the profiles to create a frame

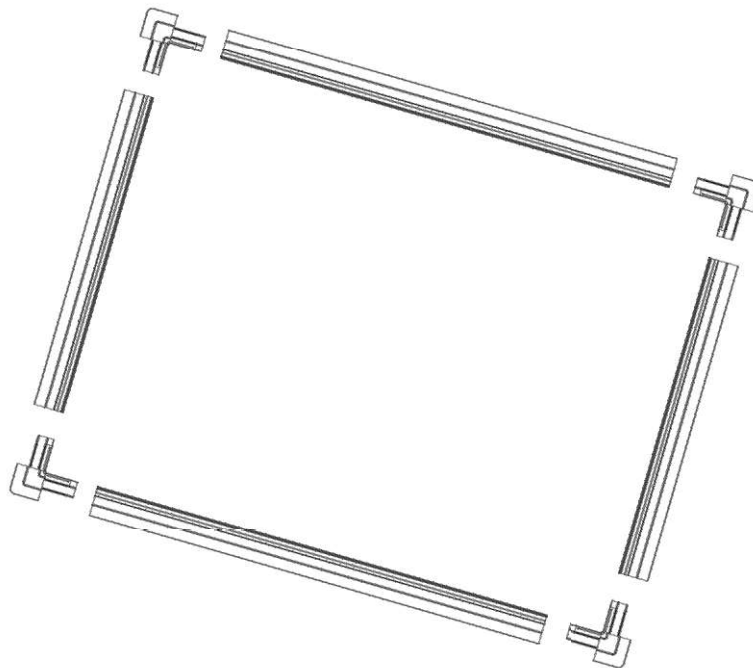


Stage 2

Use the seal installation tool to attach the seal to the frame by pushing it in. Do not stretch the mesh, as this may deform the frame.

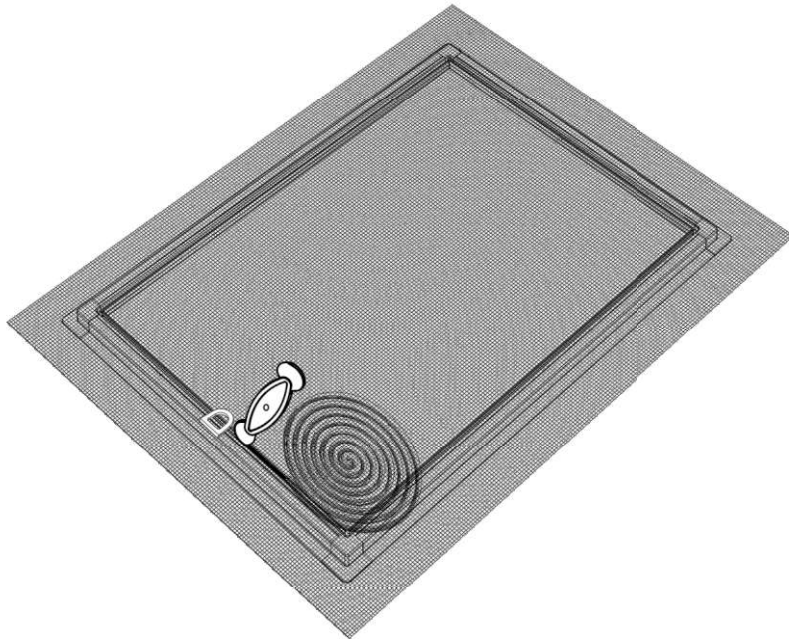

Stage 3


Try the mosquito net on the window and if everything is right cut off the excess net.

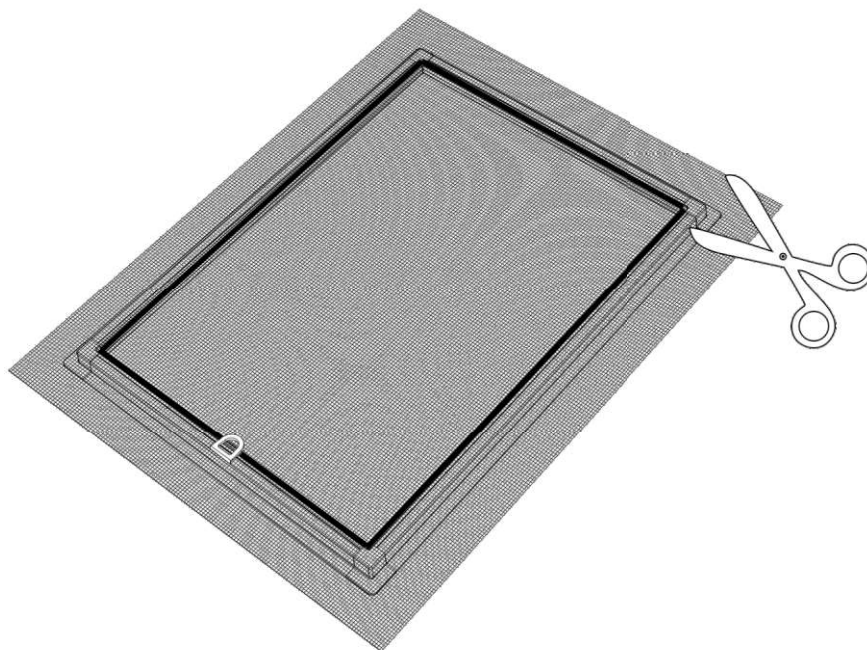


Stage 4

Depending on the type of window frame in your window, screw the bolts on the right side of the mosquito net frame. Use the screws provided for this. See the following illustrations.


Standard frame

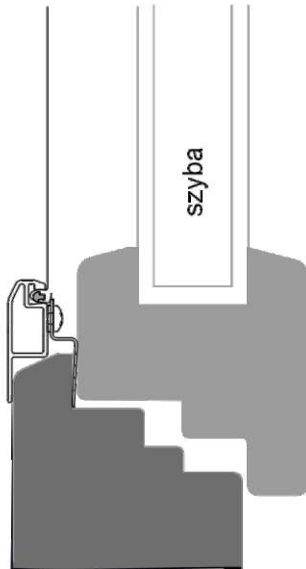


Flush frame

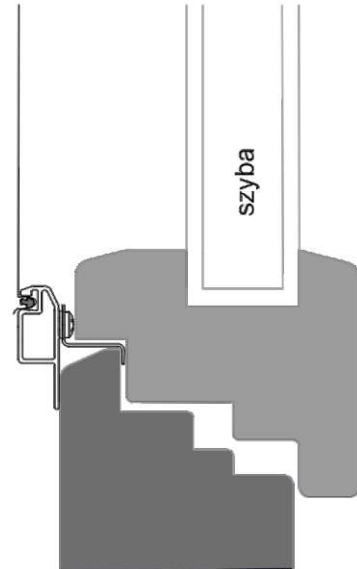

Standard frame

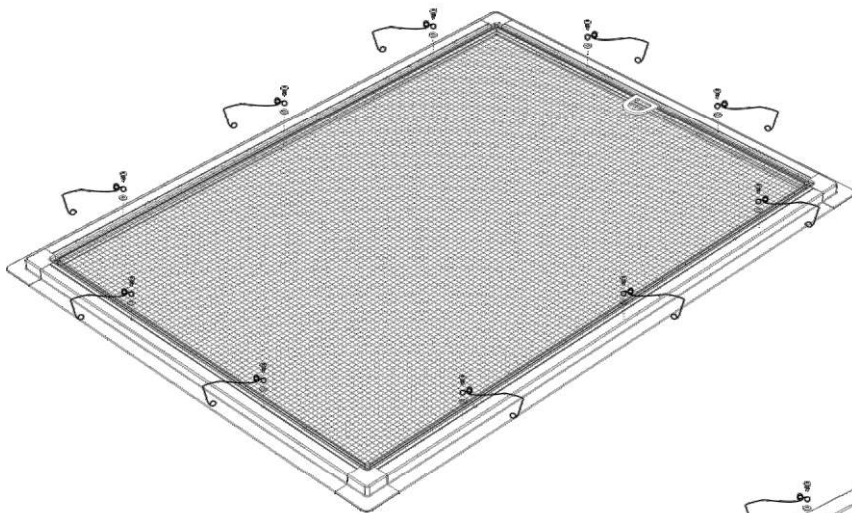


Flush frame

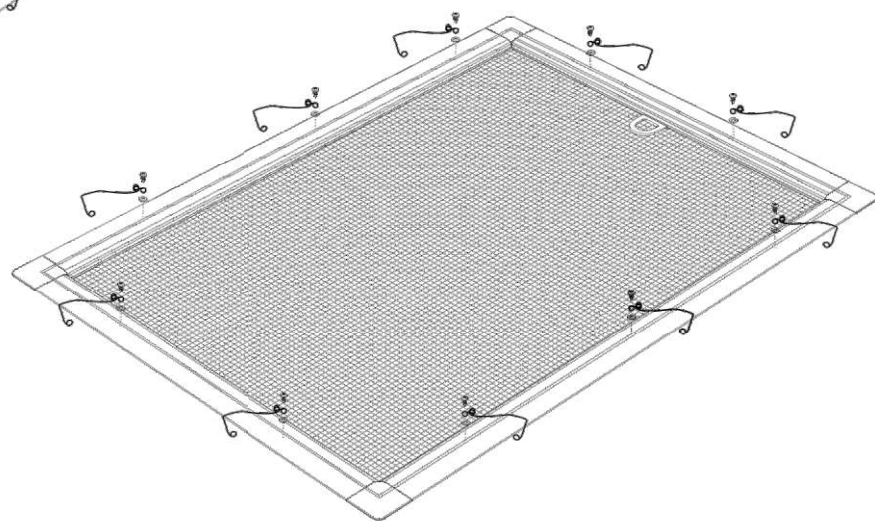

Stage 5

Mount the mosquito net and fasten the bolts behind the window frame. The following two illustrations show how the mosquito net looks from the outside depending on the type of window.

Standard frame

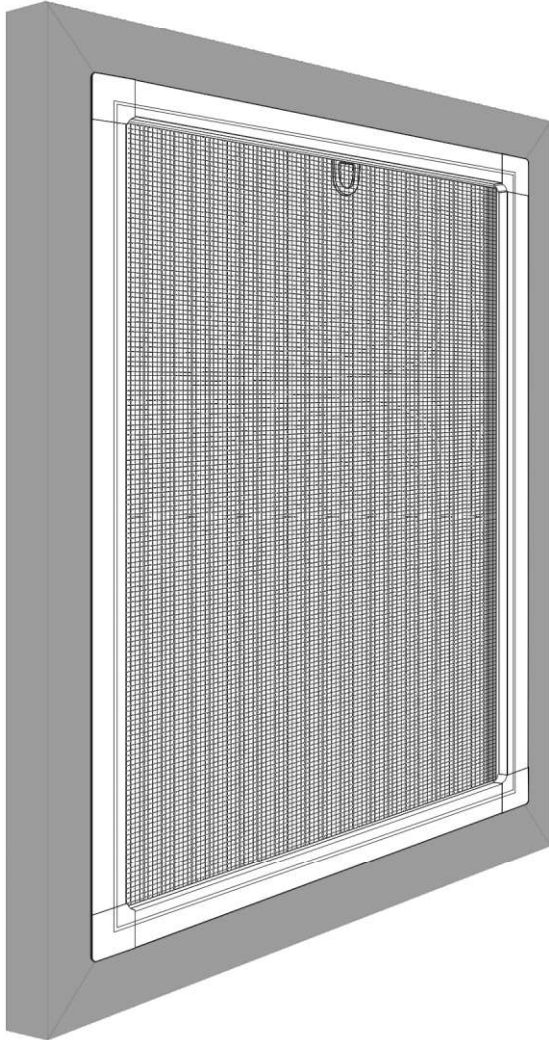

Flush frame

