





Measuring instruction for 25mm wooden blind mounted to the wall.

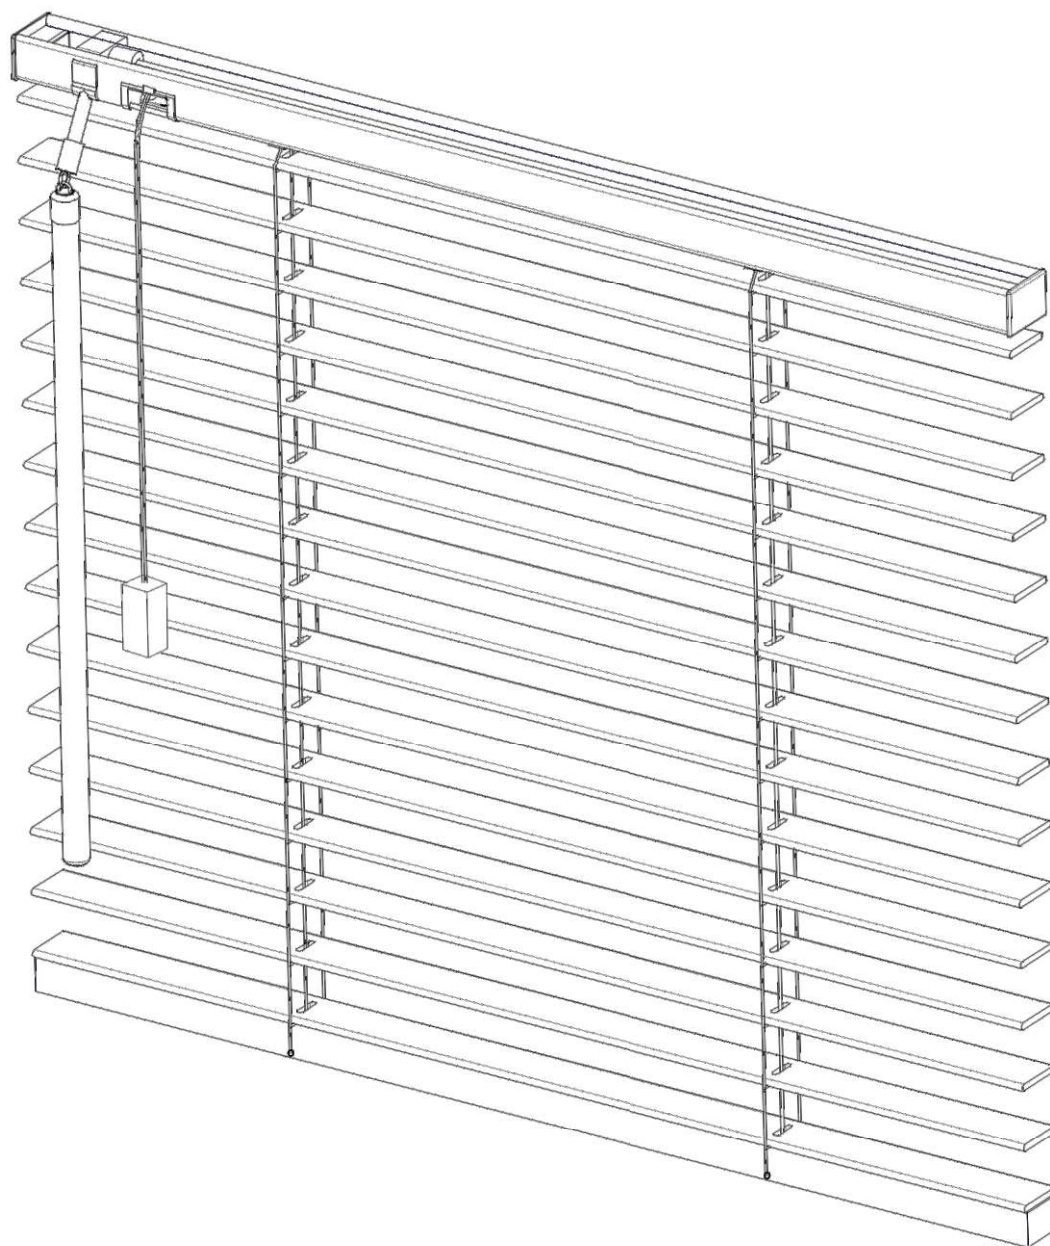

Choose the window


Measure

Install

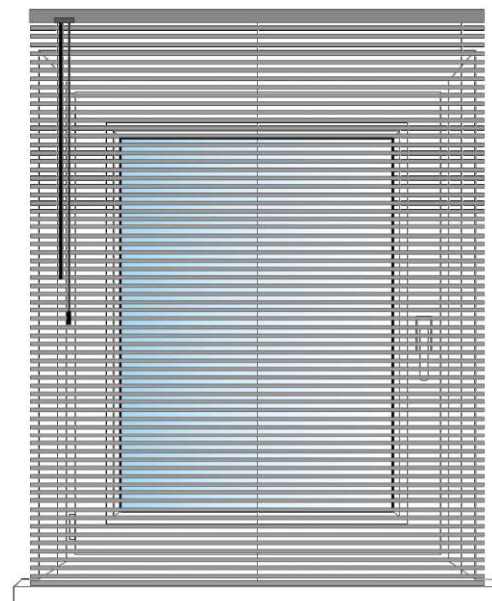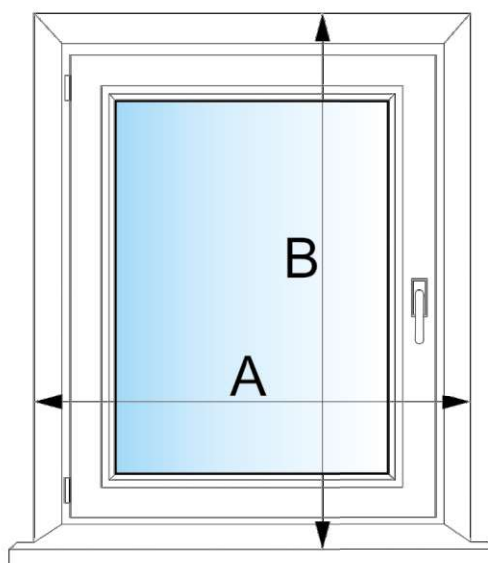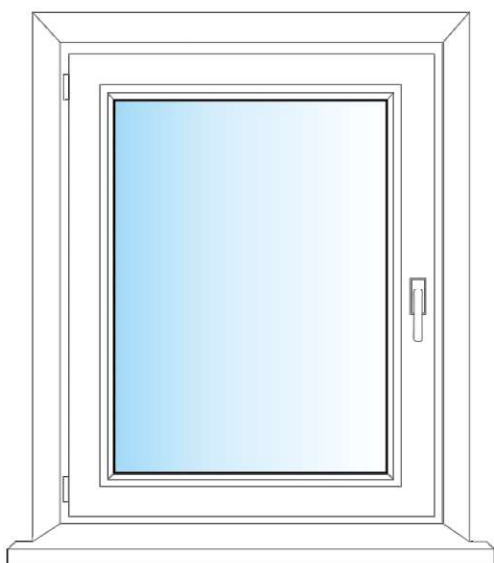

**Dimensions are provided in millimeters (mm).
Enter the width of the finished blind and the total height
of the blind.
Note the fact that after raising the blind a set of folded wooden
feathers will take about 13% of its height plus 5 cm.**

Pic. 1

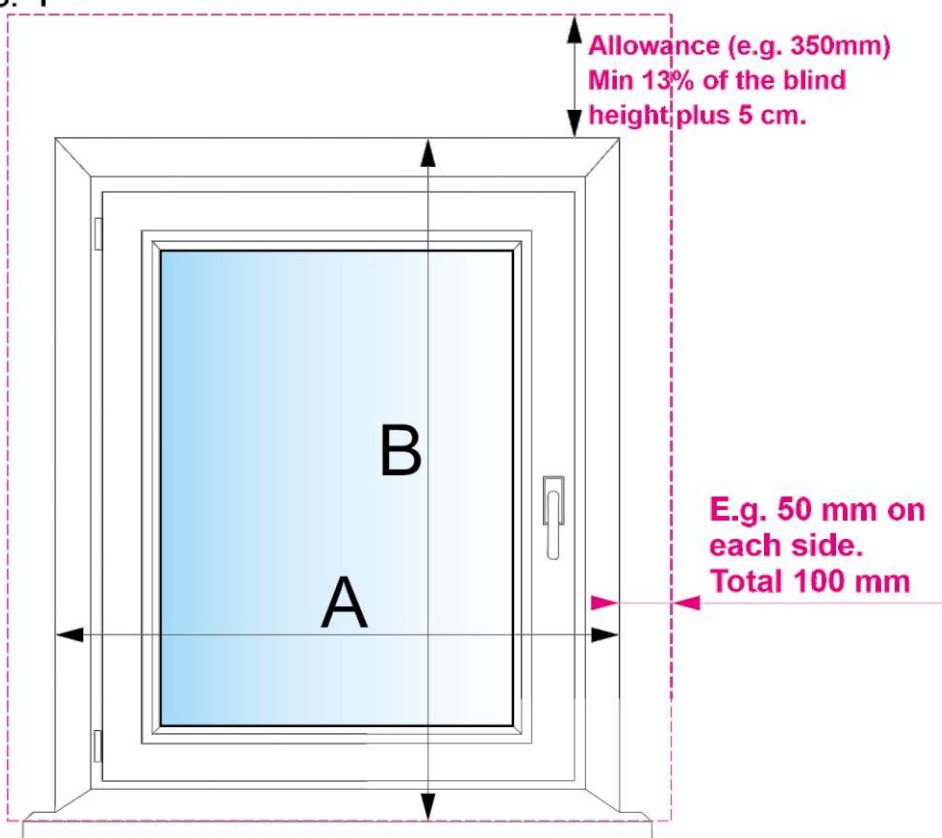

Measure the width and the height of the window recess.
Pic.1

Providing the desired width add allowance so that the blind overlaps the wall on the right and left at your preference (e.g. 100mm)

Example: A = 1250 mm

1250 + 100 = 1350 mm.

Providing the desired height add allowance depending on the height at which you want to mount the blind (e.g. 350 mm). A minimum of 10% of the blind height plus 7cm.

Example: B = 1500 mm

1500 + 350 = 1850 mm.