


Measuring instruction for 50mm wooden blinds for skylight windows.


Mounting to the wall, in front of the attic recess.

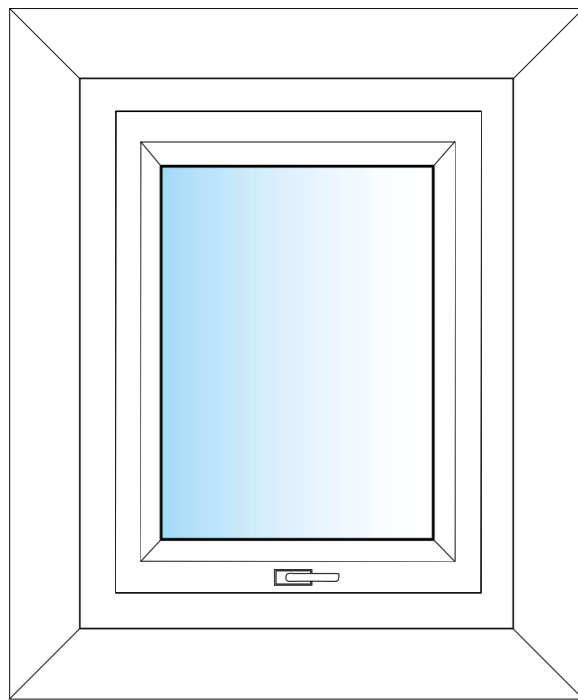

Skylight window before the installation



Skylight window after mounting the 50mm wooden blind to the wall in attic

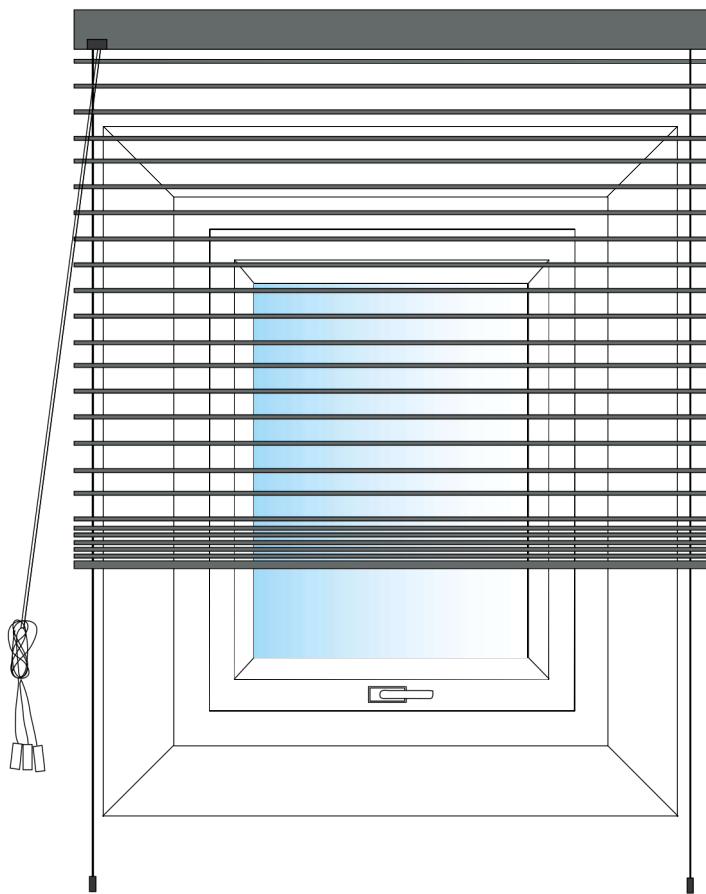


Measurements are given in centimetres (cm).



You specify the width and the height of the whole wooden blind.

Pay particular attention to the fact that when the blind is raised, a set of folded wooden slats will take up approximately 10% of its height plus 8cm.

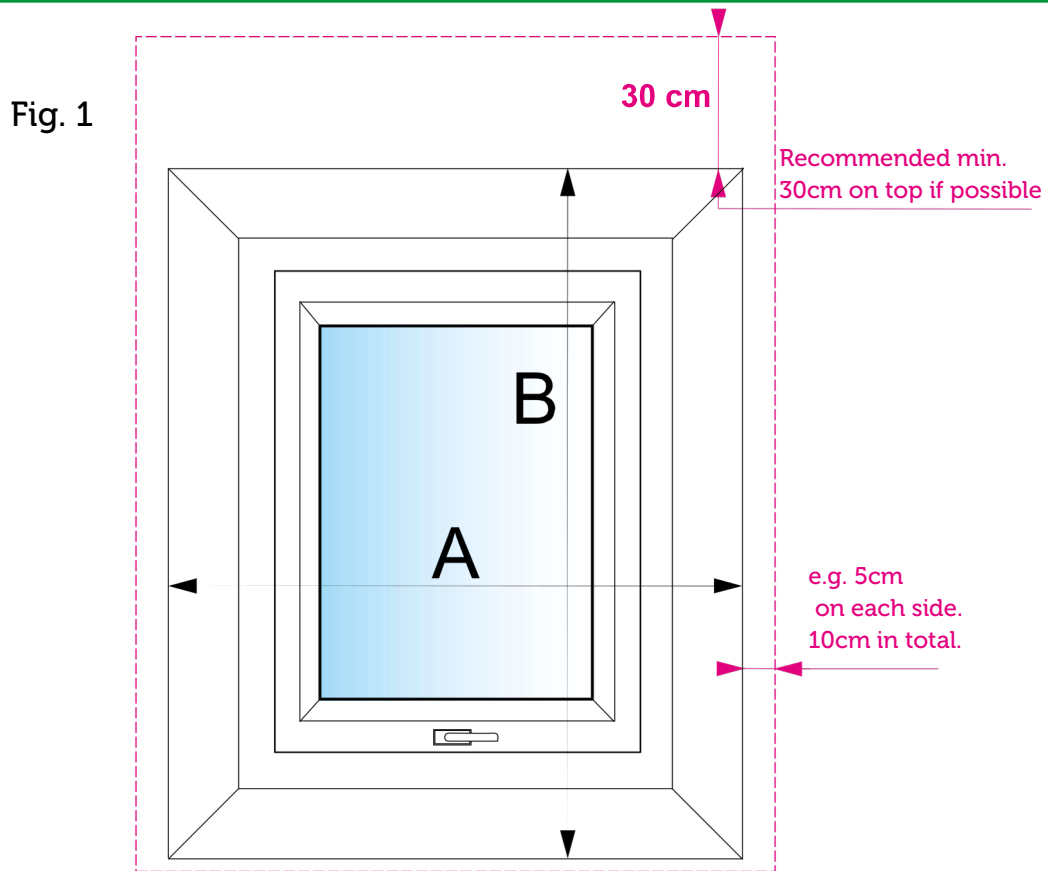

Measure the width and height of the window recess (wall opening).

Fig. 1

When specifying the desired width, add a minimum of 5 cm on the left side and 5 cm on the right side.

Total 10cm.

Example: A= 85cm

$$85+10= 95\text{cm}$$

Given the desired height, add 30cm at the top and a few cm at the bottom. At your preference e.g. 2cm.

Total approximately 32cm.

Example: B= 143cm

$$143+32= 175\text{cm}$$