





Messuring instructions for Roman blinds Basic mounted to the wall.

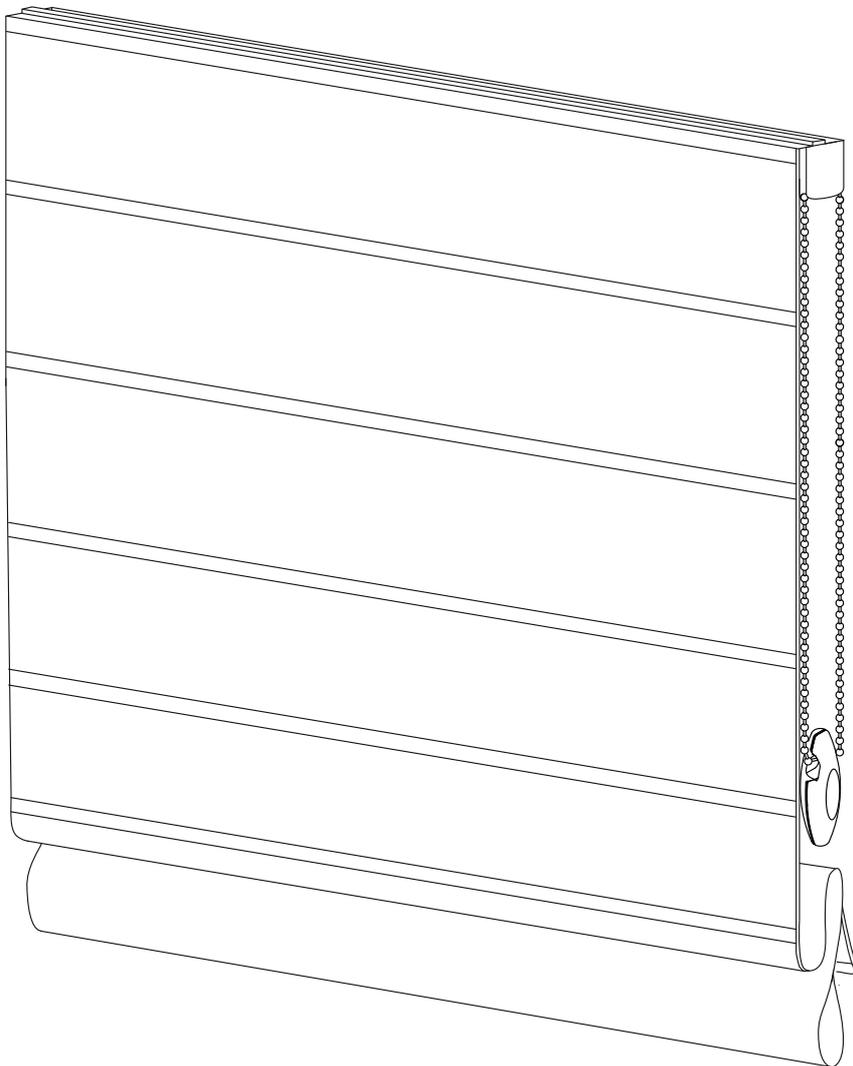

Select window

Measure

Install

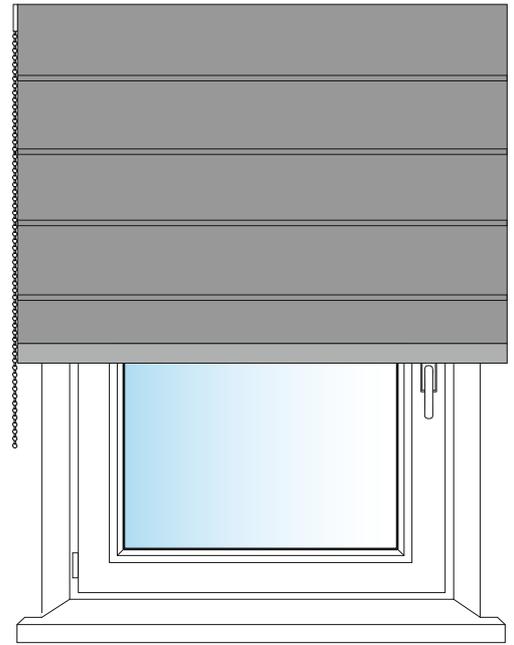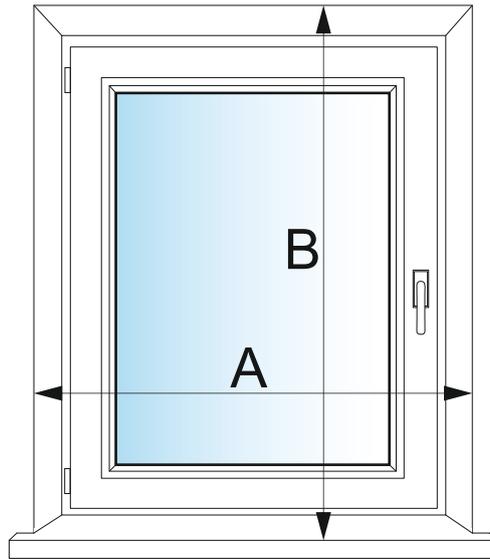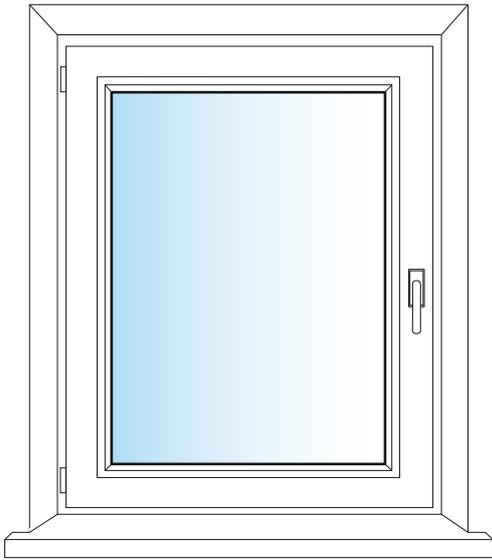

Dimensions are provided in millimetres (mm).




Enter the width of the fabric and the height of the fabric.

Keep in mind that the folded blind takes about 300 mm (30 cm).

Horizontal stitching is spaced 200 mm apart from the top (20 cm).

Fig. 1

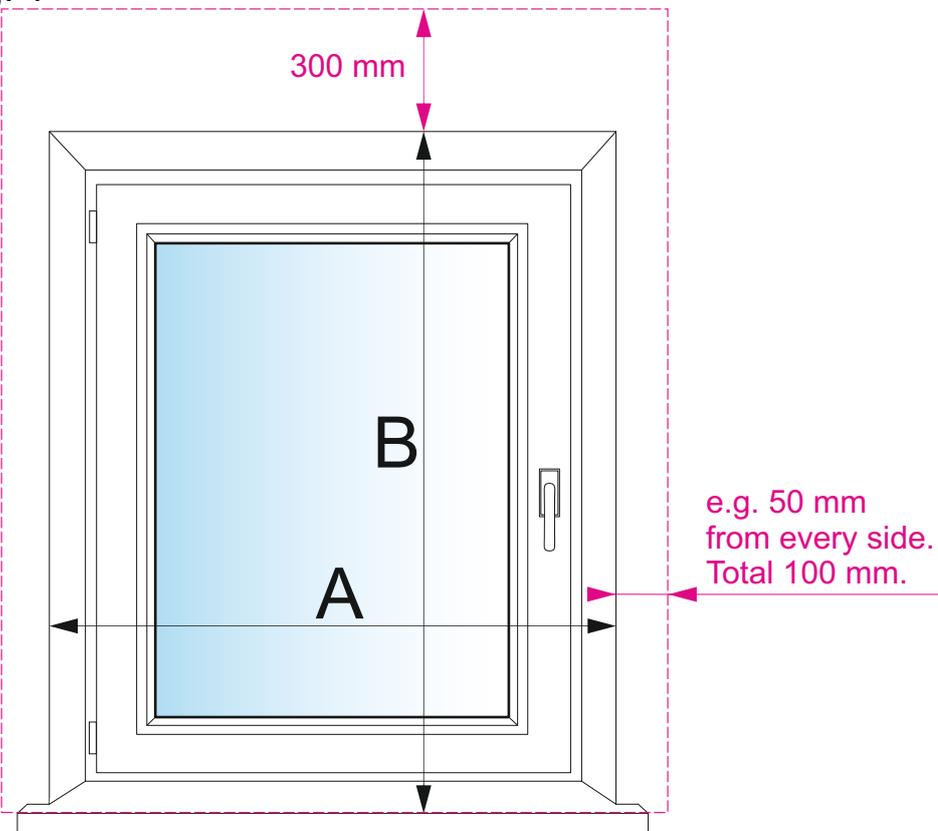

Measure the width and height of the window recess. Fig. 1.

Enter the desired width, add the surplus of a fabric overlapping the wall on the right and left at your preference. (e.g. 100 mm.).

Example: A = 1250 mm

1250 + 100 = 1350 mm.

Specifying the desired height, add surplus depending on the height at which you want to mount the blind.

(e.g. 300 mm.).

Keep in mind that the folds of the blind are around 300 mm (30 cm).

Example: B = 1500 mm

1500 + 300 = 1800 mm.