





Measuring instruction for 25mm wooden blinds mounted in a window recess.

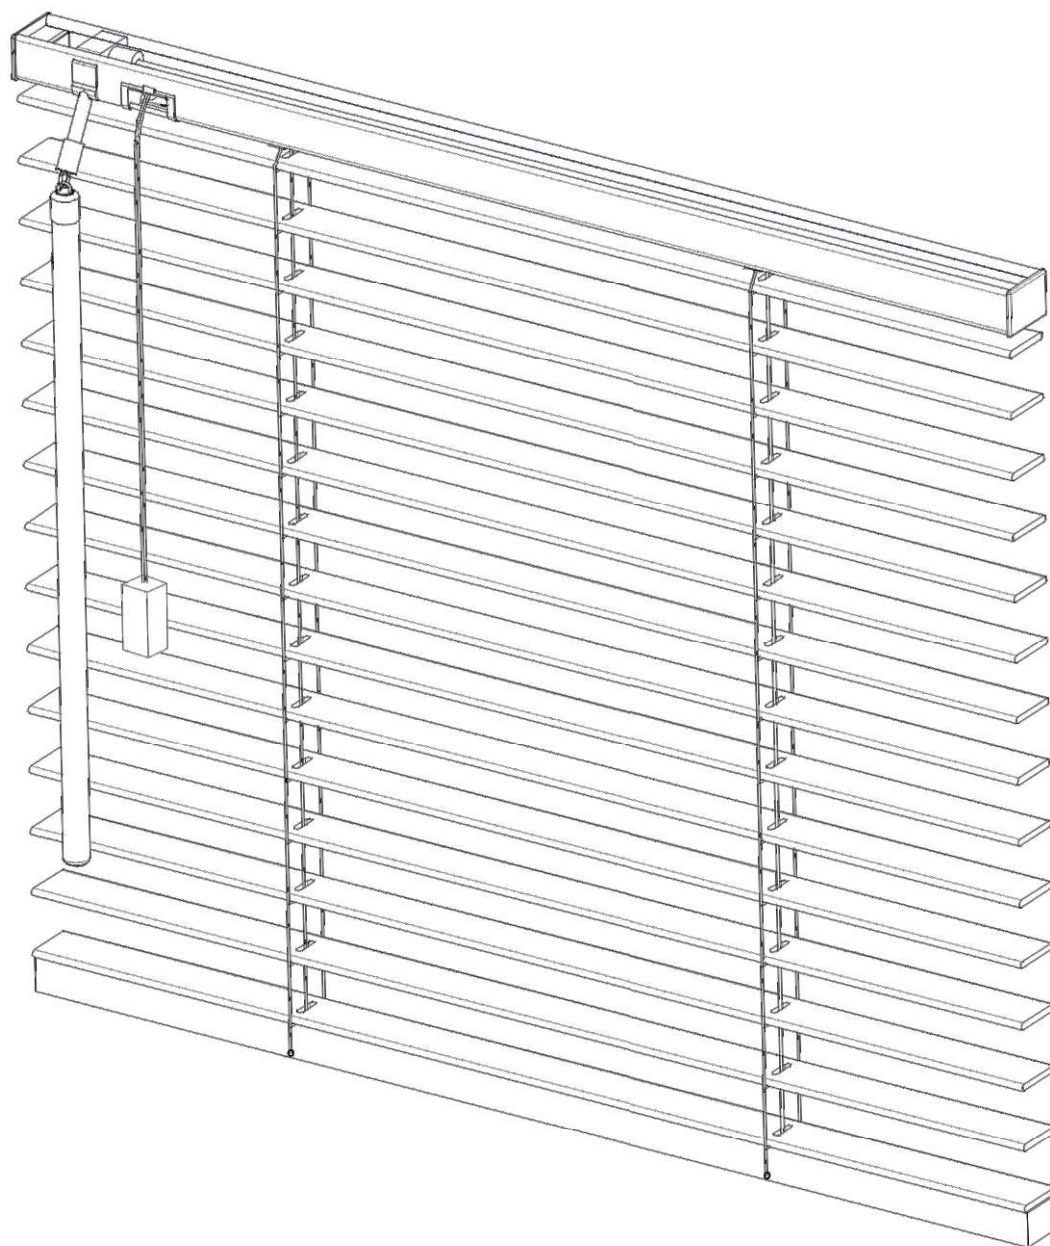

Choose the window

Measure

Install

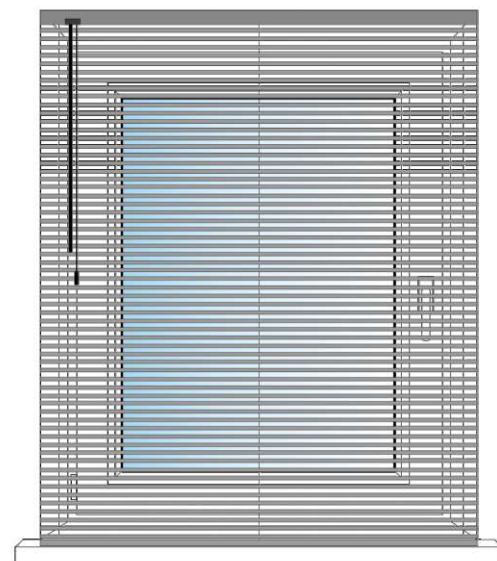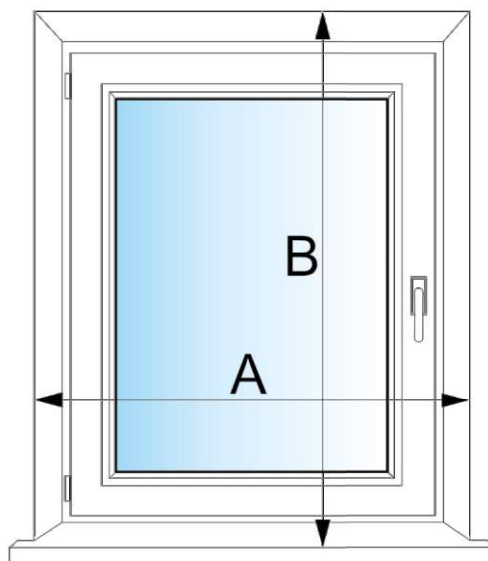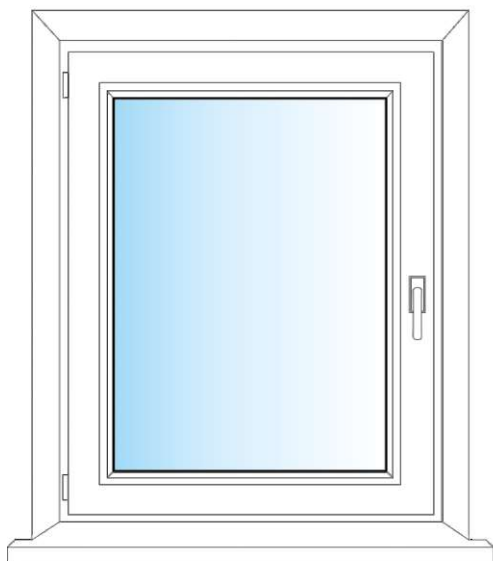


Dimensions are provided in millimeters (mm).



Enter the width of the finished blind and the total height of the blind. Note the fact that after raising the blind, a set of folded wooden feathers will take about 13% of its height, plus 5 cm.

To get accurate measurements, measure the width of the window recess in at least 3 places: top, middle, bottom (A1, A2, A3) Pic. 1

Pic. 1

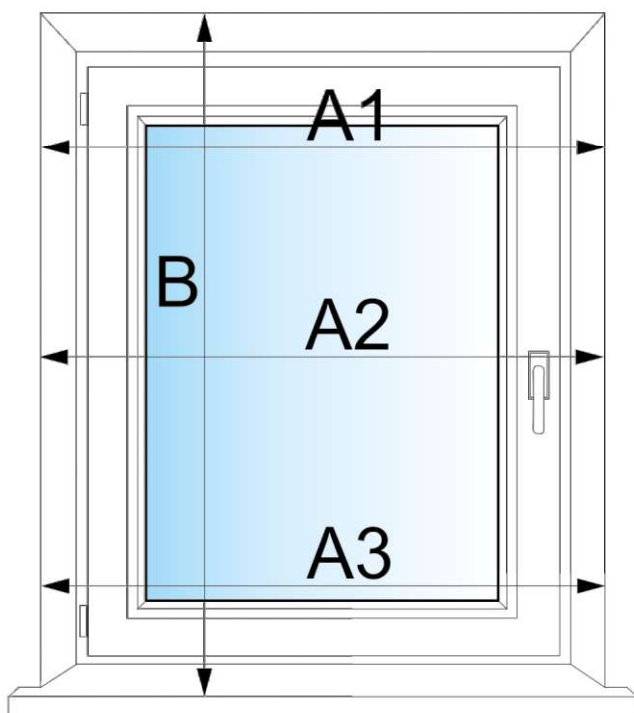

Measure the height of the window recess in the highest place. Pic.1

Providing the desired width, enter in the configurator the **smallest** value obtained from measurements A1, A2, A3, minus **10 mm**.

Example: A = 1250 mm

1250 - 10 = 1240 mm.

Providing the desired height enter in the configurator the value obtained from measurement B minus **3 mm**.

Example: B = 1500 mm

1500 - 3 = 1497 mm.