





Measurement instructions for 50 mm wooden blinds mounted in a window recess

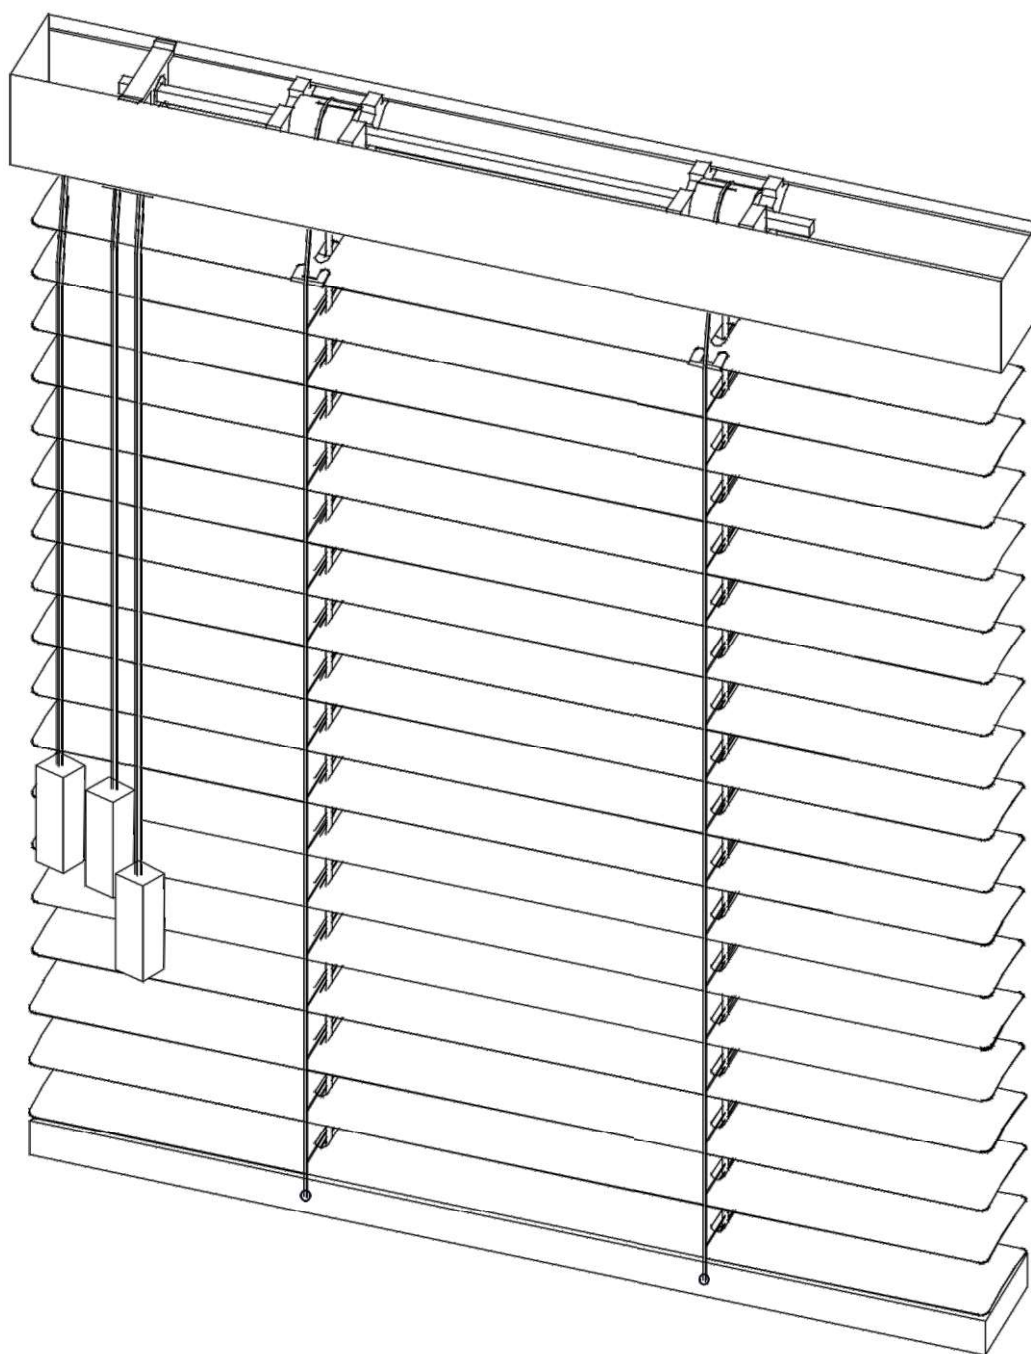

Select the window


Take the measurement

Mount the blind

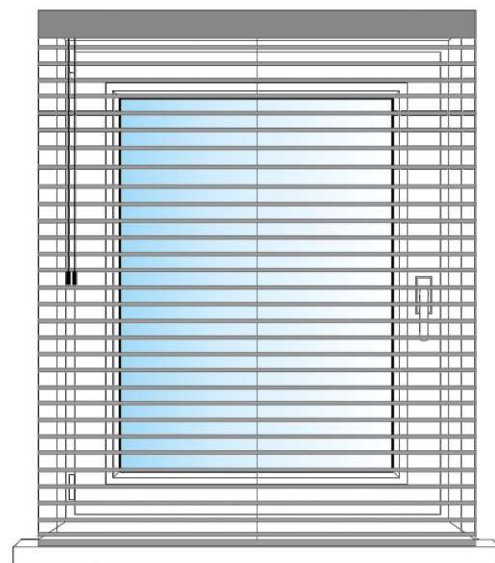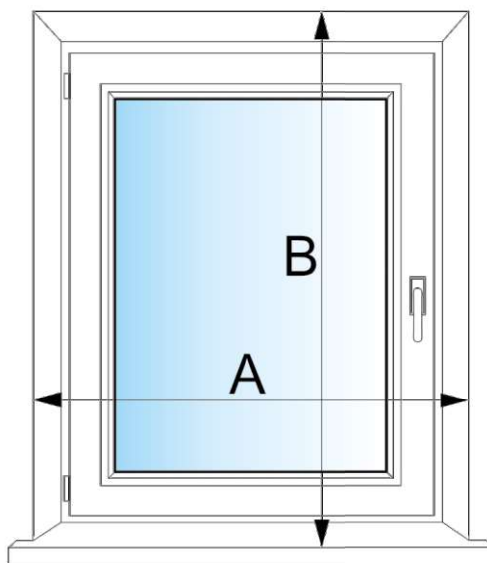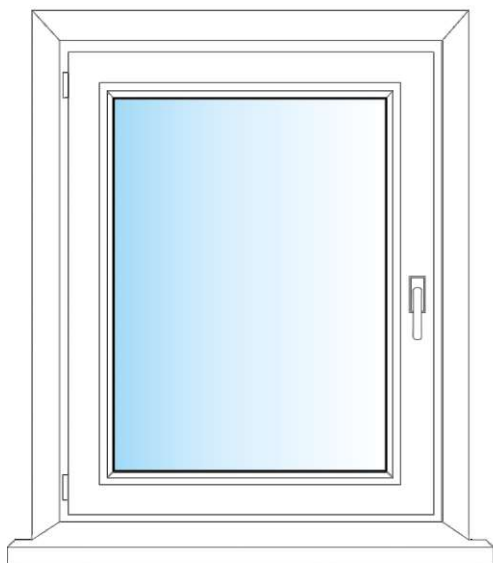

Dimensions are provided in millimetres (mm). Enter the width of the finished blind and the total height of the blind. Note the fact that after raising the blind, a set of folded wooden feathers will take about 10% of its height, plus 70 mm (7 cm).

Fig. 1

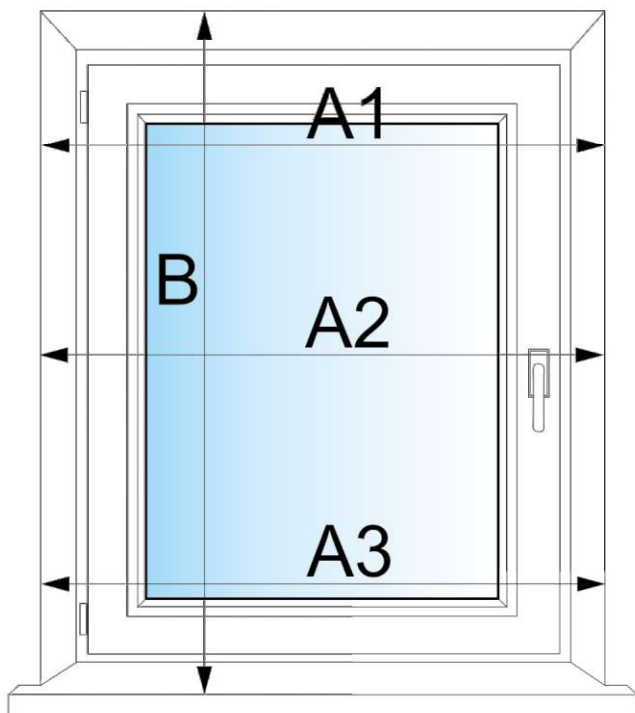

To get accurate measurements, measure the width of the window recess in at least 3 places; top, middle and bottom (A1, A2, A3). Fig. 1

Measure the height of the window recess in the highest place Fig. 1

Providing the desired width, enter in the configurator the **smallest** value obtained from measurements A1, A2, A3, **minus 10 mm**.

Example: A = 1250 mm

1250 - 10 = 1240 mm.

Enter the desired height in the configurator, the value obtained from measurements B **minus 3 mm**.

Example: B = 1500 mm

1500 - 3 = 1497 mm.