




## Measurement instructions for 50 mm wooden blinds mounted to the wall

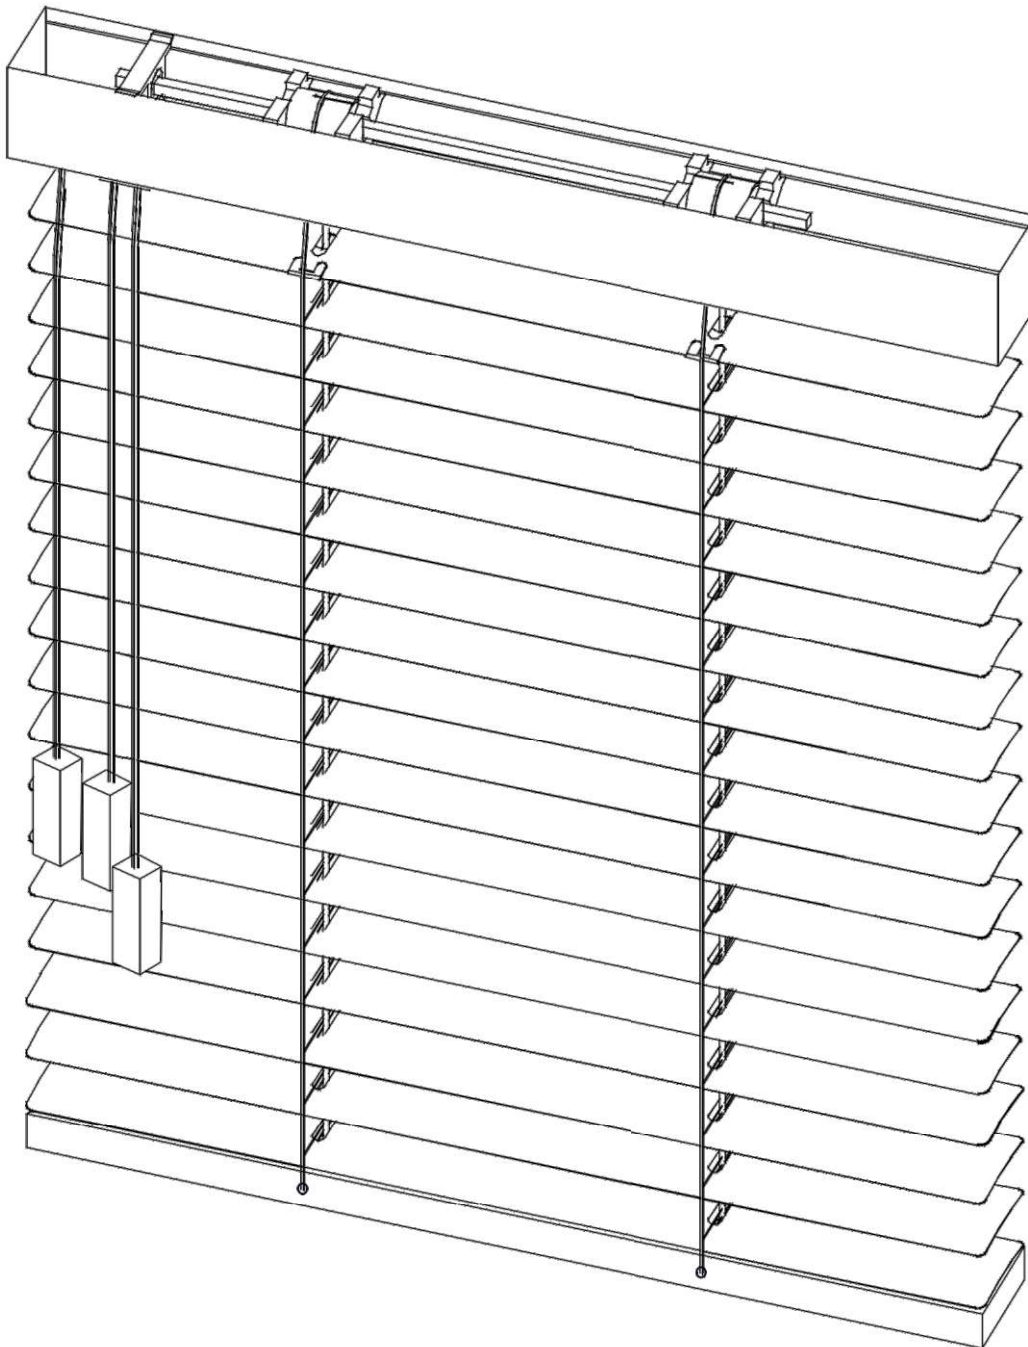


### Select the window

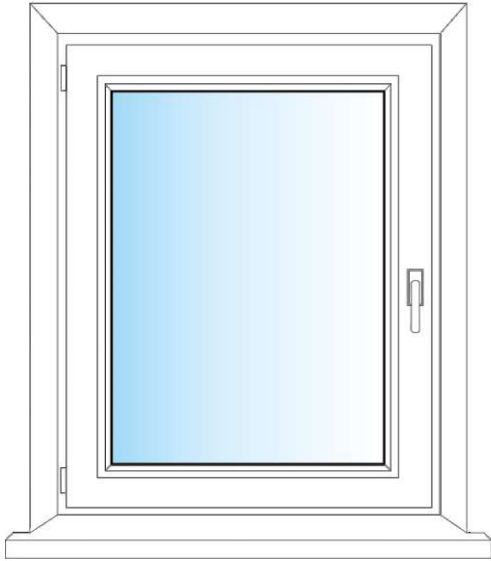

### Take a measurement

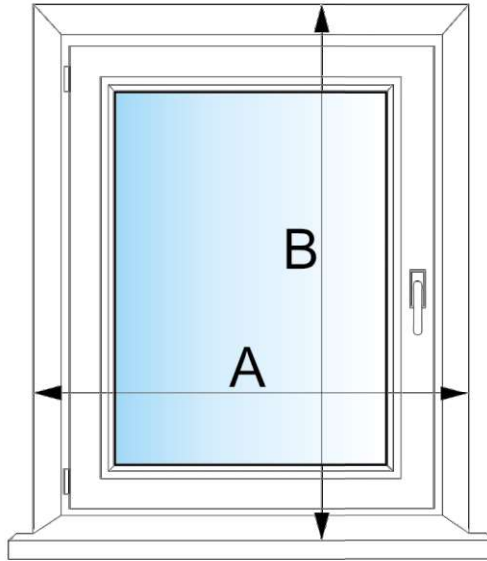

### Mount the blind

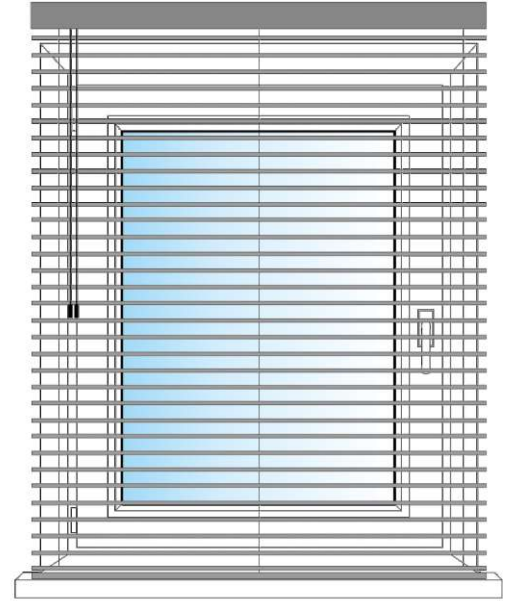


Dimensions are provided in millimetres (mm).



Enter the width of the finished blind and the total height of the blind.

Note the fact that after raising the blind, a set of folded wooden feathers will take about 10% of its height, plus 70 mm (7 cm).

Fig. 1

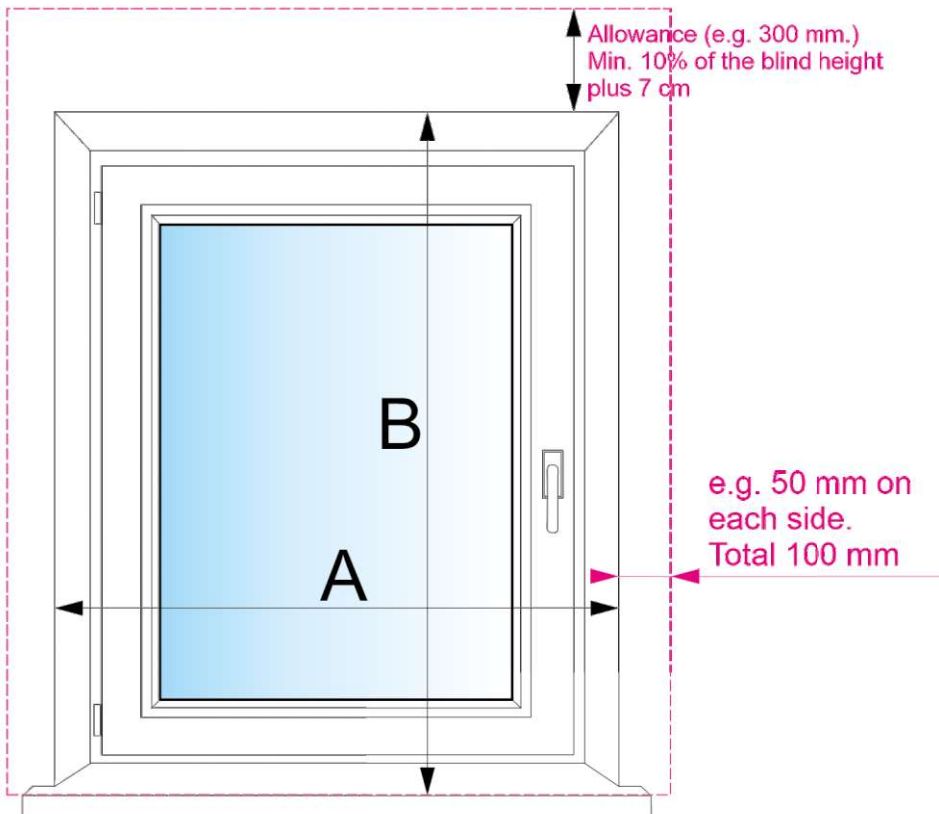

Measure the width and height of the window recess. Fig. 1

Providing the desired width, add allowance so that the blind overlaps the wall on the right and left at your preference (e.g. 100 mm.)

**Example: A = 1250 mm**

$$1250 + 100 = 1350 \text{ mm.}$$

Providing the desired height, add allowance depending on the height at which you want to mount the blind (e.g. 300 mm.)

A minimum of 10% of the blind height plus 7 cm.

**Example: B = 1500 mm**

$$1500 + 300 = 1800 \text{ mm.}$$