





Measuring instructions for free-hanging Day and Night blinds mounted to the wall

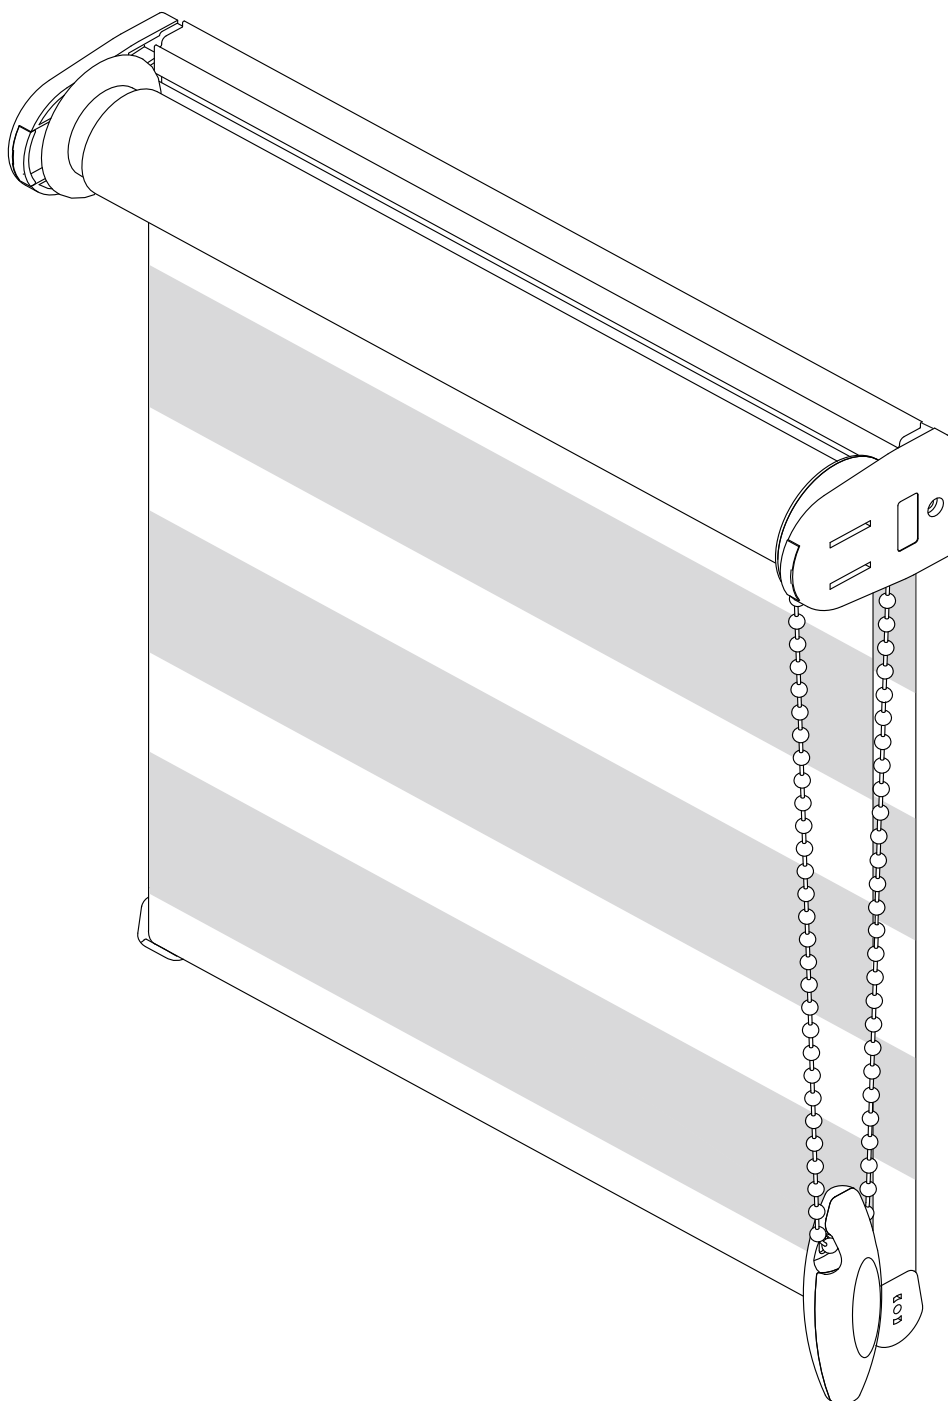

select window

measure

install

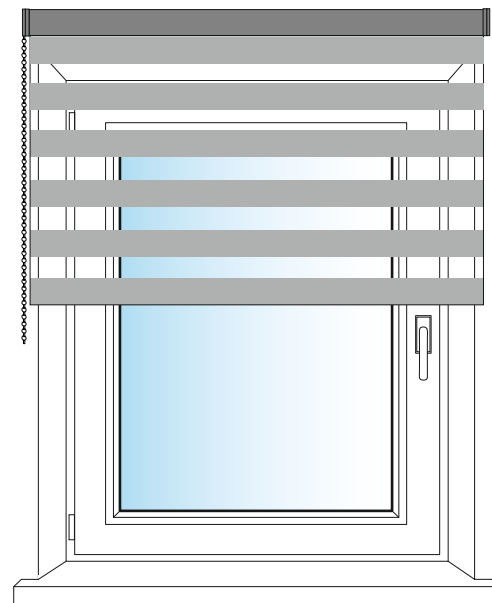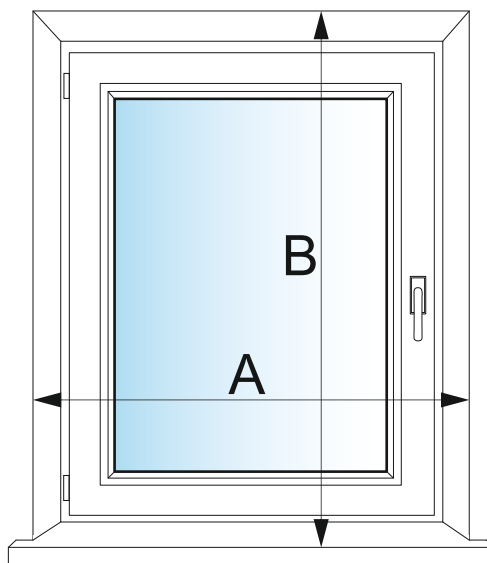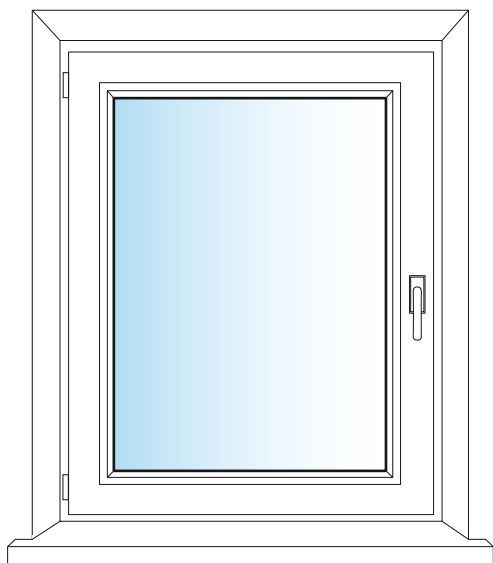


Dimensions must be provided in millimetres (mm).



Enter the width of the fabric and the height of the blind.

The roller blind will be wider by 45 mm. This is the width of the controlling mechanism with the hooks.

Fig. 1

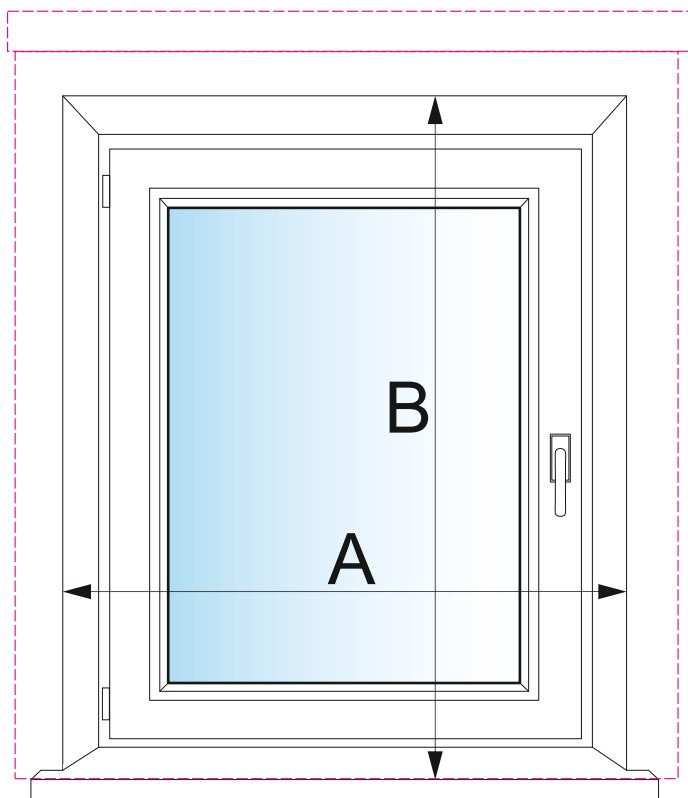

Measure the width and height of the window recess. Fig. 1.

Providing the desired width, add an excess of fabric overlapping the wall on the right and left, at your choice (e.g. 100 mm.)

Example: A = 1250 mm

1250 + 100 = 1350 mm.

Adding the desired height, add surplus depending on the height where you want to install the blind (e.g. 200 mm)

Example: B = 1500 mm

1500 + 200 = 1700 mm.