

**Measurement instructions
for Screen Blind
Mounted to the window
frame, from external side.**



Dimensions are given in millimeters (mm).

Side guides and lower profile of Screen Blind have 33mm width.

The Cassette have 47mm of height. This should be taken during the measurement.




The width of the order is width of the outside width of the Blind and the side guides.

The height of the order is height of entire Screen Blind, including top cassette and lower profile.

if the window sash is fitted with a drip cap that extends outwards, it is impossible to install Screen Blind.

Figure 1.

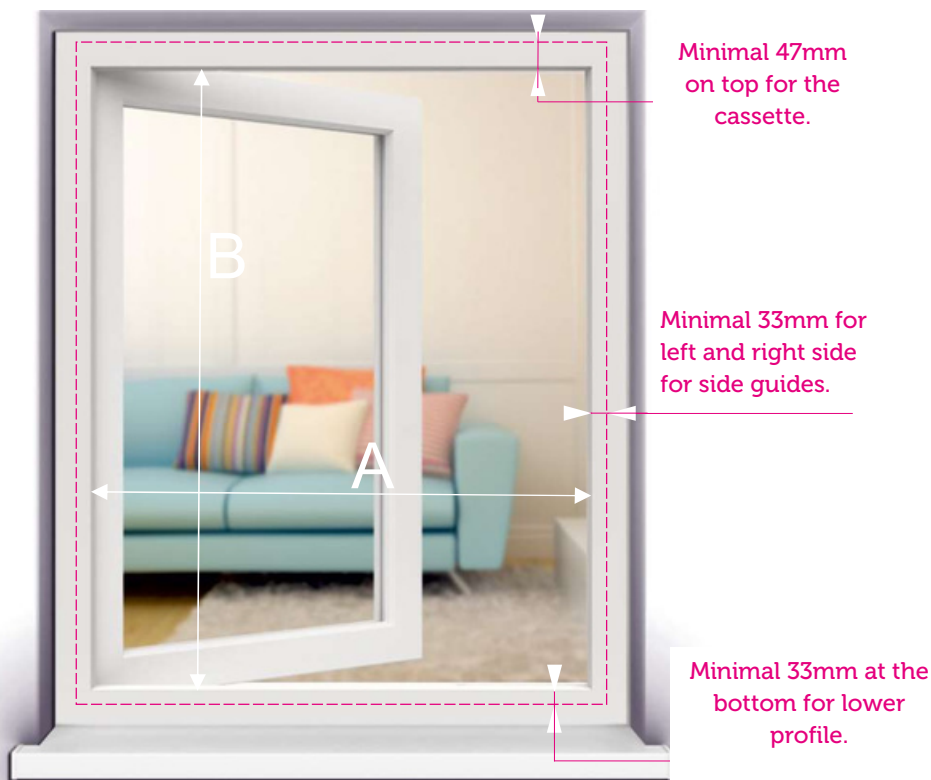

Open the window sash and measure the width of the outer window frame as shown on figure 1.

Add the width of the side guides 33mm on the left and 33mm on the right when entering the desired width. **Total 66mm.**

Example: A = 700 mm

$$700 + 66 = 766 \text{ mm}$$

When entering the desired height, add the height of the cassette of the blind 47mm at the top and approximately 33mm at the bottom for lower profile. **Total 80mm.**

Example: B = 1300 mm

$$1300 + 80 = 1380 \text{ mm.}$$

Note! Make sure you have enough space on the frame for the installation of the cassette, side guides and bottom profile.

