




Installation instruction

The package includes:

- 1) Mosquito net with magnets
- 2) Self-adhesive Velcro tape
- 3) Self-adhesive Velcro strips
- 4) Pins

Step 1: Clean the door frame so that it is clean and dry.

Step 2: Peel off the adhesive protection on the Velcro tape and stick the tape on top of the frame.

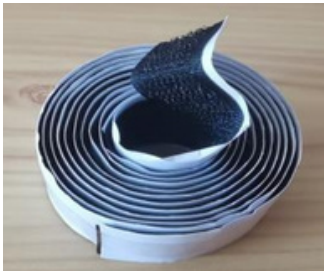

Step 3: Peel off the adhesive protection on the Velcro strips and stick on the left and right sides of the frame. .



Step 4: Attach the insect screen with Velcro strips and Velcro tape.



Step 5: If necessary, use pins to strengthen the connection.



From now on, your mosquito net is ready and you can start using it.