


Measurement instructions for rolled mosquito net for windows.
Mounted to the window frame, from external side.

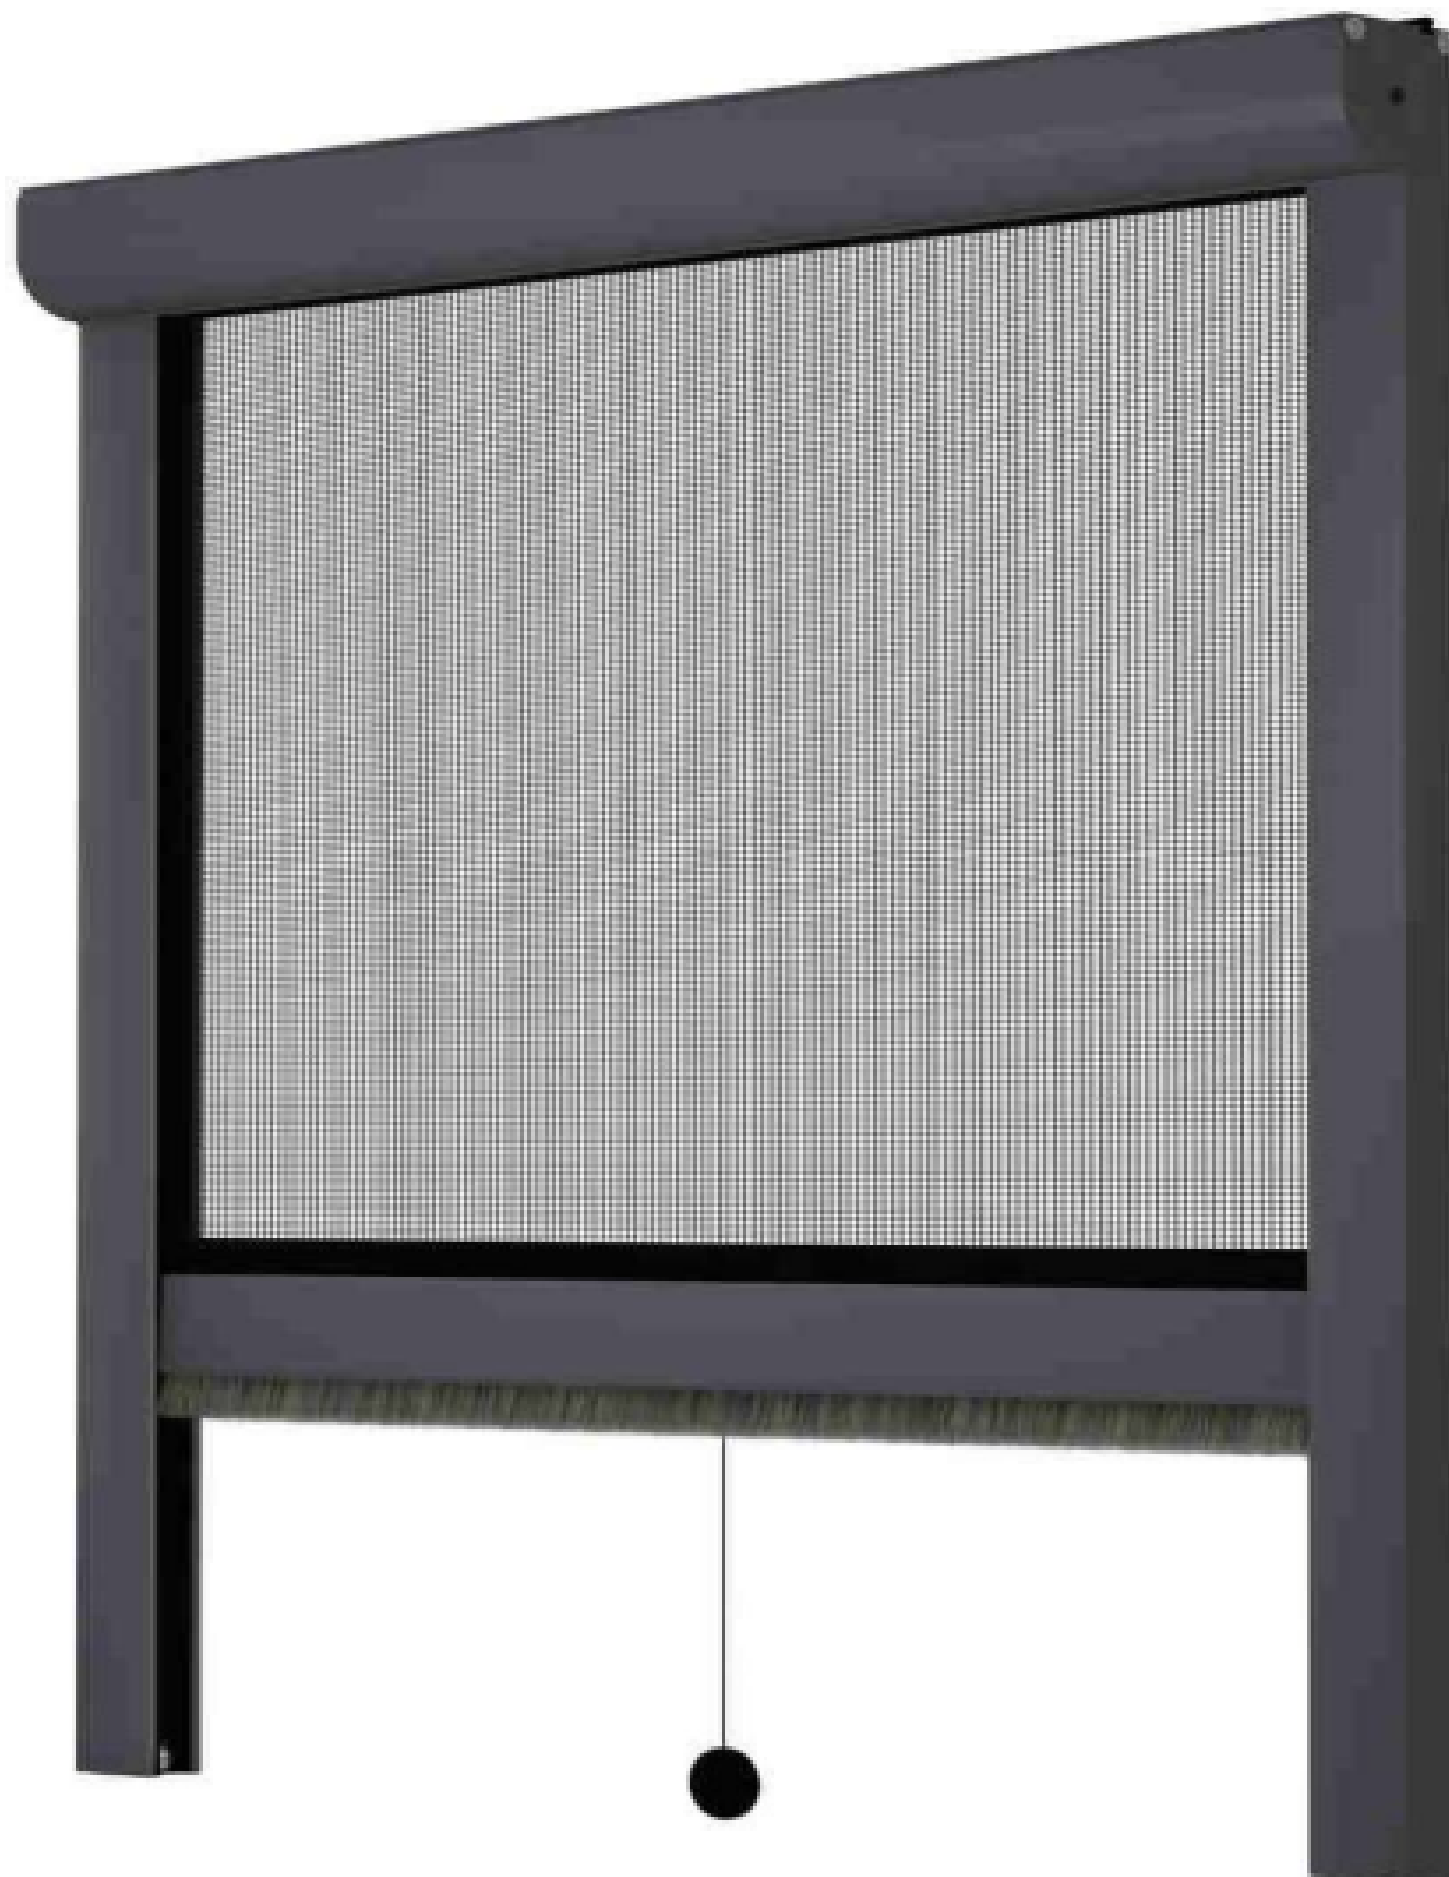

Dimensions are given in millimeters (mm).

Side guides of mosquito net have 33mm width.


Blind with net have 47mm of height. This should be taken during the measurement.

The width of the order is width of the outside width of the mosquito net and the guides.

The height of the order is height of entire mosquito net, including top blind.

if the window sash is fitted with a drip cap that extends outwards, it is impossible to install mosquito net.

Fig.1.

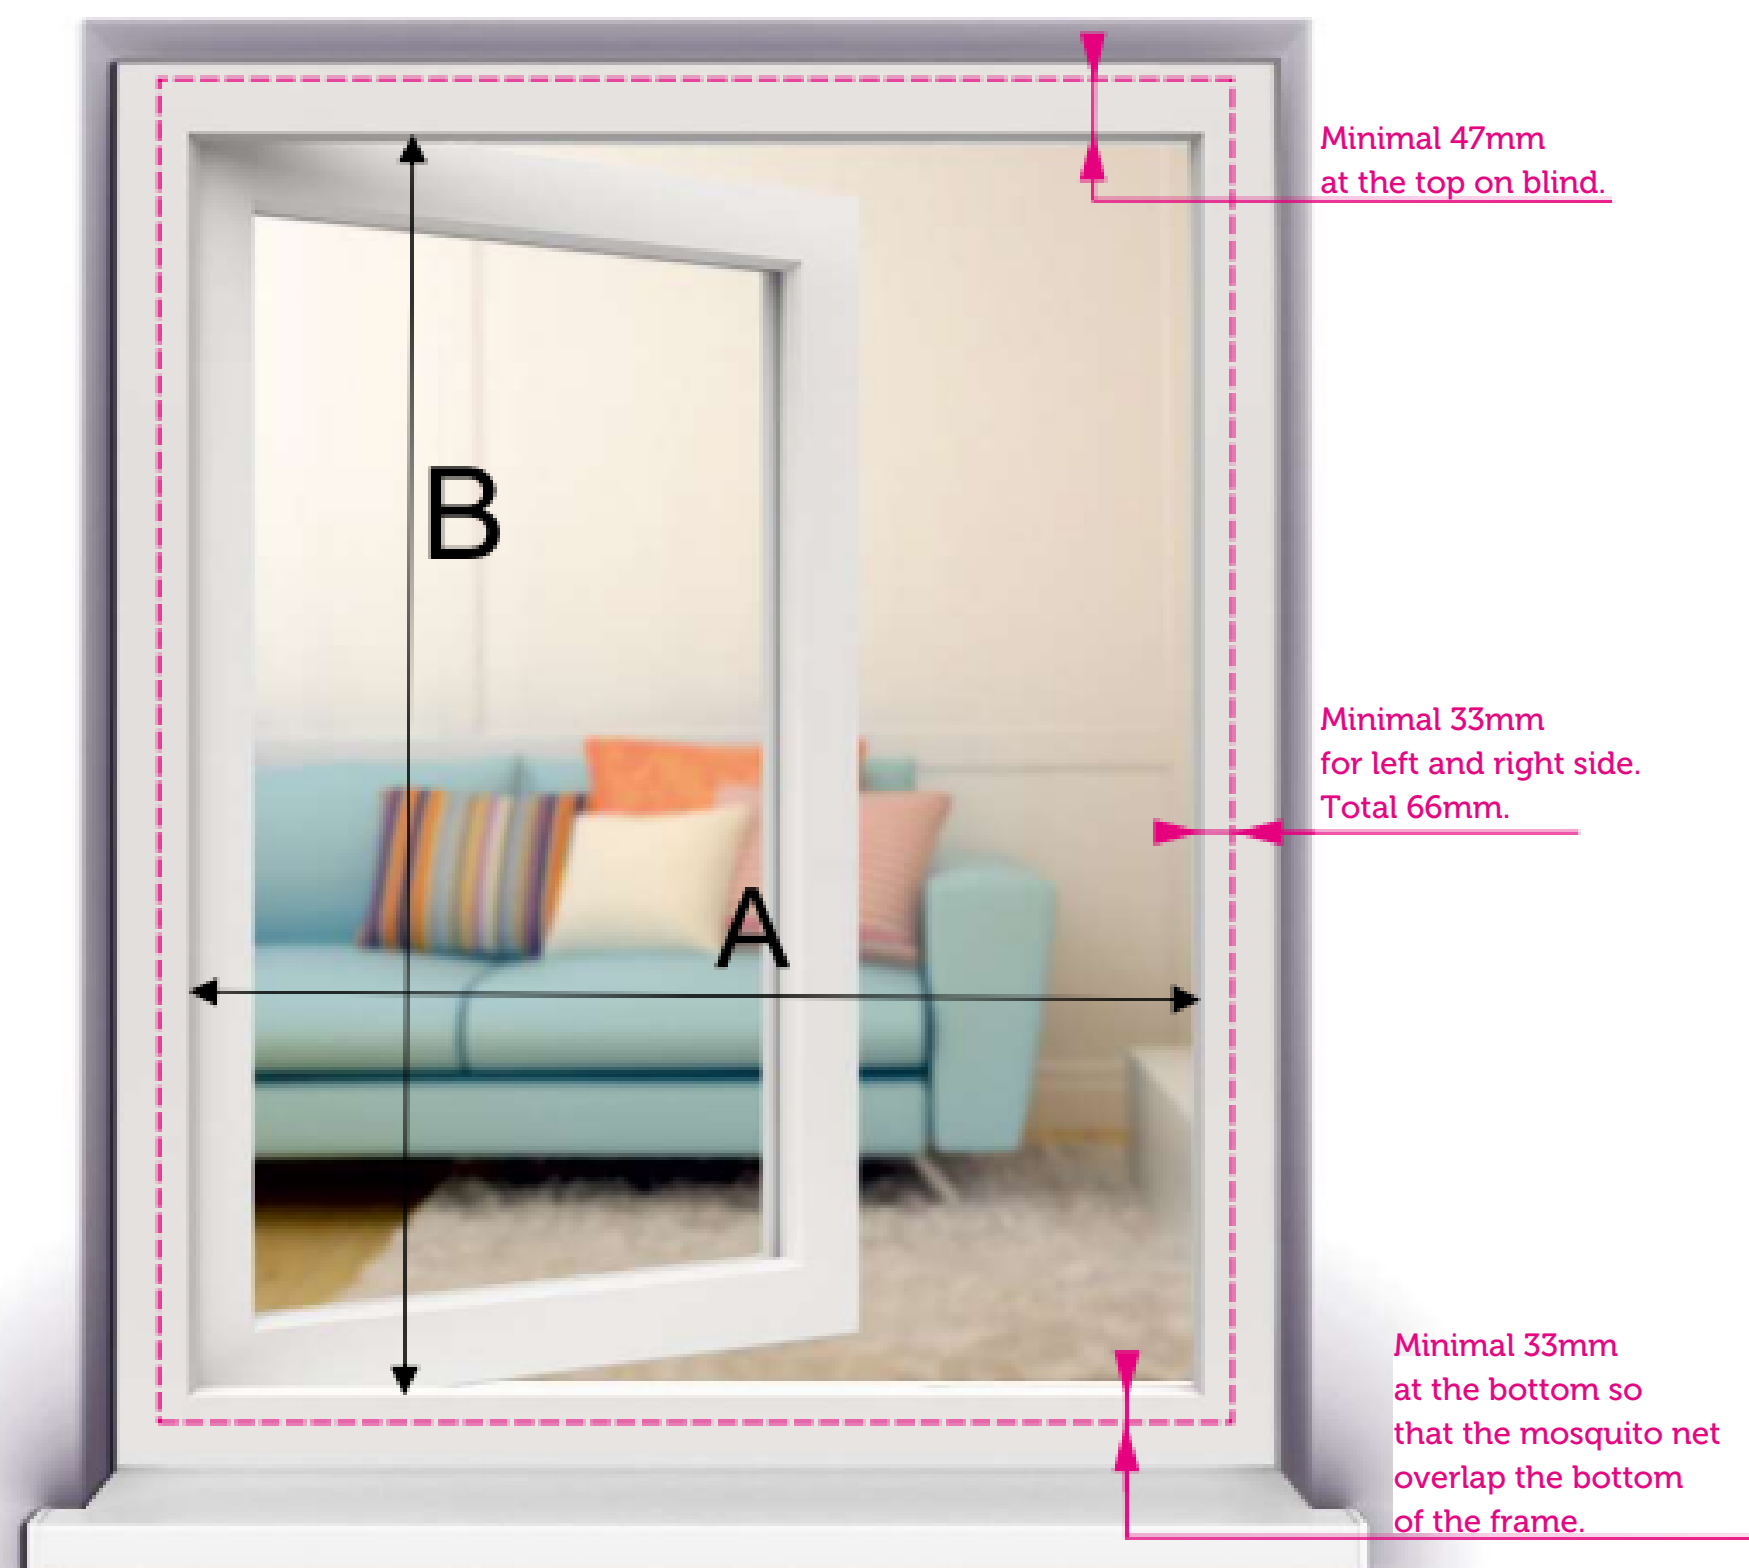

Open the window sash and measure the width of the outer window frame as shown on figure 1.

Add the width of the mosquito side guides 33mm on the left and 33mm on the right when entering the desired width.

Total 66mm.

Example: A=700mm

$700 + 66 = 766\text{mm.}$

When entering the desired height, add the height of the mosquito blind 47mm at the top and approximately 33mm at the bottom to allow the mosquito overlap the frame.

Total 80mm.

Example: B = 1200 mm

$1200 + 80 = 1280\text{ mm.}$