





Measuring instruction for non-invasive (basic) Roman blinds mounted on a window frame.

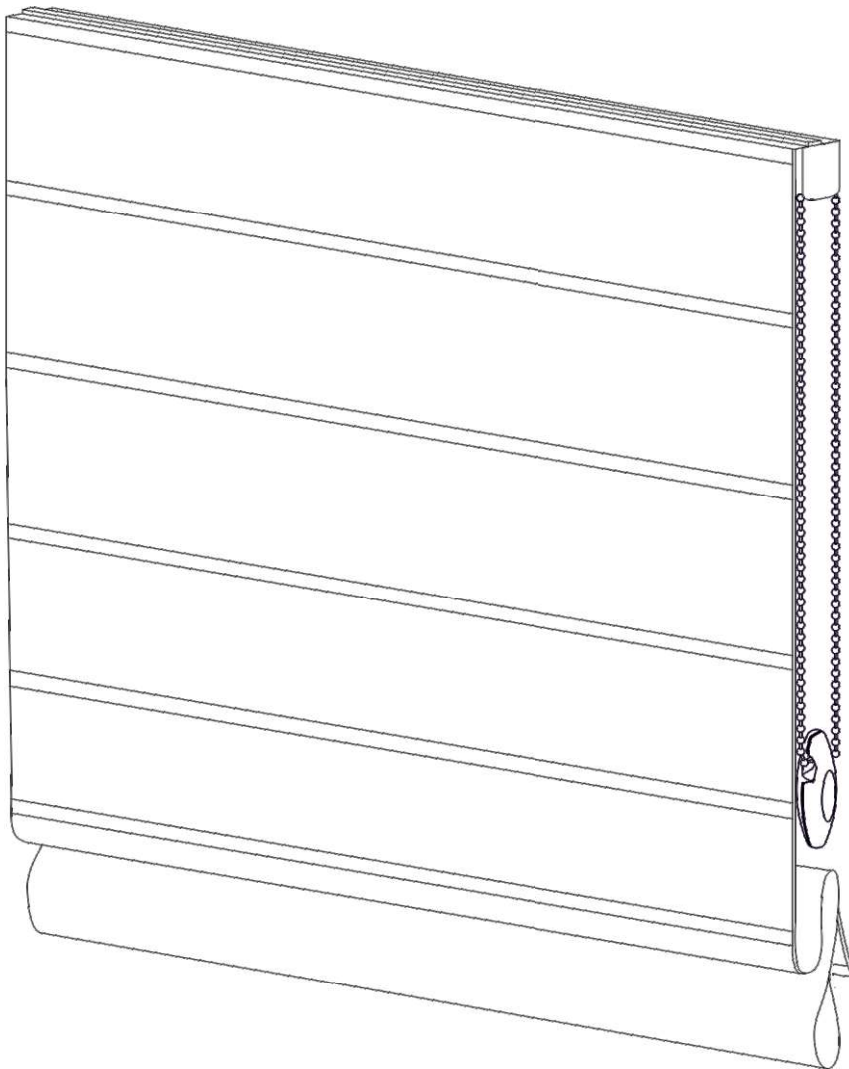

Choose window

Measure

Install

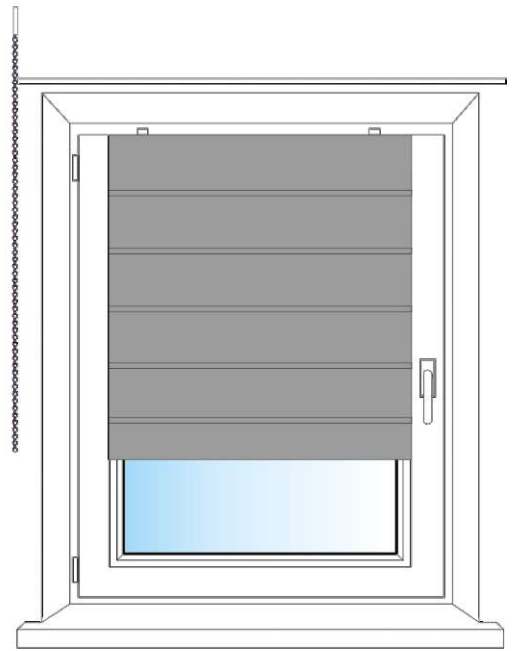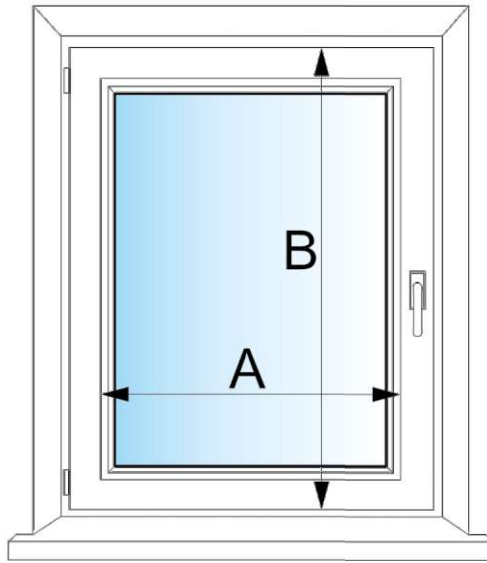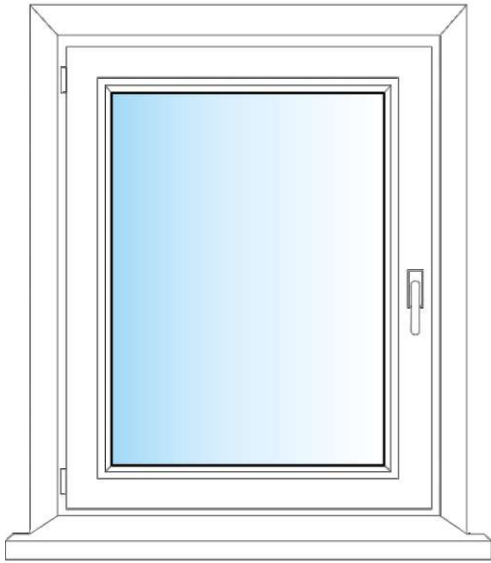


The dimensions are provided in millimeters.




Give width and height of the fabric.

The horizontal stitchings are at interspace of 200 mm from the top (20 cm).


Pic. 1

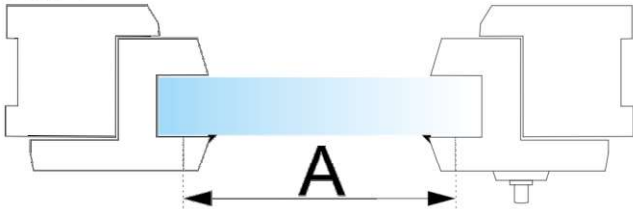

Pic. 2

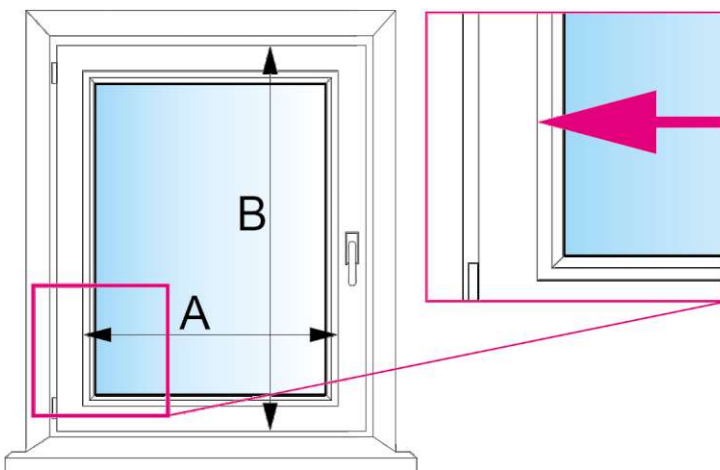

Pic. 3

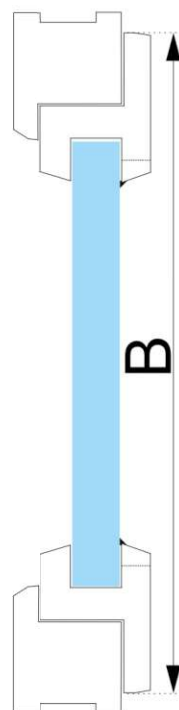

By measuring the width check the distance between the outer edges of the frame around the glass. Pic. 1,2.

By measuring the high check height of window sash. Pic.3

When entering the desired dimensions , enter the values of your measurements in the configurator.

Width = A

Height = B