



Measurement instruction for No Drill Pleated Blind




Select the window

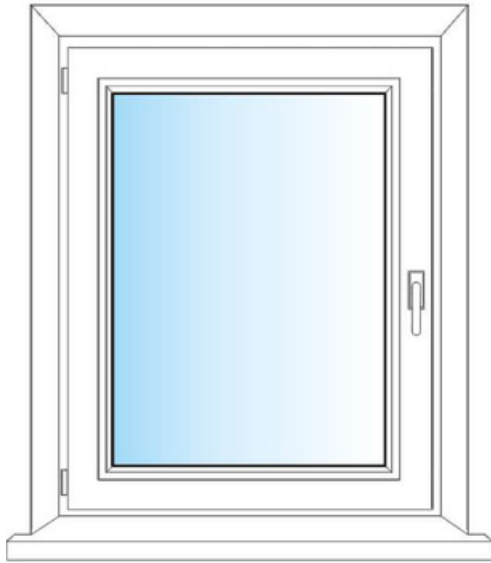

Measure the window

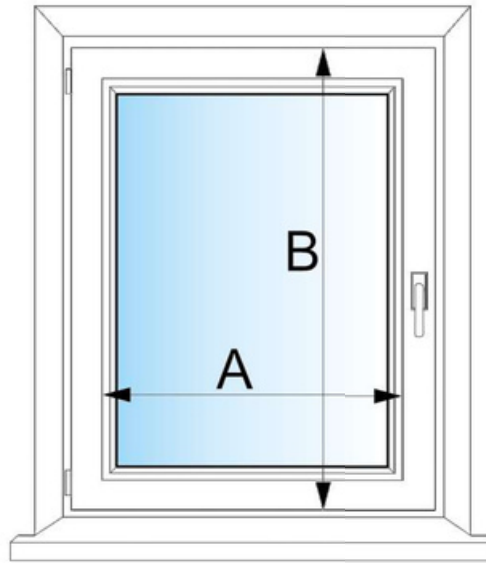


Assembly on the window

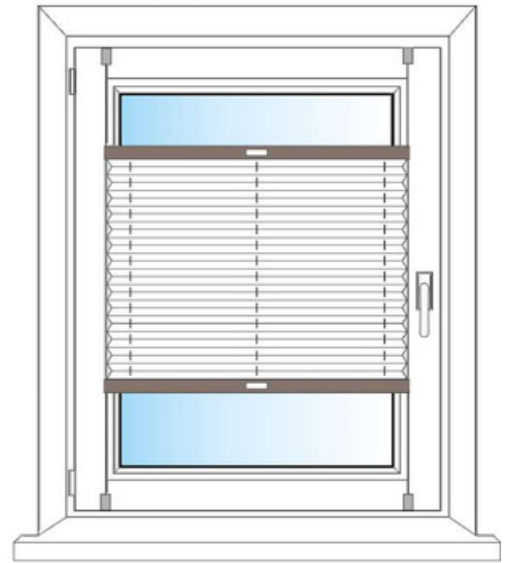

Dimensions are provided in millimeters (mm).

Fig. 1

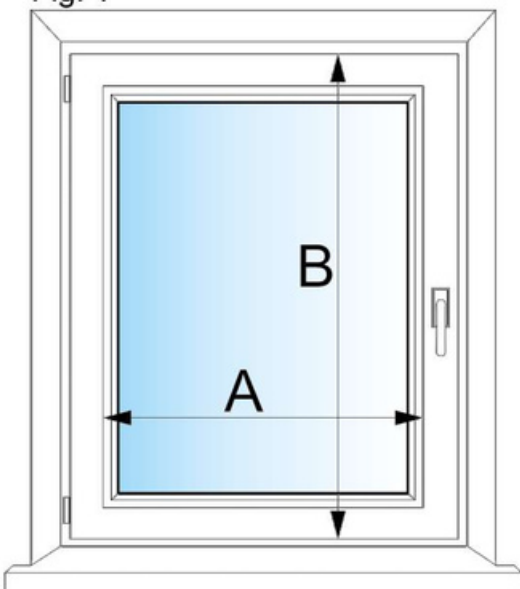

Measure width A and height B.
In the finished product, width A
is the width of the pleated blind fabric,
height B is the height of the blind fabric.
Fig. 1

When placing your order, you can
choose the type of mounting hangers:
hangers mounted on the window frame
or glued to the window frame.

Fig. 2

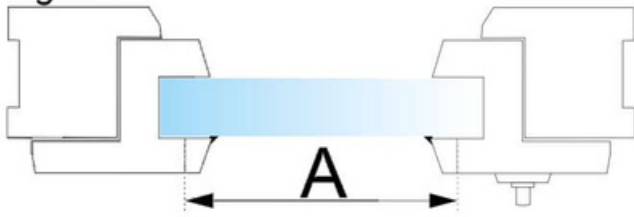


Fig. 3


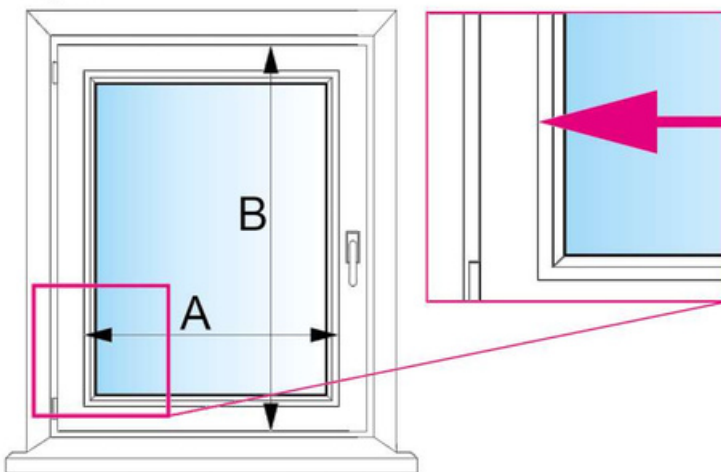


Fig. 4

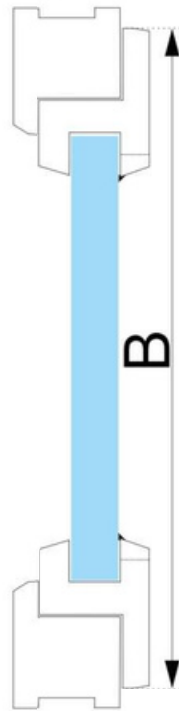

When measuring the width, check the distance between the outer edges of the frame around the glass. Figure 2,3

When measuring the height, check the height of the window sash. Fig. 4

Provide your dimensions in the configurator:

Width = A

Height = B