



Measuring instruction for 50mm wooden blinds installed on window (window frame)

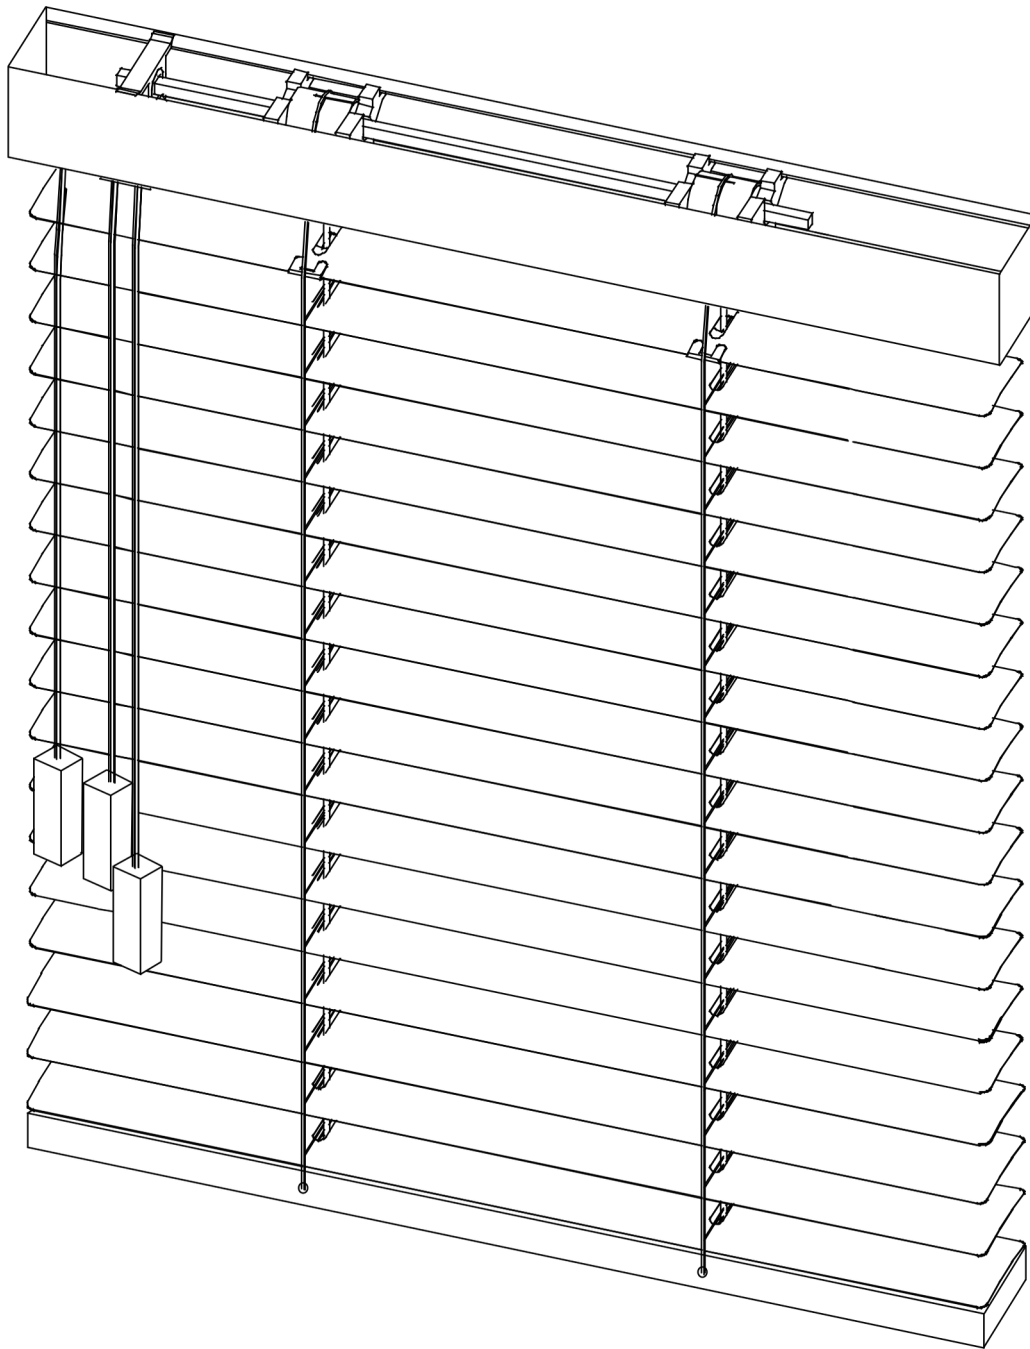

Select the window

Install

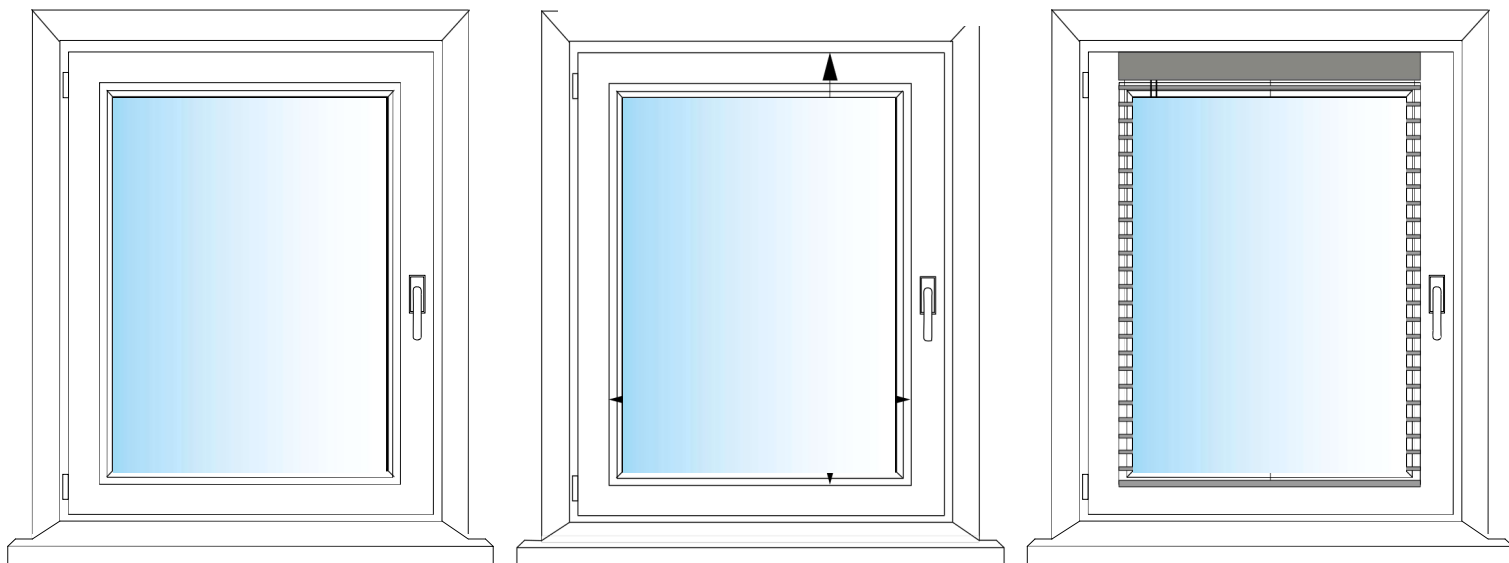

Measurements are given in centimetres (cm).



You specify the width and the height of the whole wooden blind.

Pay particular attention to the fact that when the blind is raised, a set of folded wooden slats will take up approximately 10% of its height plus 7cm.

Fig. 1

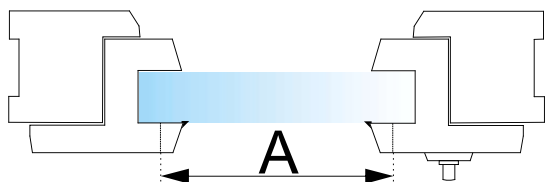


Fig. 2


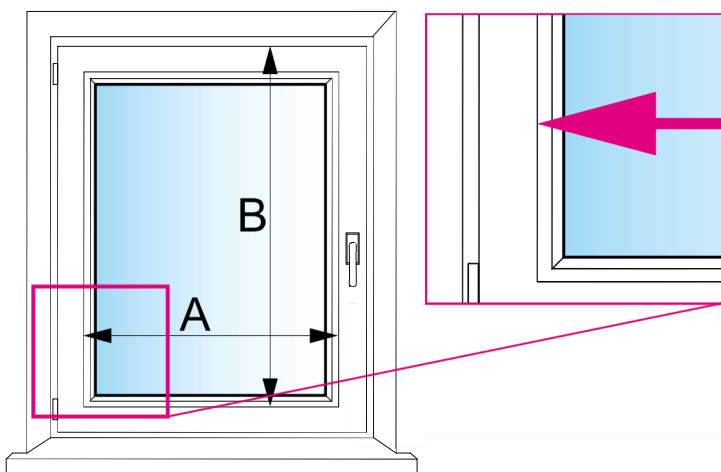


Fig. 3

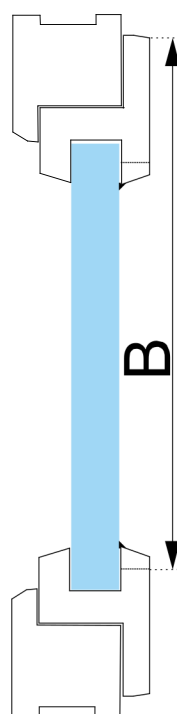

When measuring the width, check the distance between the outer edges of the glazing bead. Fig. 1, 2

When measuring the height, check the dimension between the top edge of the window sash and the bottom edge of the glazing bead. Fig. 3

If the window has a vent, the height is measured as if the bottom edge of the vent was the beginning of the window height.

When specifying the desired dimensions, enter your measurements in the configurator:

Width = A
Height = B