

Installation instructions for No Drill Pleated Blind



The set includes the following mounting elements kits:

Option 1. A set of handles for hanging on the window sash.
Windows that open.



Option 2. A set of handles to stick on the window sash.
Windows that do not open (fixed window)



Stage 1.

Unwind the strings of the blinds and follow the illustrations below.

Fig. 1, 2, 3.

Do not tear the paper protection from the blinds, you will do it at the end of the assembly.

Option I

Fig. 1



Fig. 2


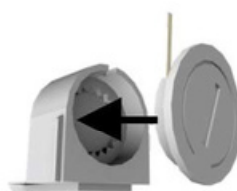


Fig. 3

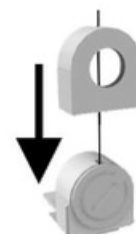

Option II

Fig. 1



Fig. 2




Fig. 3



Stage 2

Mount the mounting handles. Figure 4.5.6.

Fig. 4

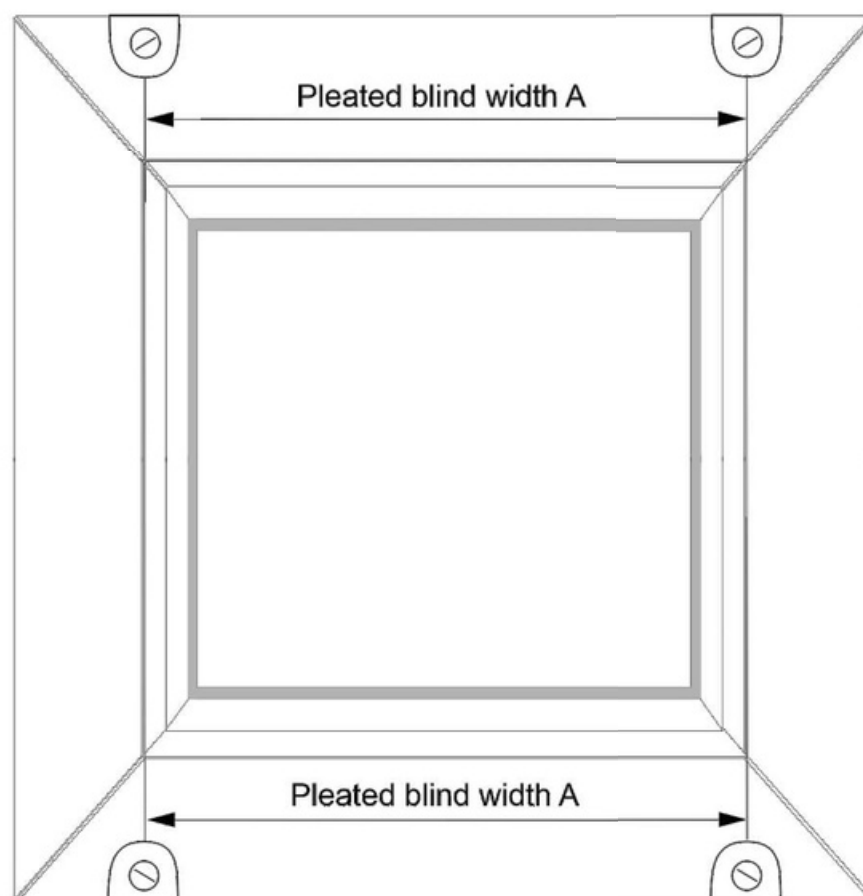

For the version hung on the window frame, suspend the handles and tighten it on the window sash. For the version fixed on the window frame stick the handles to the window frame. For the fixed handles to adhere well to the window frame surface, degrease the surface with a cloth and then leave the handles glued for 12-24 hours. Pleat strings should not be too tight.

Fig. 5



Fig. 6



Stage 3

Adjust the string tension. Fig 7

If the pleated blind drops automatically, increase the tension of the strings. To do this, use a flat screwdriver to tighten the strings. Turn only to the left (counterclockwise).

Fig. 7



Stage 4

Install the handles for handling the blind by locking the handles in.

Fig. 8

Remove the paper cover.

Fig. 8

