





## Measuring instructions for fabric blinds mounted to the wall

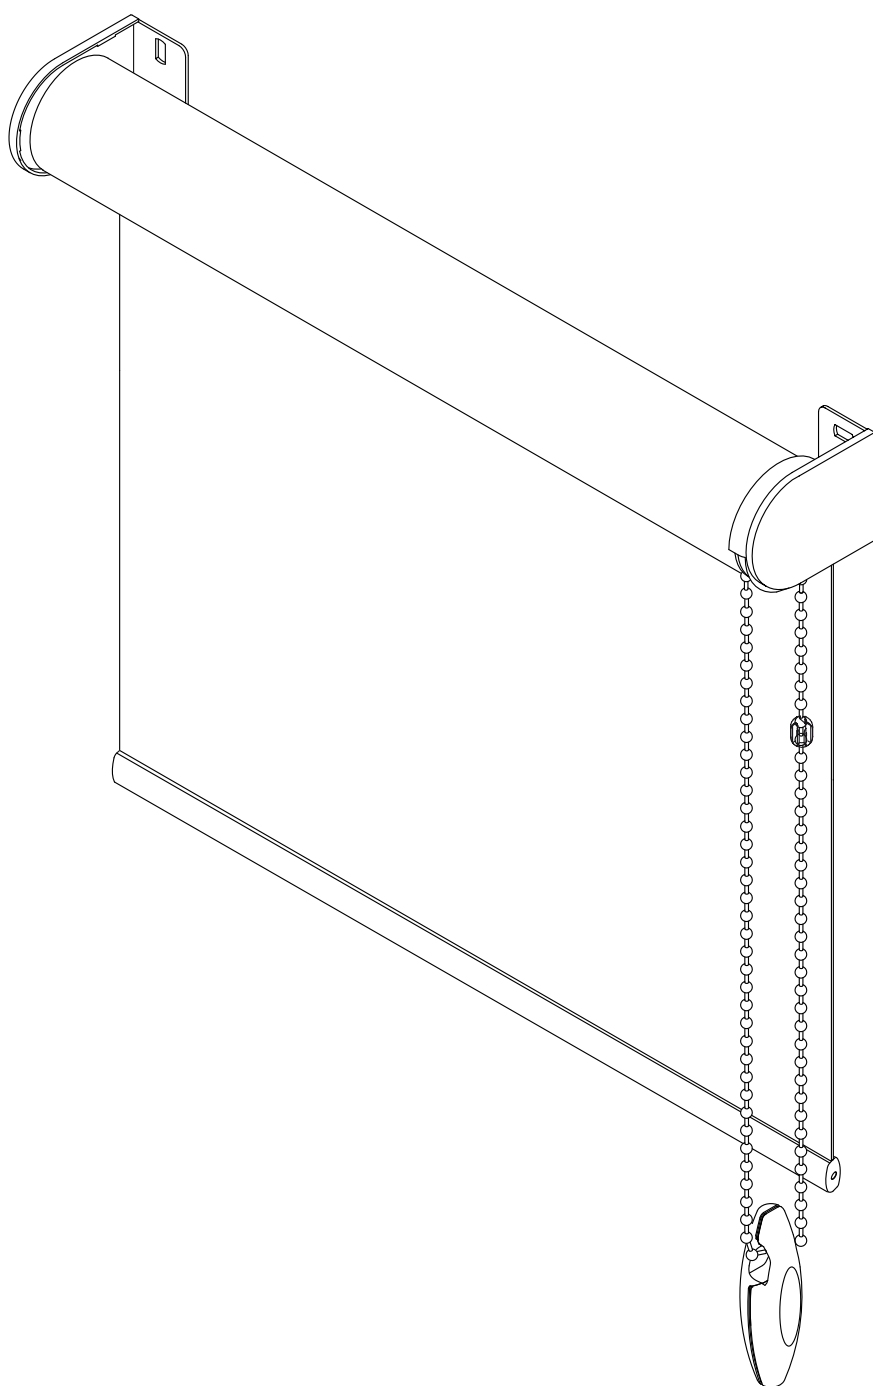

Select a window

Measure

Install

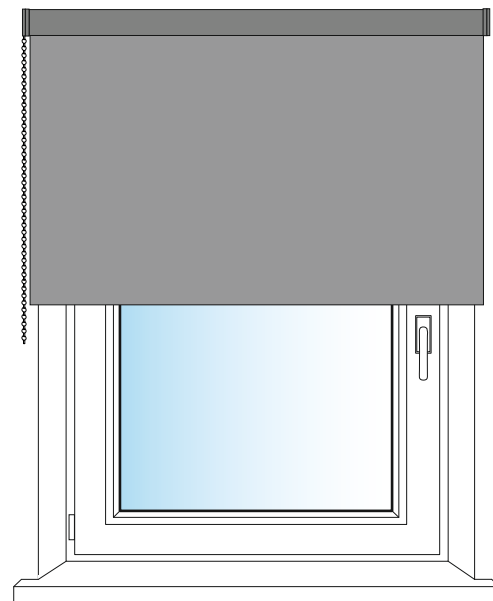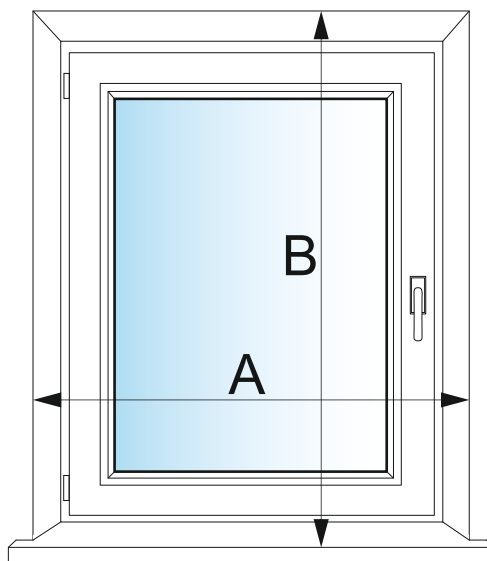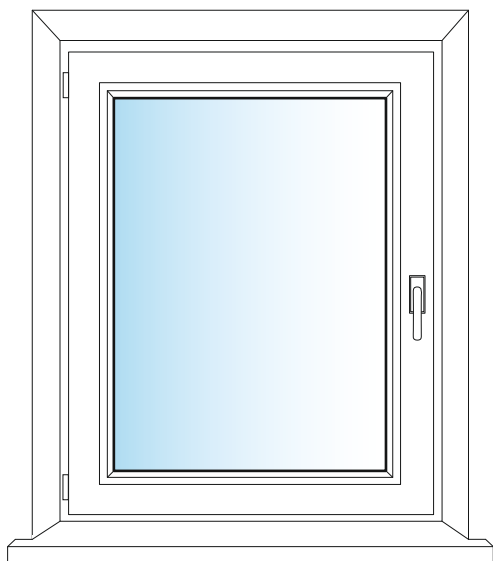


Dimensions are provided in millimetres (mm).

Enter the width of the fabric and the height of the blind.

The roller blind will be 43 mm wider.

This is the total width of the blind with the control mechanism and catches.

Fig. 1

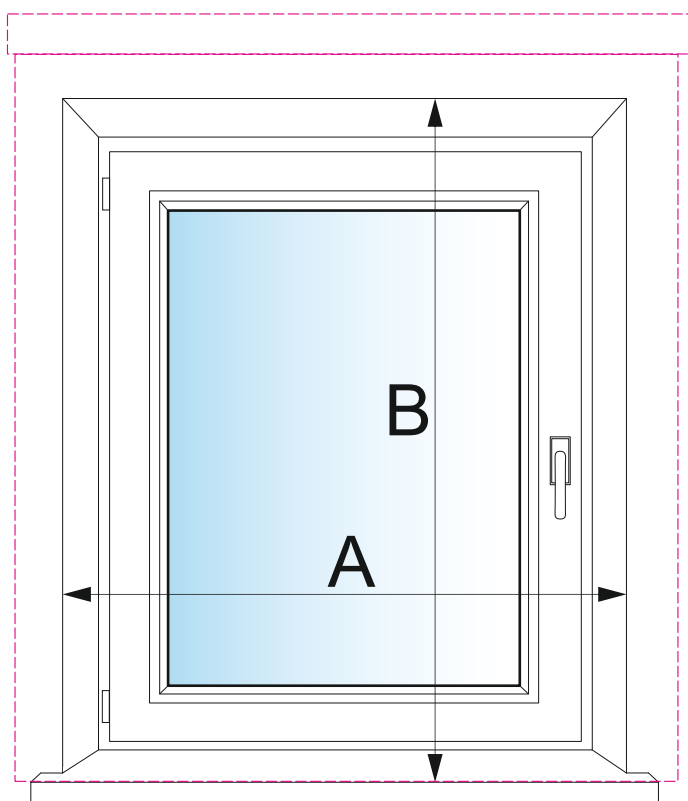

Measure the width and height of the window recess. Fig. 1

Provide the desired width, add the surplus of fabric overlapping the wall on the right and left at your personal preference (e.g. 100 mm)

**Example: A = 1250 mm**

**1250 + 100 = 1350 mm.**

Specifying the desired height, add surplus depending on the height at which you want to mount the blind (e.g. 200 mm.)

**Example: B = 1500 mm**

**1500 + 200 = 1700 mm.**