





Measurement instructions for Day and Night roller blinds mounted on a window frame

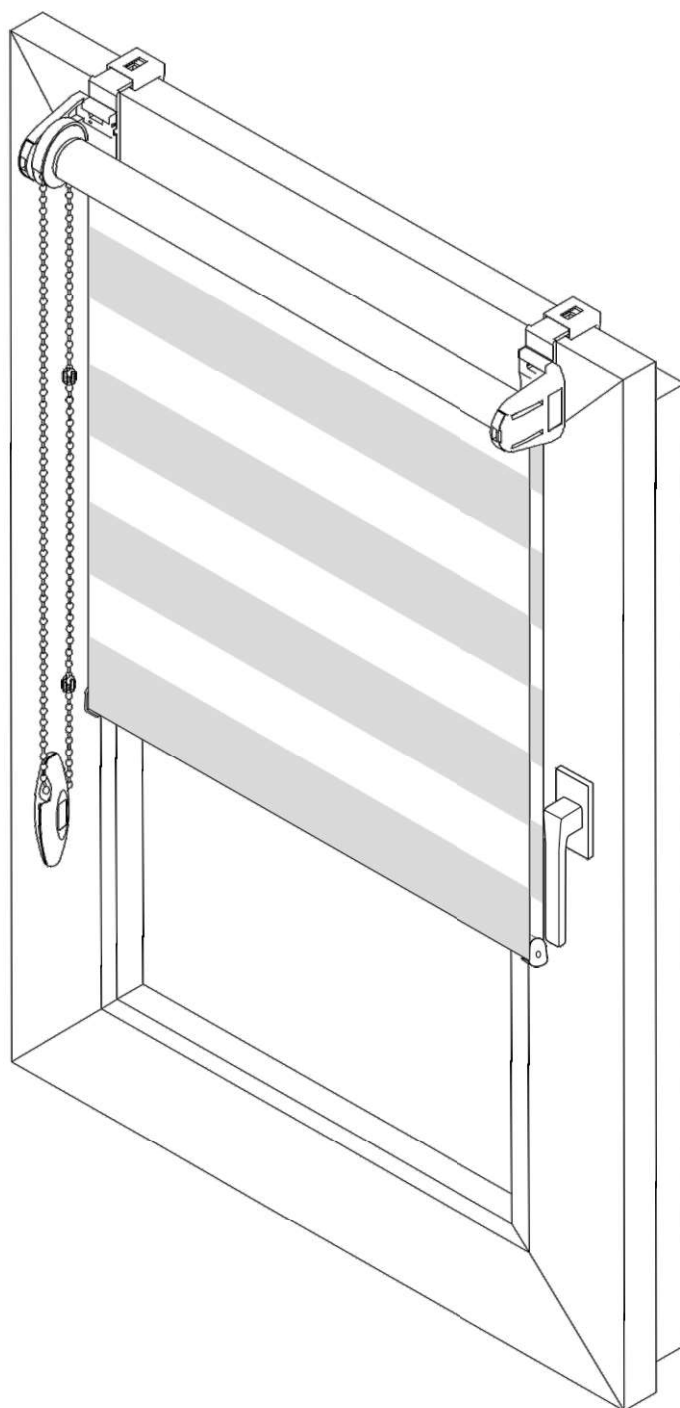

Select the window

Take the measurement

Mount the blind

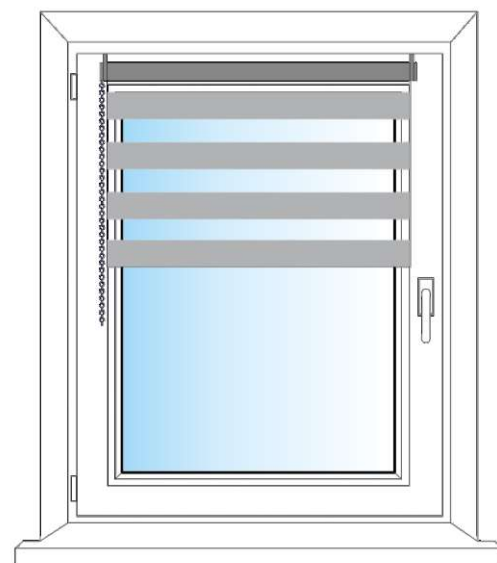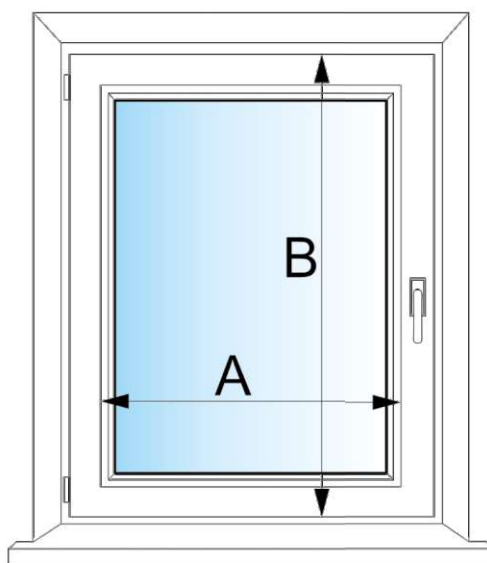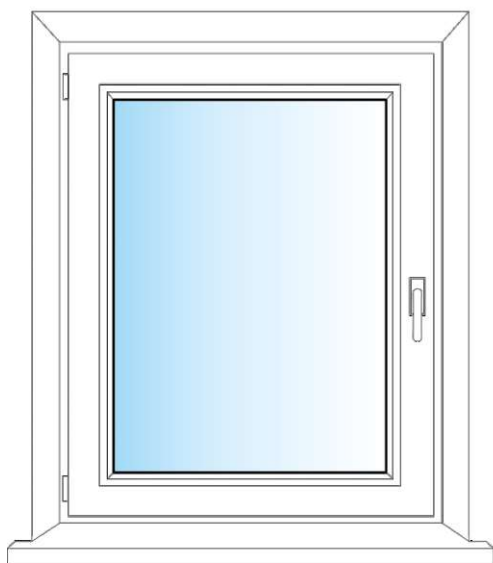

Dimensions are provided in millimeters (mm).


 Enter the width of the fabric and the height of the blind. The supplied roller blind will be 45 mm wider as it takes so much width to the control mechanism and the handles.

Fig. 1

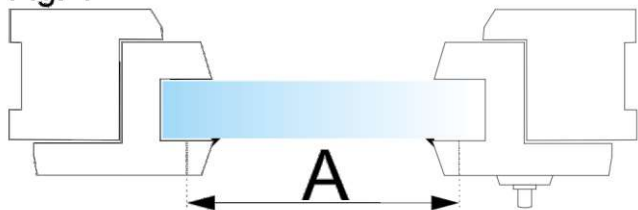


Fig. 2


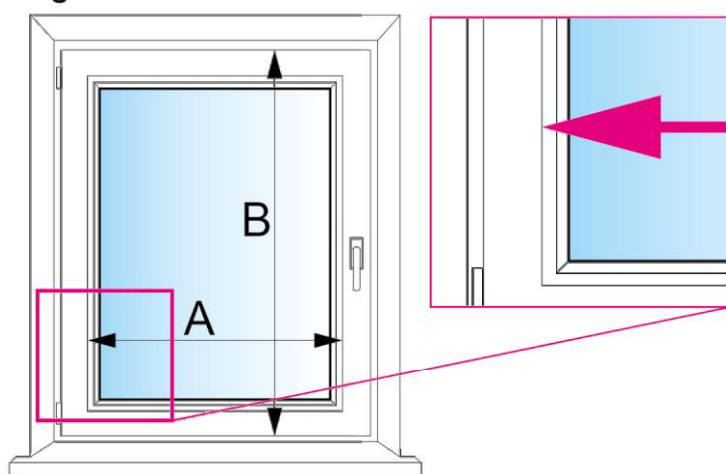


Fig. 3

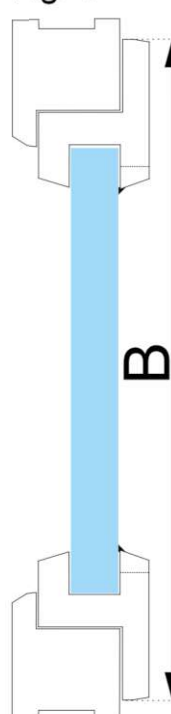

When measuring the width, check the distance between the outer edges of the frame around the glass. Fig. 1, 2

When measuring the height, provide the height of the window sash. Fig. 3

Providing the desired dimensions, enter the values of your measurements in the configurator:

Width = A

Height = B